


## Connector Joining Wire Harness and Wire Harness

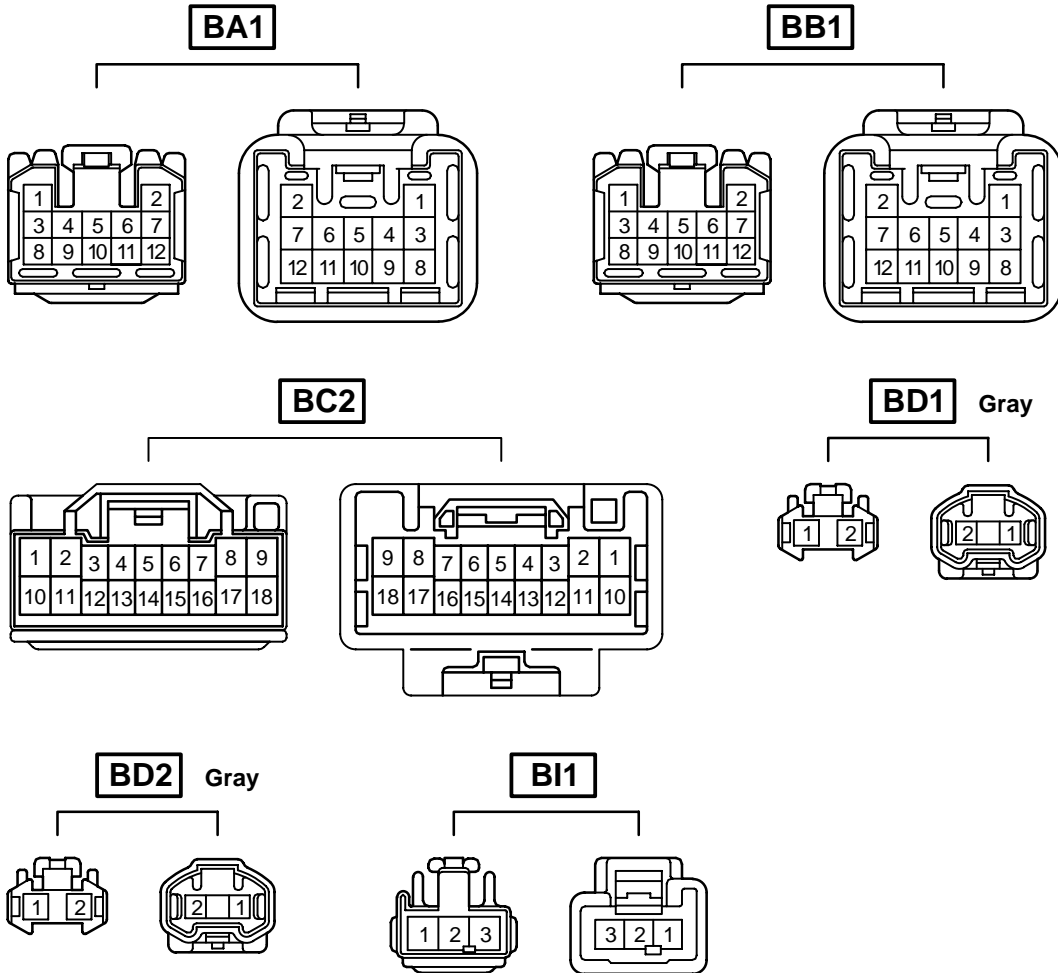

Code	Joining Wire Harness and Wire Harness (Connector Location)
BA1	Rear Door No.2 Wire and Floor No.2 Wire (Left Center Pillar)
BB1	Rear Door No.1 Wire and Floor Wire (Right Center Pillar)
BC2	Floor No.2 Wire and Floor Wire (Under the Right Rear Cushion)
BD1	Floor No.2 Wire and Luggage Room Wire (Near the License Plate Light)
BD2	
BI1	Sensor Wire and Floor No.2 Wire (Lower Back Panel LH)