


Connector Joining Wire Harness and Wire Harness

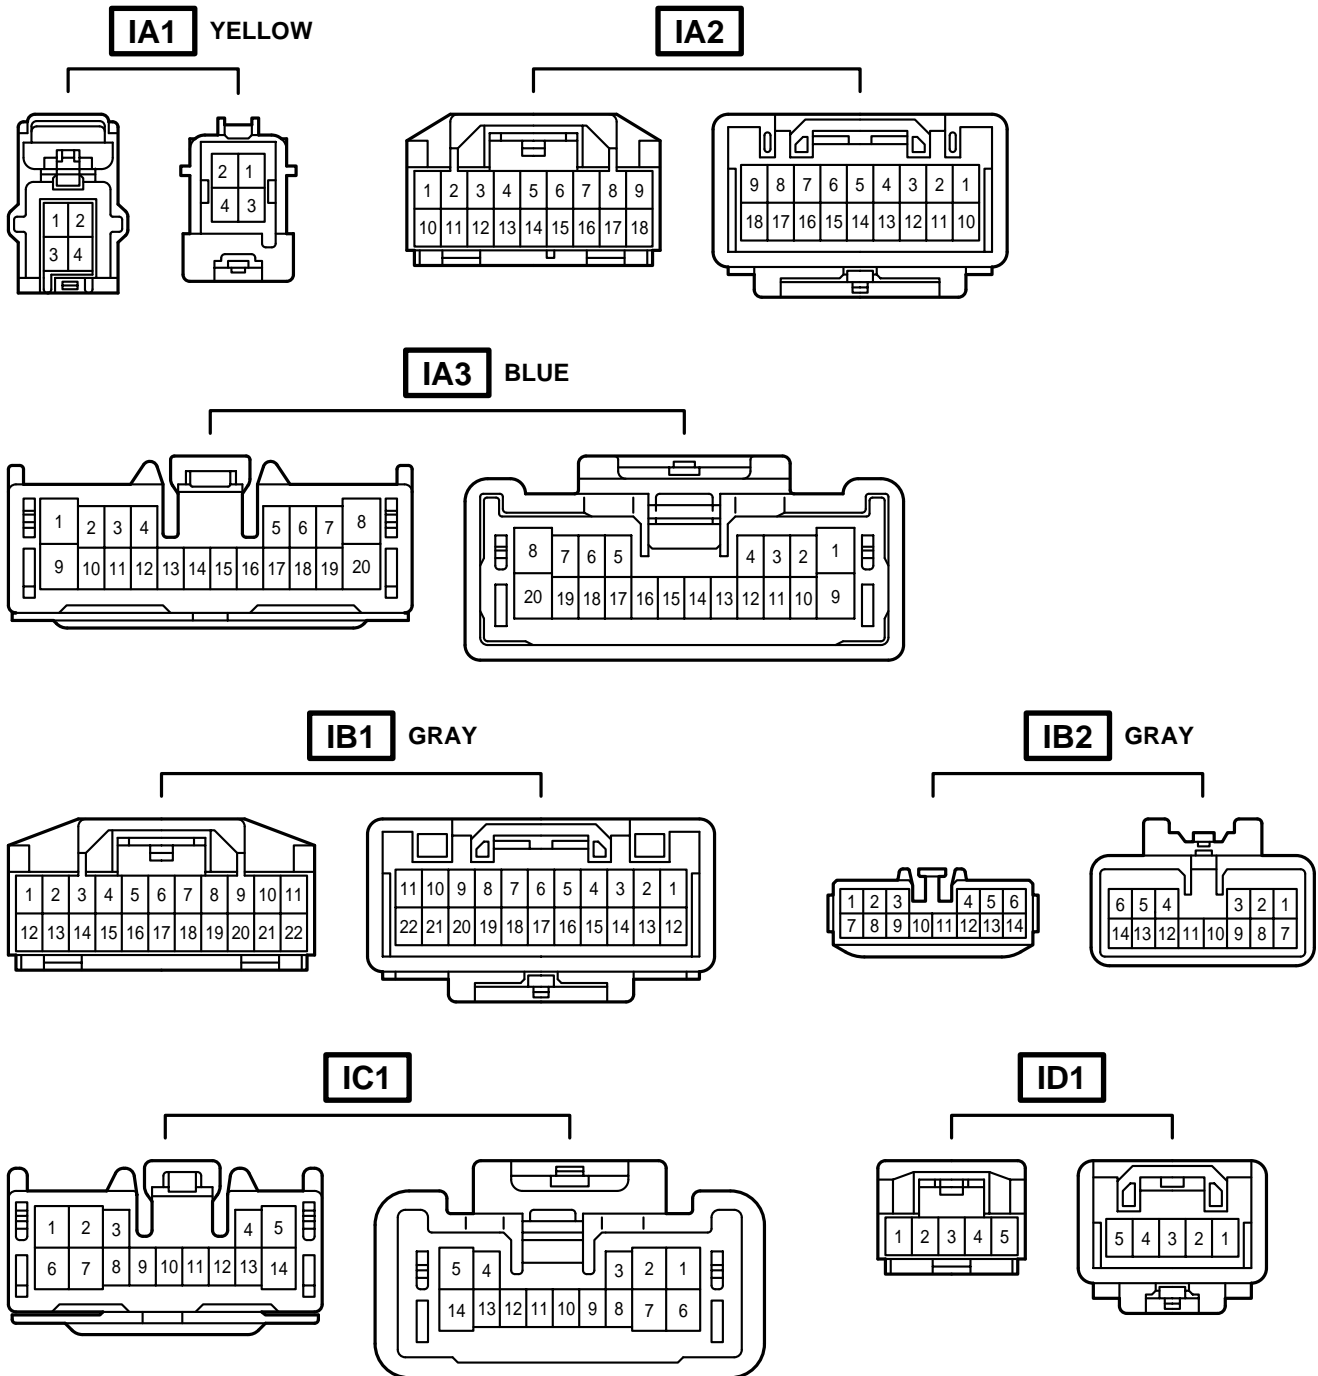

Code	Joining Wire Harness and Wire Harness (Connector Location)
IA1	Instrument Panel Wire and Engine Room Main Wire (Near the Driver Side J/B)
IA2	
IA3	
IB1	Instrument Panel Wire and Floor No.2 Wire (Near the Driver Side J/B)
IB2	
IC1	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
ID1	Instrument Panel No.2 Wire and Instrument Panel Wire (Left Side of the Instrument Panel)