



REAR FLOOR PAN (ASSY) REPLACEMENT

1. REMOVE BODY LOWER BACK PANEL ([See page BP-17](#))
2. REMOVE REAR FLOOR PAN

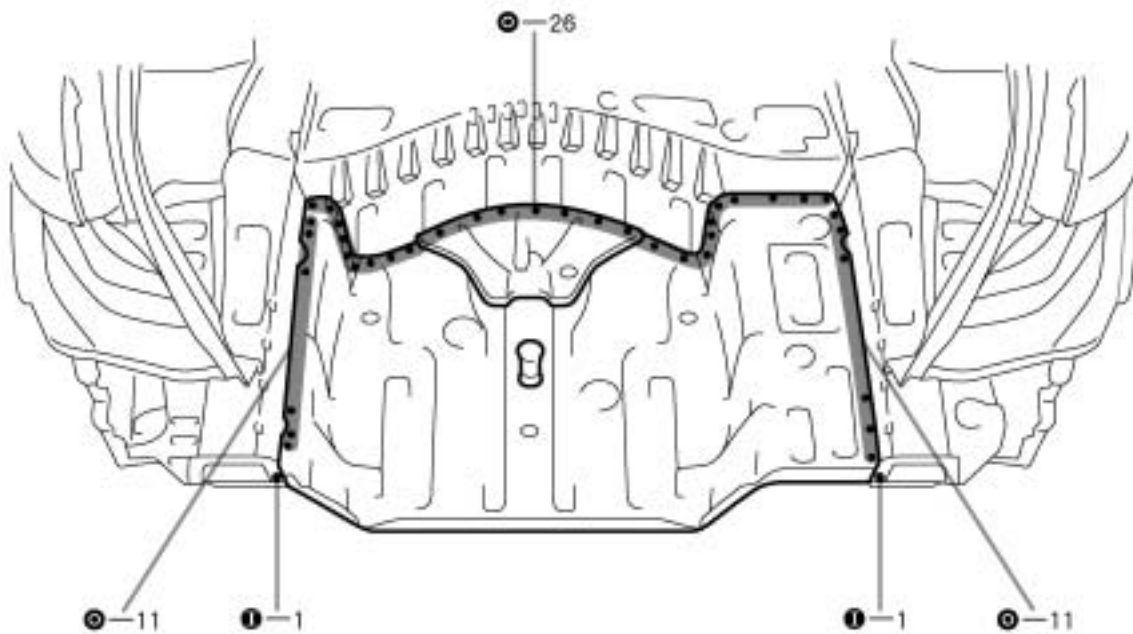

3. INSTALL REAR FLOOR PAN

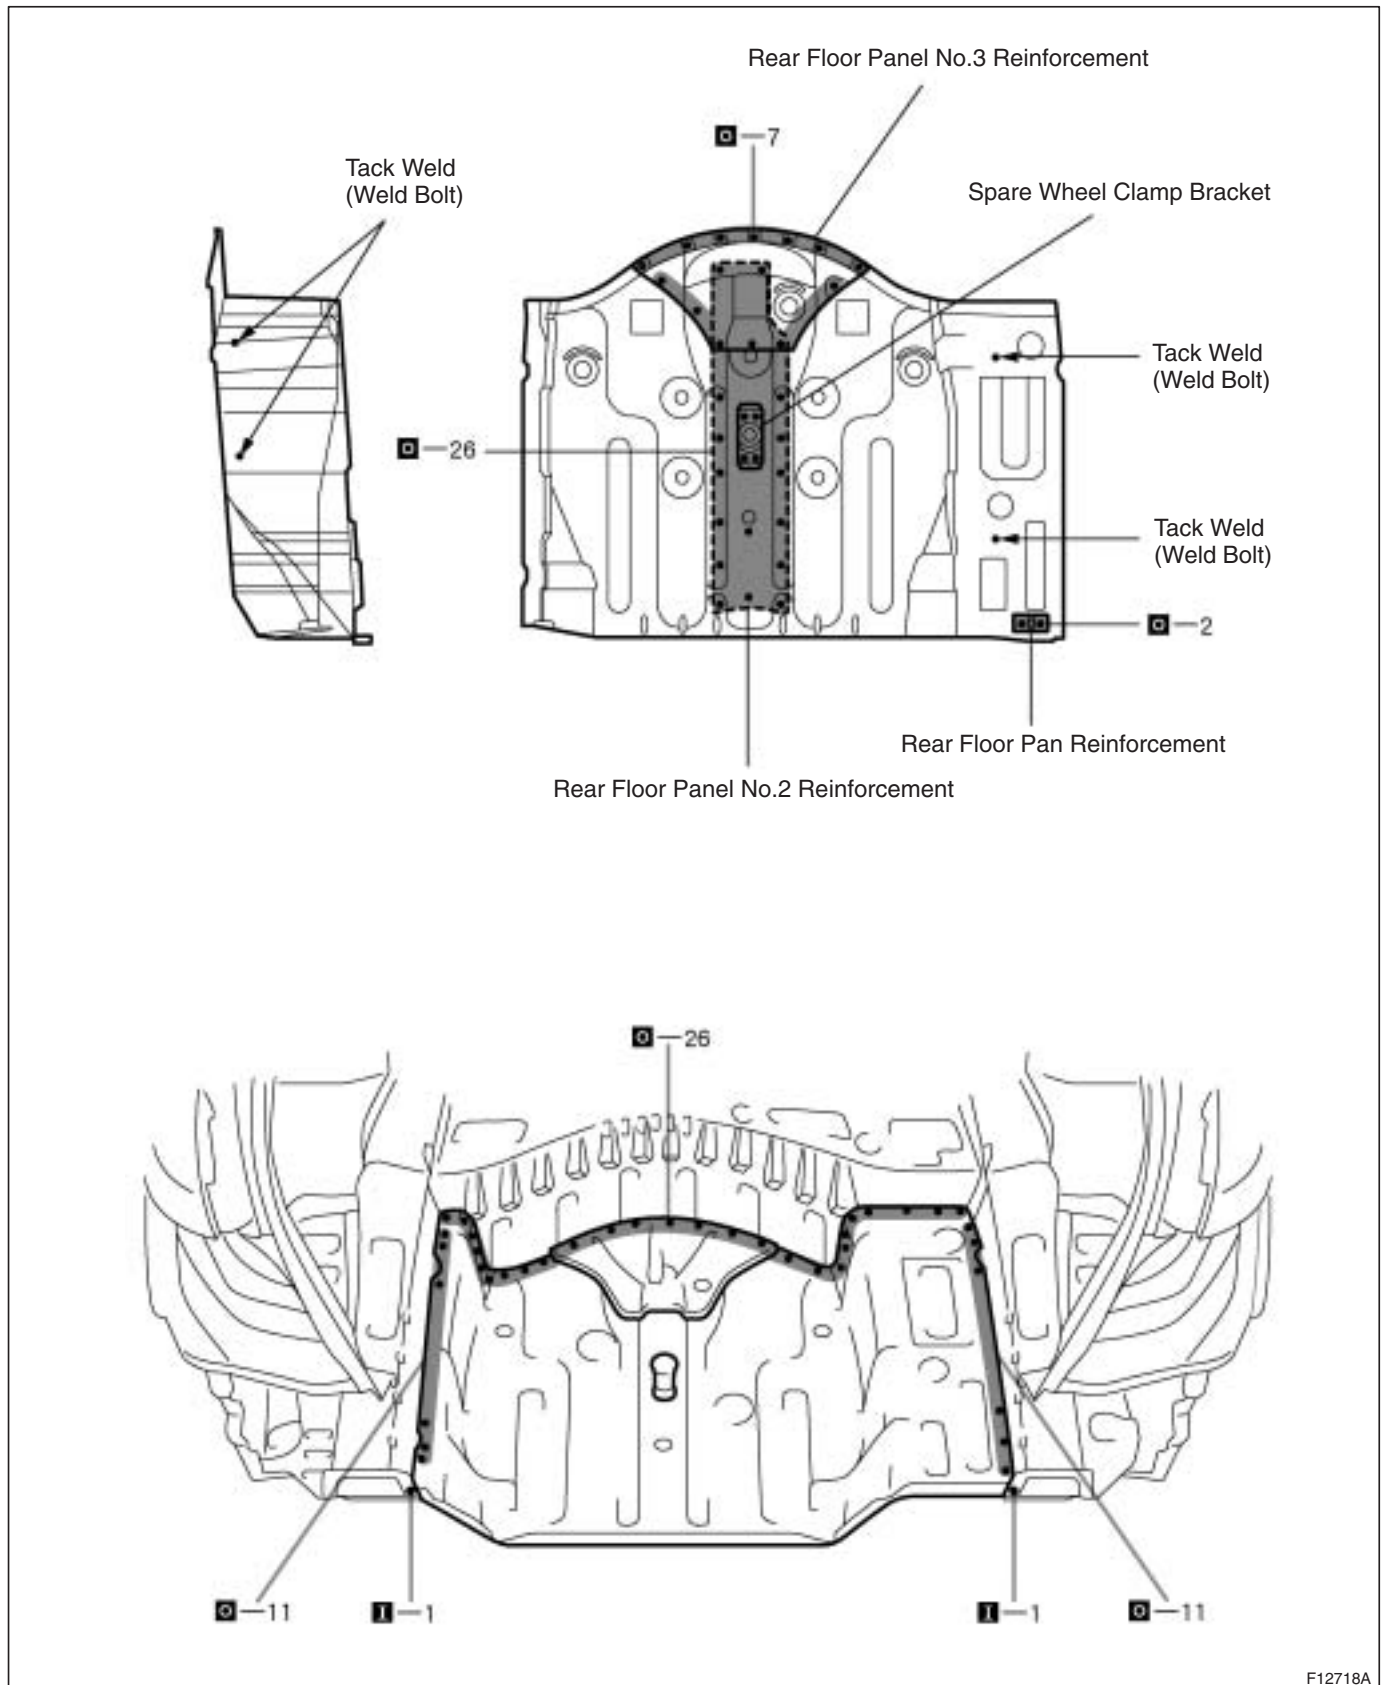

4. INSTALL BODY LOWER BACK PANEL ([See page BP-17](#))
5. APPLYING SEALER TO THE REAR LUGGAGE COMPARTMENT ([See page PC-1](#))
6. APPLYING UNDER COATING ([See page PC-6](#))
7. INSTALL SILENCE SHEET
8. APPLYING ANTI-RUST AGENT
 - (a) After applying the top coat layer, apply the anti-rust agent to the inside of the necked section structural weld spots.