


Position of Parts in Engine Compartment

[LHD : 2JZ-GE]

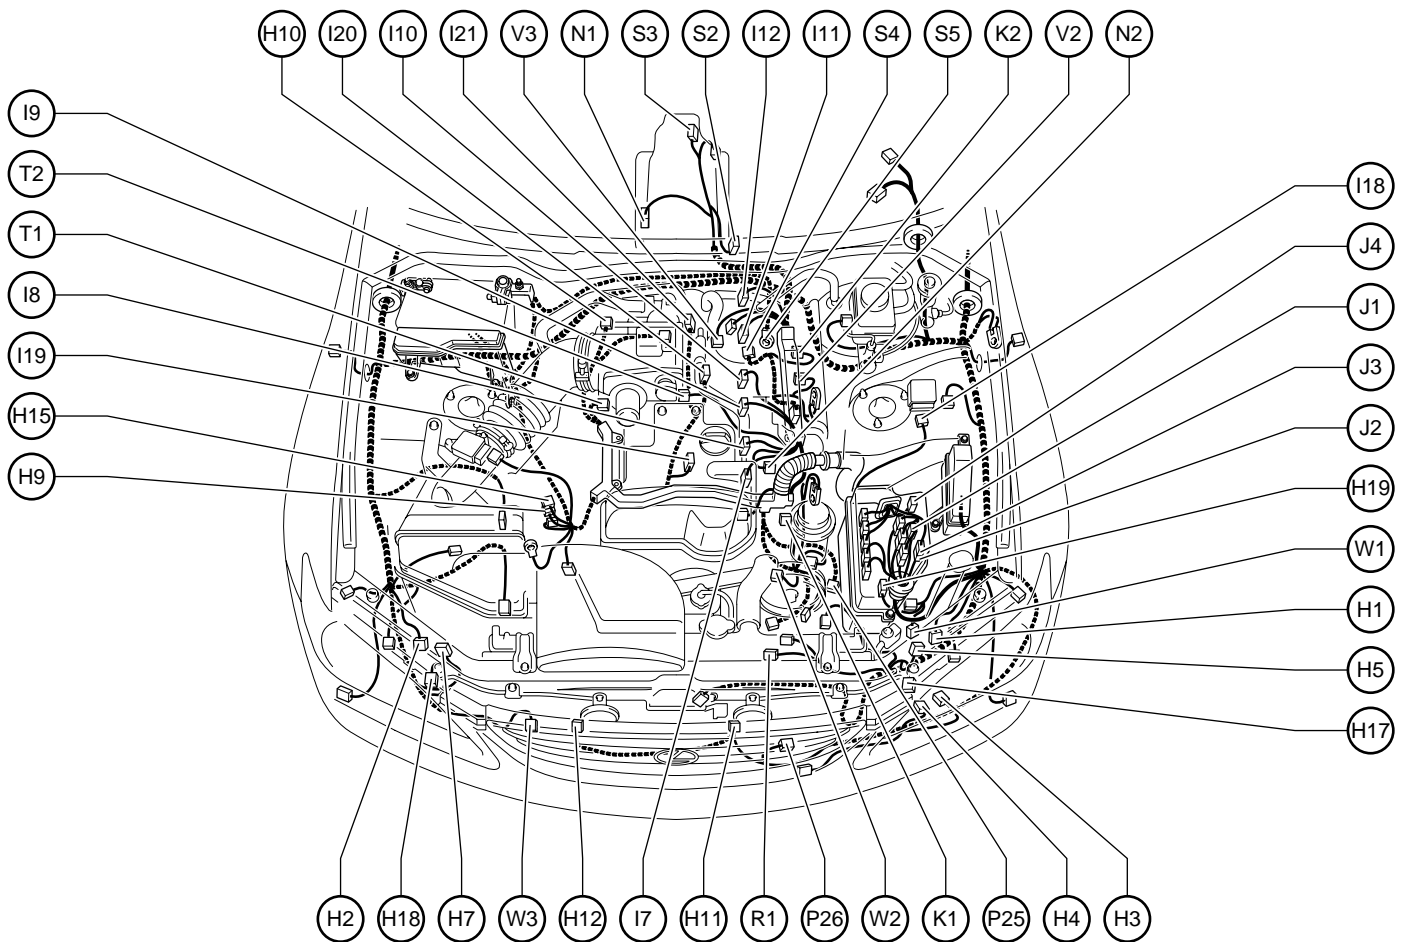

H 1 Headlight Beam Level Control Actuator LH
 H 2 Headlight Beam Level Control Actuator RH
 H 3 Headlight Cleaner Control Relay
 H 4 Headlight Cleaner Motor
 H 5 Headlight LH (High)
 H 7 Headlight RH (High)
 H 9 Heated Oxygen Sensor (Bank 1 Sensor 1)
 H10 Heated Oxygen Sensor (Bank 2 Sensor 1)
 H11 Horn LH
 H12 Horn RH
 H15 Heated Oxygen Sensor (Bank 1 Sensor 2)
 H17 Headlight Control ECU LH
 H18 Headlight Control ECU RH
 H19 Height Control Sensor Front LH

I 7 Injector No.1
 I 8 Injector No.2
 I 9 Injector No.3
 I10 Injector No.4
 I11 Injector No.5
 I12 Injector No.6
 I18 Igniter
 I19 Ignition Coil No.1
 I20 Ignition Coil No.2
 I21 Ignition Coil No.3

J 1 Junction Connector
 J 2 Junction Connector

J 3 Junction Connector
 J 4 Junction Connector

K 1 Knock Sensor 1
 K 2 Knock Sensor 2

N 1 Neutral Start SW
 N 2 Noise Filter (Ignition)

P25 Power Steering Oil Pressure Sensor
 P26 Pressure SW

R 1 Radiator Fan Motor

S 2 Speed Sensor (Transmission Input)
 S 3 Speed Sensor (Transmission Output)
 S 4 Starter
 S 5 Starter

T 1 Throttle Control Motor
 T 2 Throttle Position Sensor

V 2 VSV (ACIS)
 V 3 VSV (EVAP)

W 1 Washer Motor
 W 2 Water Temp. Sensor
 W 3 Water Temp. SW