


Connector Joining Wire Harness and Wire Harness

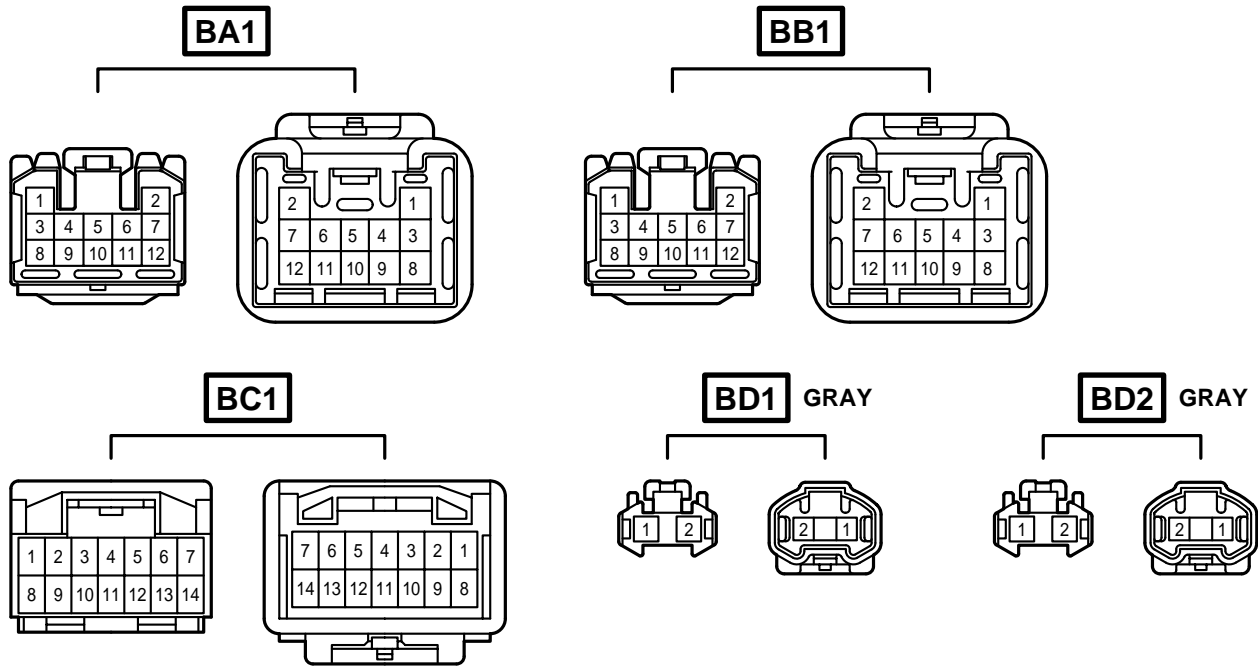

Code	Joining Wire Harness and Wire Harness (Connector Location)
BA1	Rear Door No.2 Wire and Floor No.2 Wire (Left Center Pillar)
BB1	Rear Door No.1 Wire and Floor Wire (Right Center Pillar)
BC1	Floor No.2 Wire and Floor Wire (Under the Right Rear Cushion)
BD1	Floor No.2 Wire and Luggage Room Wire (Right Side of the Luggage Door)
BD2	