


Connector Joining Wire Harness and Wire Harness

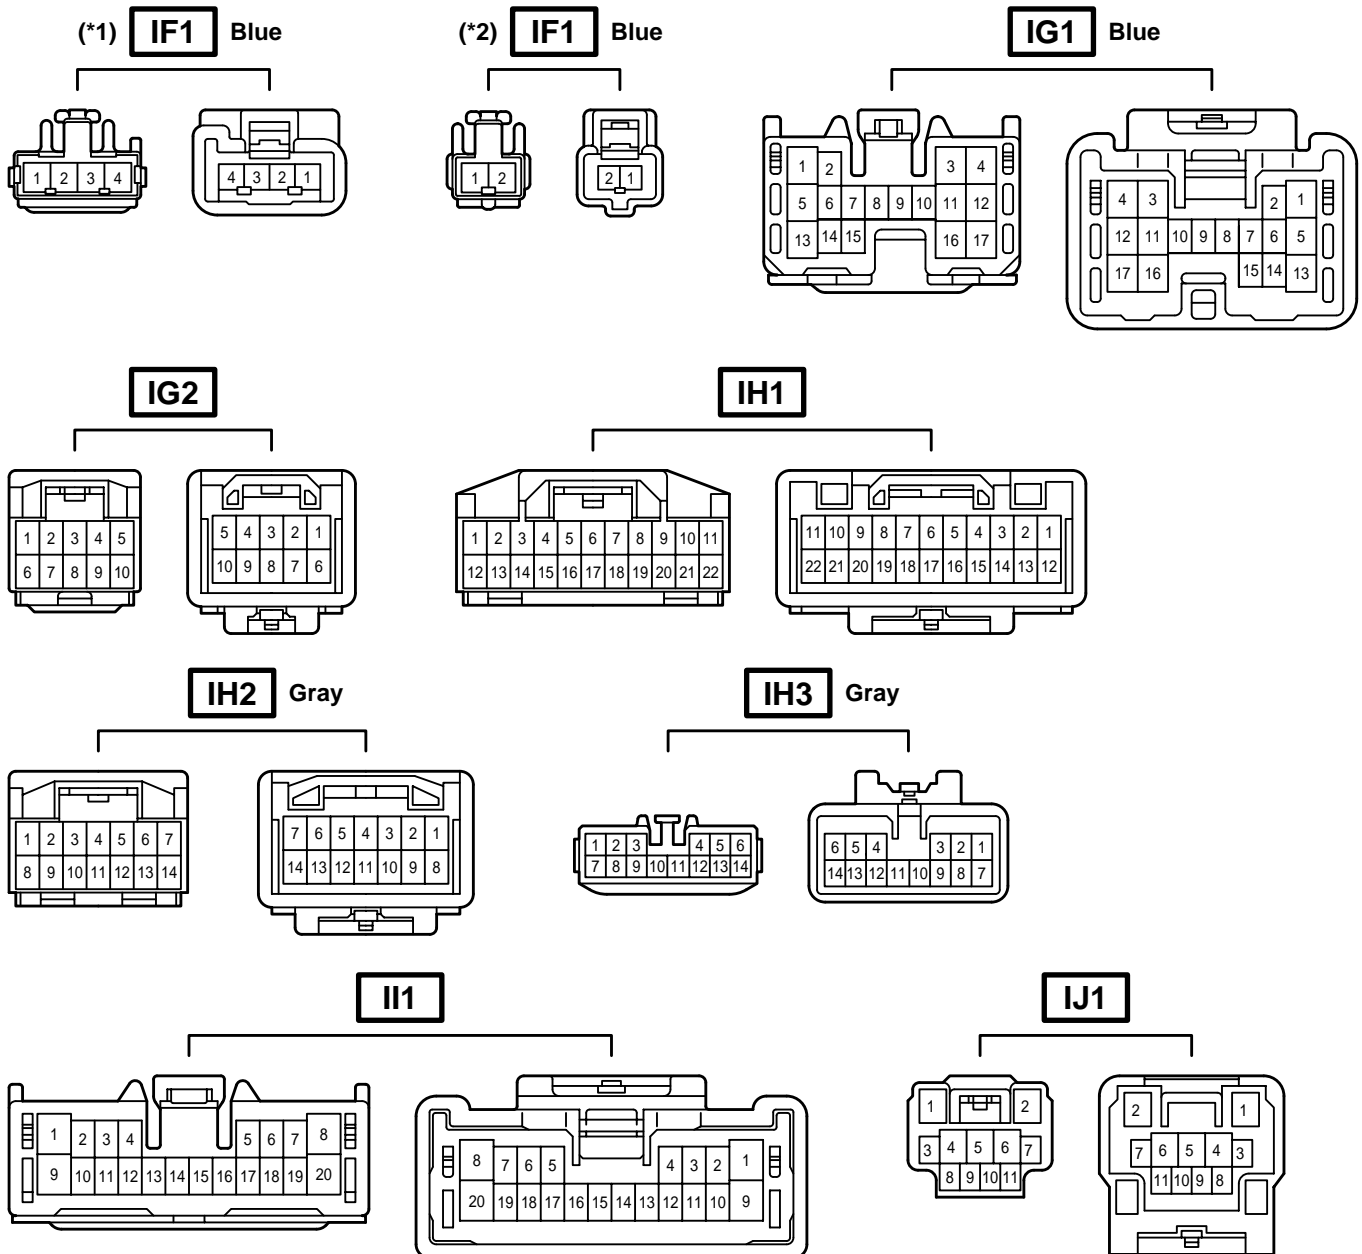

* 1:w/ Cruise Control
* 2:w/o Cruise Control

Code	Joining Wire Harness and Wire Harness (Connector Location)
IF1	Instrument Panel No.3 Wire and Instrument Panel Wire (Right Side of the Instrument Panel)
IG1	Instrument Panel Wire and Engine Room Main Wire (Near the Driver Side J/B)
IG2	
IH1	Instrument Panel Wire and Floor Wire (Near the Driver Side J/B)
IH2	
IH3	
II1	Front Door RH Wire and Instrument Panel Wire (Left Kick Panel)
IJ1	Roof Wire and Floor Wire (Right Side of the Instrument Panel)