


## Position of Parts in Engine Compartment

[RHD]

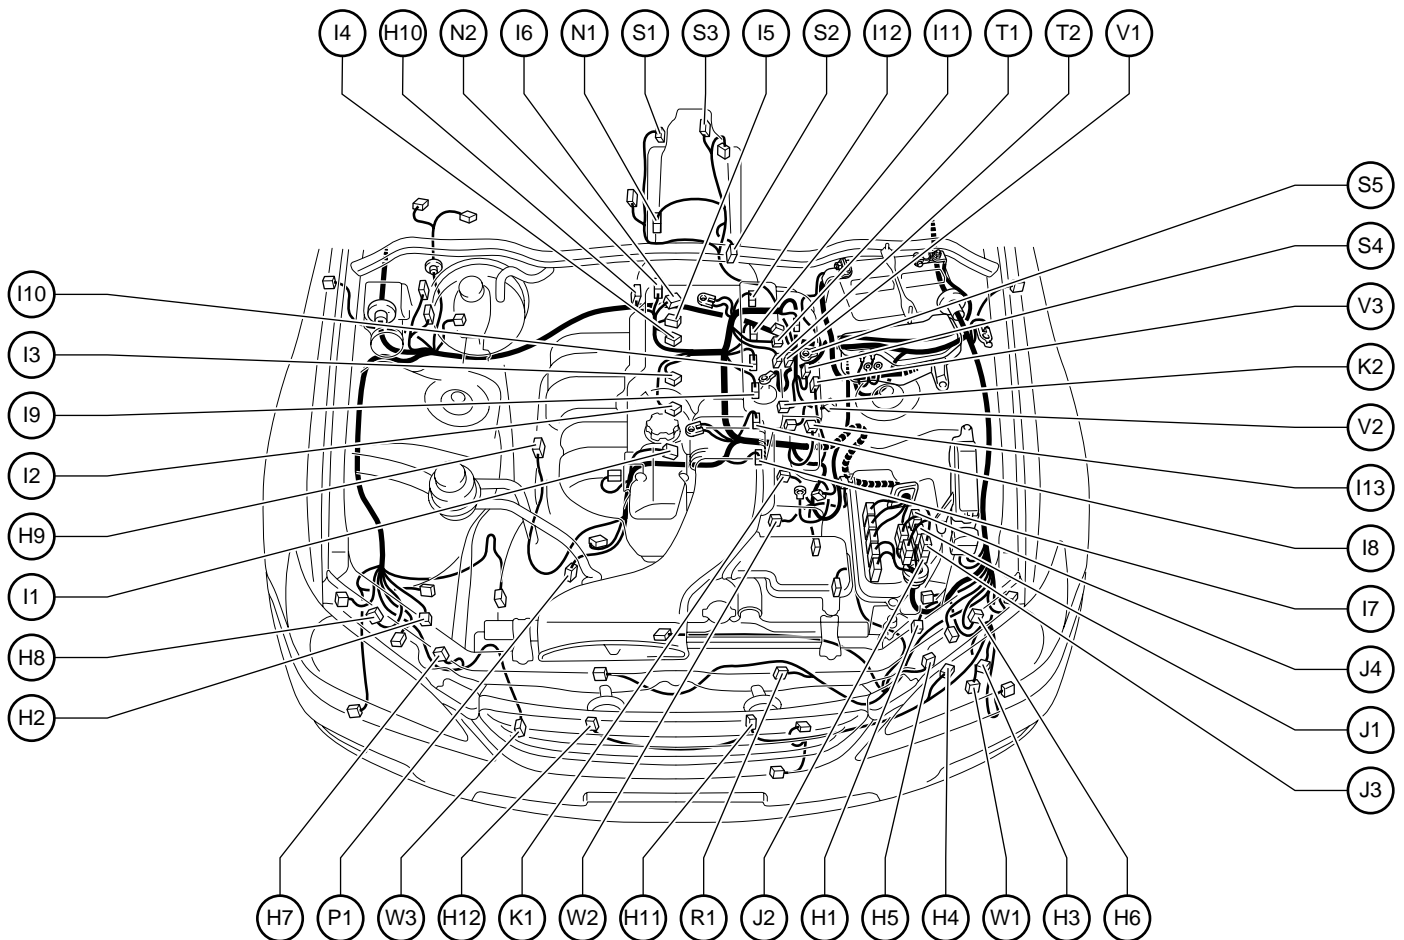

H 1 Headlight Beam Level Control Actuator LH  
 H 2 Headlight Beam Level Control Actuator RH  
 H 3 Headlight Cleaner Control Relay  
 H 4 Headlight Cleaner Motor  
 H 5 Headlight LH (High)  
 H 6 Headlight LH (Low)  
 H 7 Headlight RH (High)  
 H 8 Headlight RH (Low)  
 H 9 Heated Oxygen Sensor (Bank 1 Sensor 1)  
 H10 Heated Oxygen Sensor (Bank 2 Sensor 1)  
 H11 Horn LH  
 H12 Horn RH

I 1 Ignition Coil and Igniter No.1  
 I 2 Ignition Coil and Igniter No.2  
 I 3 Ignition Coil and Igniter No.3  
 I 4 Ignition Coil and Igniter No.4  
 I 5 Ignition Coil and Igniter No.5  
 I 6 Ignition Coil and Igniter No.6  
 I 7 Injector No.1  
 I 8 Injector No.2  
 I 9 Injector No.3  
 I10 Injector No.4  
 I11 Injector No.5  
 I12 Injector No.6  
 I13 Intake Air Temp. Sensor

J 1 Junction Connector  
 J 2 Junction Connector  
 J 3 Junction Connector  
 J 4 Junction Connector

K 1 Knock Sensor 1  
 K 2 Knock Sensor 2

N 1 Neutral Start SW  
 N 2 Noise Filter (Ignition)

P 1 Power Steering Oil Pressure SW

R 1 Radiator Fan Motor

S 1 Speed Sensor (Combination Meter)  
 S 2 Speed Sensor (Transmission Input)  
 S 3 Speed Sensor (Transmission Output)  
 S 4 Starter  
 S 5 Starter

T 1 Throttle Control Motor  
 T 2 Throttle Position Sensor

V 1 Vacuum Sensor  
 V 2 VSV (ACIS)  
 V 3 VSV (EVAP)

W 1 Washer Motor  
 W 2 Water Temp. Sensor  
 W 3 Water Temp. SW