


## Connector Joining Wire Harness and Wire Harness

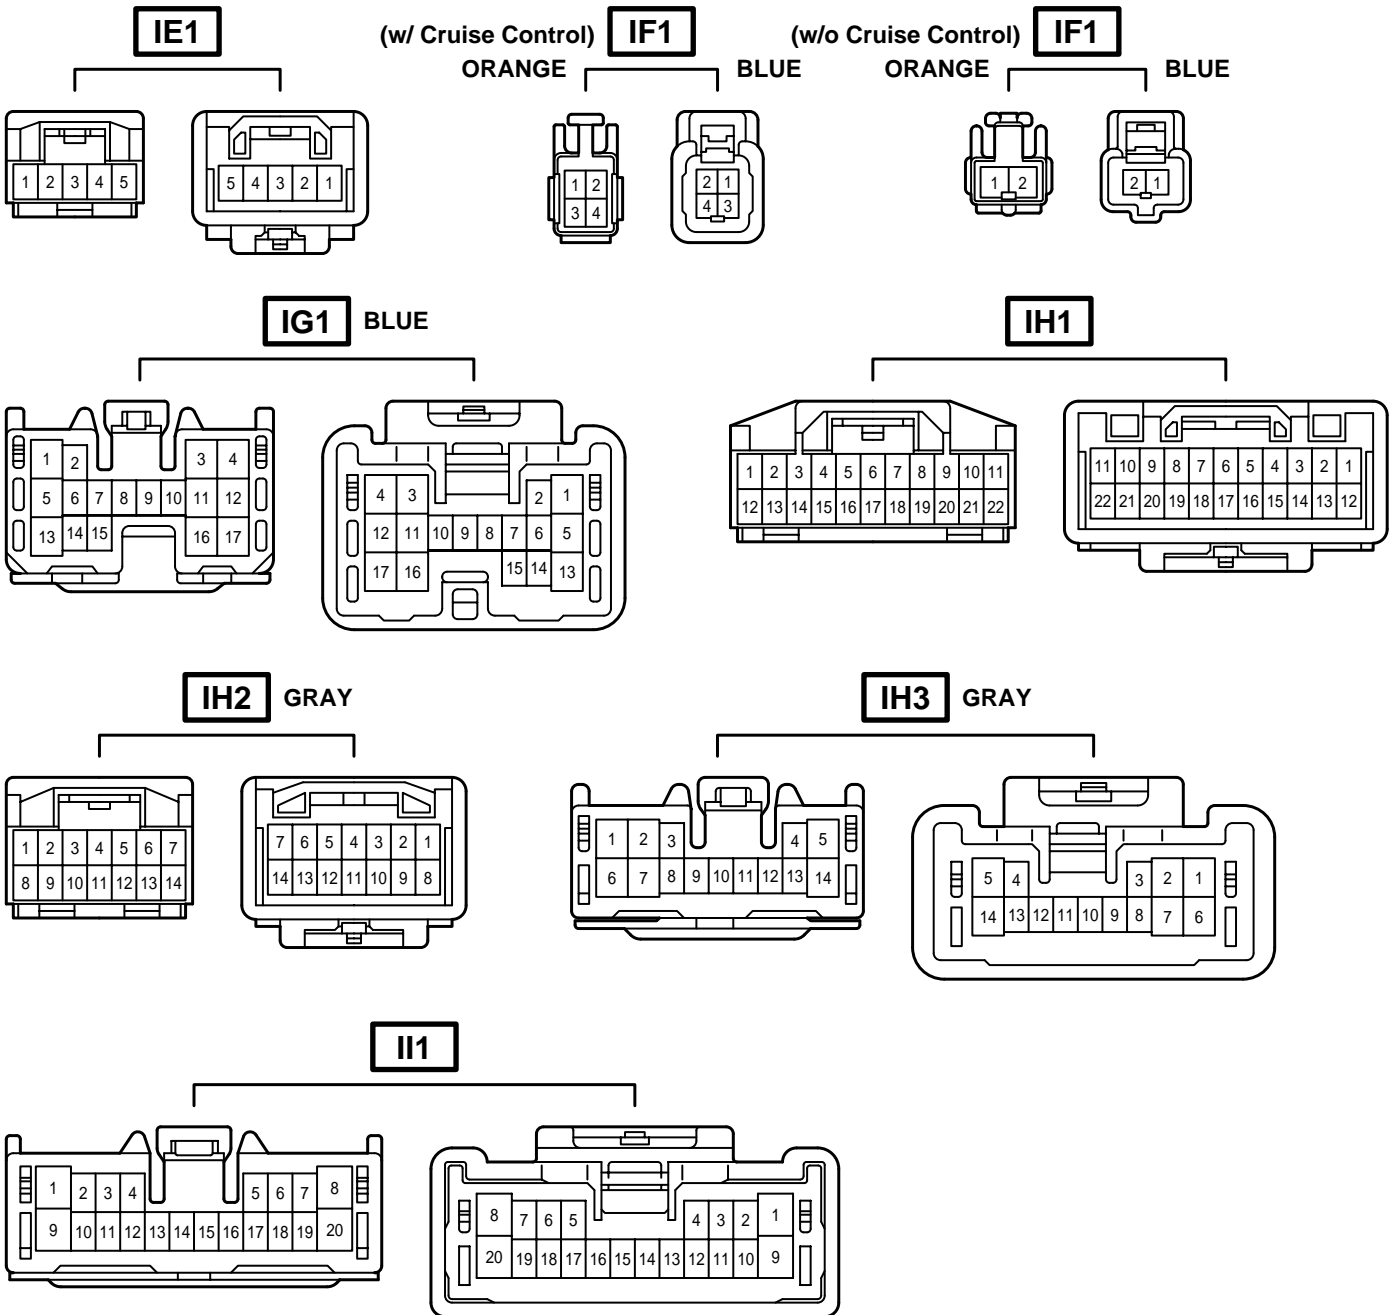

| Code | Joining Wire Harness and Wire Harness (Connector Location)                                |
|------|---|
| IE1  | Instrument Panel No.2 Wire and Instrument Panel Wire (Right Side of the Instrument Panel) |
| IF1  | Instrument Panel No.3 Wire and Instrument Panel Wire (Right Side of the Instrument Panel) |
| IG1  | Instrument Panel Wire and Engine Room Main Wire (Near the Driver Side J/B)                |
| IH1  | Instrument Panel Wire and Floor Wire (Near the Driver Side J/B)                           |
| IH2  |   |
| IH3  |   |
| II1  | Front Door RH Wire and Instrument Panel Wire (Left Kick Panel)                            |