


Connector Joining Wire Harness and Wire Harness

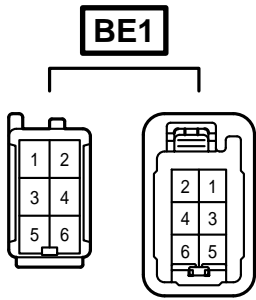

Code	Joining Wire Harness and Wire Harness (Connector Location)
BE1	Floor No.2 Wire and Front Seat LH Wire (Under the Driver's Seat)