


INSPECTION

1. CHECK OIL PUMP BODY BUSHING

Using a caliper gauge, measure the inside diameter of the oil pump body bushing.

Maximum inside diameter: 38.19 mm (1.5035 in.)

If the inside diameter is greater than the maximum, replace the oil pump body.

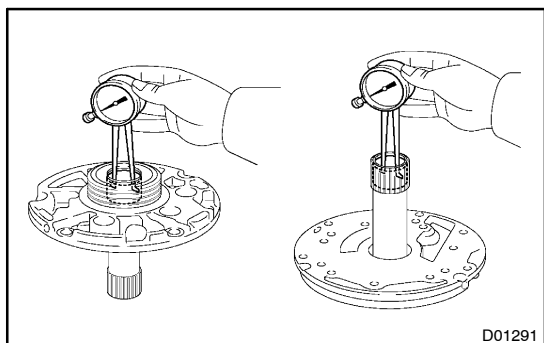

2. CHECK STATOR SHAFT BUSHING

Using a caliper gauge, measure the inside diameter of the stator shaft bushing.

Maximum inside diameter:

Front side: 21.58 mm (0.8496 in.)

Rear side: 27.08 mm (1.0661 in.)

If the inside diameter is greater than the maximum, replace the stator shaft.