


# ELECTRICAL WIRING ROUTING

## Position of Parts in Body

[RHD : S/D]

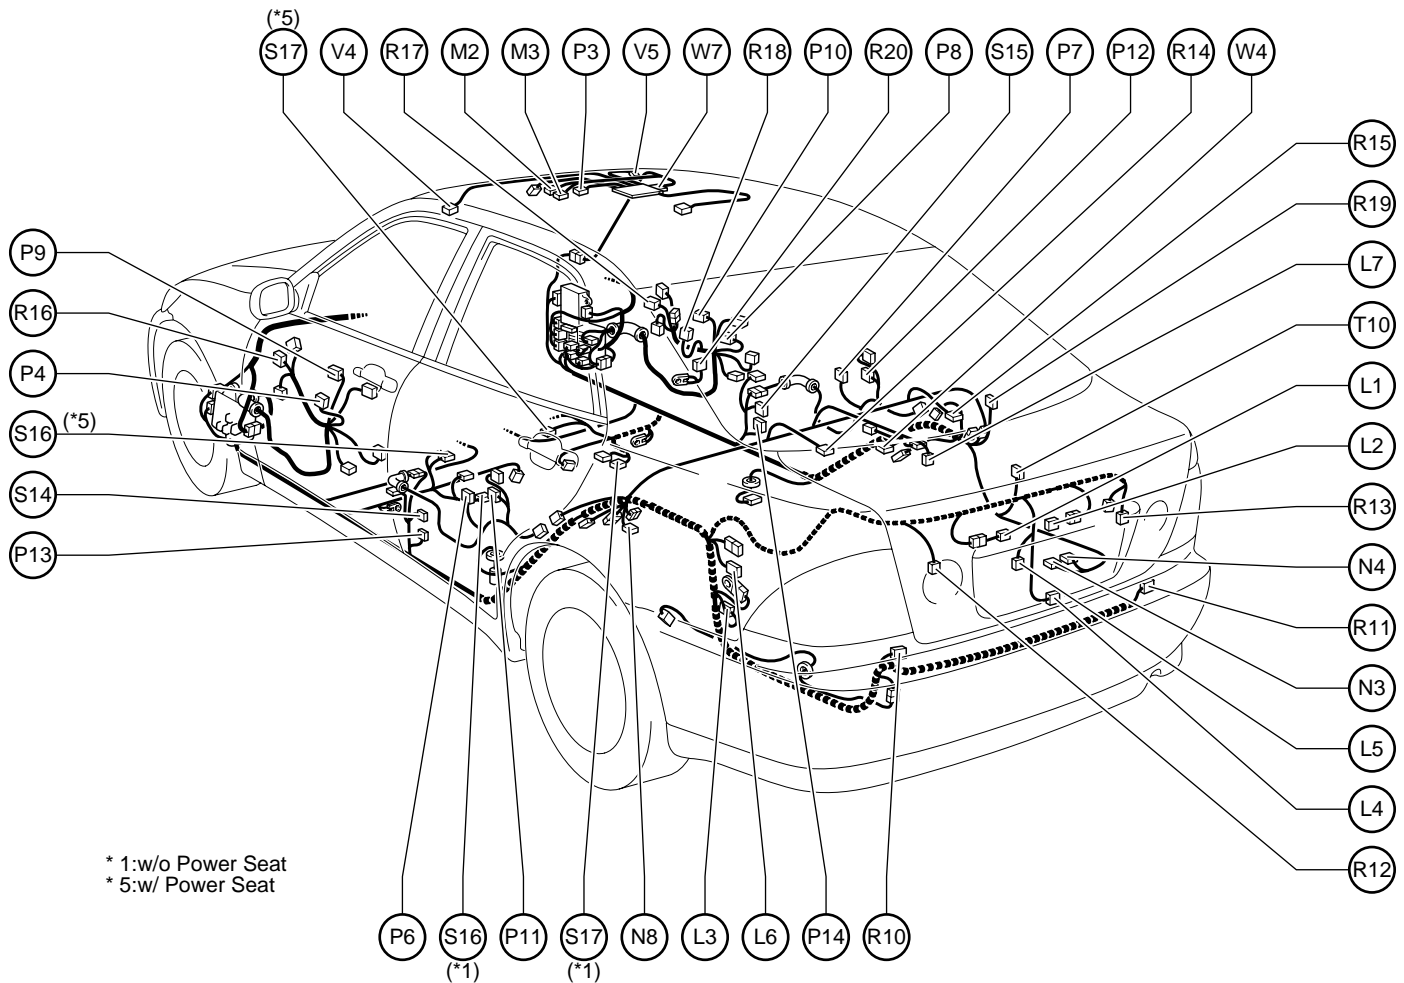

- L 1 License Plate Light LH
- L 2 License Plate Light RH
- L 3 Light Failure Sensor
- L 4 Luggage Compartment Door Courtesy SW and Opener Motor
- L 5 Luggage Compartment Door Key Unlock SW
- L 6 Luggage Compartment Door Opener Relay
- L 7 Luggage Compartment Light

- M 2 Moon Roof Control ECU
- M 3 Moon Roof Control SW  
Personal Light

- N 3 Navigation ECU
- N 4 Navigation ECU
- N 8 Noise Filter (Stop Light)

- P 3 Personal Light
- P 4 Power Window Control SW Front LH
- P 6 Power Window Control SW Rear LH
- P 7 Power Window Control SW Rear RH
- P 8 Power Window Master SW
- P 9 Power Window Motor Front LH
- P10 Power Window Motor Front RH
- P11 Power Window Motor Rear LH
- P12 Power Window Motor Rear RH
- P13 Pretensioner LH
- P14 Pretensioner RH

- R10 Rear Combination Light LH
- R11 Rear Combination Light RH
- R12 Rear Fog Light LH
- R13 Rear Fog Light RH
- R14 Rear Speaker LH
- R15 Rear Speaker RH
- R16 Remote Control Mirror LH
- R17 Remote Control Mirror RH
- R18 Remote Control Mirror SW
- R19 Rear Window Defogger
- R20 Rear Window Defogger

- S14 Side Airbag Sensor LH
- S15 Side Airbag Sensor RH
- S16 Side Airbag Squib LH
- S17 Side Airbag Squib RH

- T 10 Theft Warning Siren

- V 4 Vanity Light LH
- V 5 Vanity Light RH

- W 4 Wireless Door Lock ECU
- W 7 Wire to FFC Holder