


Position of Parts in Engine Compartment

[RHD : 1G-FE]

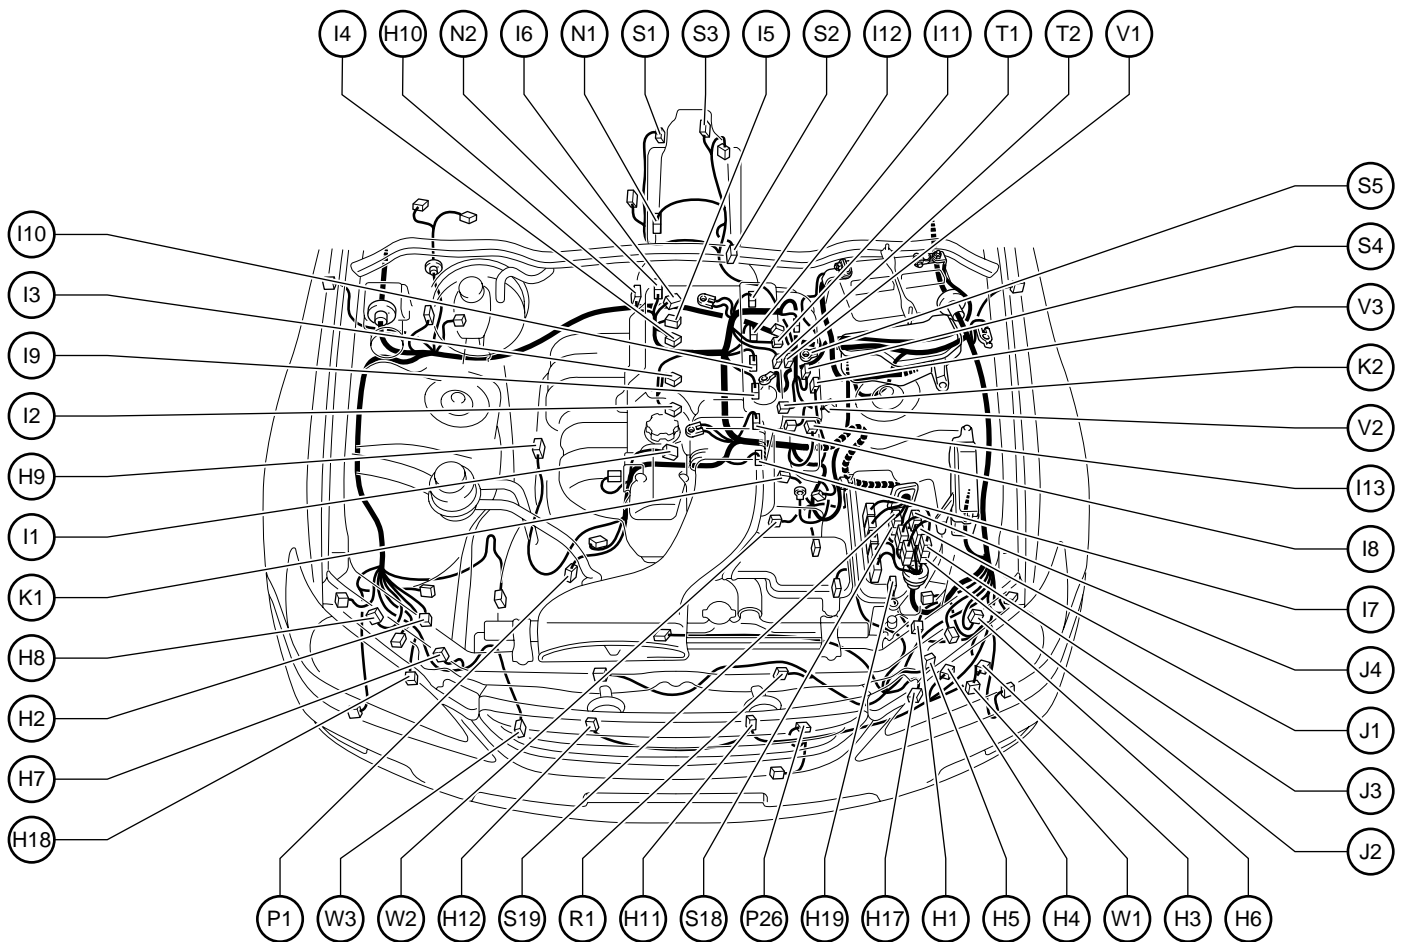

H 1 Headlight Beam Level Control Actuator LH
 H 2 Headlight Beam Level Control Actuator RH
 H 3 Headlight Cleaner Control Relay
 H 4 Headlight Cleaner Motor
 H 5 Headlight LH (High)
 H 6 Headlight LH (Low)
 H 7 Headlight RH (High)
 H 8 Headlight RH (Low)
 H 9 Heated Oxygen Sensor (Bank 1 Sensor 1)
 H10 Heated Oxygen Sensor (Bank 2 Sensor 1)
 H11 Horn LH
 H12 Horn RH
 H17 Headlight Control ECU LH
 H18 Headlight Control ECU RH
 H19 Height Control Sensor Front LH

I 1 Ignition Coil and Igniter No.1
 I 2 Ignition Coil and Igniter No.2
 I 3 Ignition Coil and Igniter No.3
 I 4 Ignition Coil and Igniter No.4
 I 5 Ignition Coil and Igniter No.5
 I 6 Ignition Coil and Igniter No.6
 I 7 Injector No.1
 I 8 Injector No.2
 I 9 Injector No.3
 I10 Injector No.4
 I11 Injector No.5
 I12 Injector No.6
 I13 Intake Air Temp. Sensor

J 1 Junction Connector
 J 2 Junction Connector

J 3 Junction Connector
 J 4 Junction Connector

K 1 Knock Sensor 1
 K 2 Knock Sensor 2

N 1 Neutral Start SW
 N 2 Noise Filter (Ignition)

P 1 Power Steering Oil Pressure SW
 P26 Pressure SW

R 1 Radiator Fan Motor

S 1 Speed Sensor (Combination Meter)
 S 2 Speed Sensor (Transmission Input)
 S 3 Speed Sensor (Transmission Output)
 S 4 Starter
 S 5 Starter
 S18 Short Connector
 S19 Short Connector

T 1 Throttle Control Motor
 T 2 Throttle Position Sensor

V 1 Vacuum Sensor
 V 2 VSV (ACIS)
 V 3 VSV (EVAP)

W 1 Washer Motor
 W 2 Water Temp. Sensor
 W 3 Water Temp. SW