


## Position of Parts in Instrument Panel

[RHD]

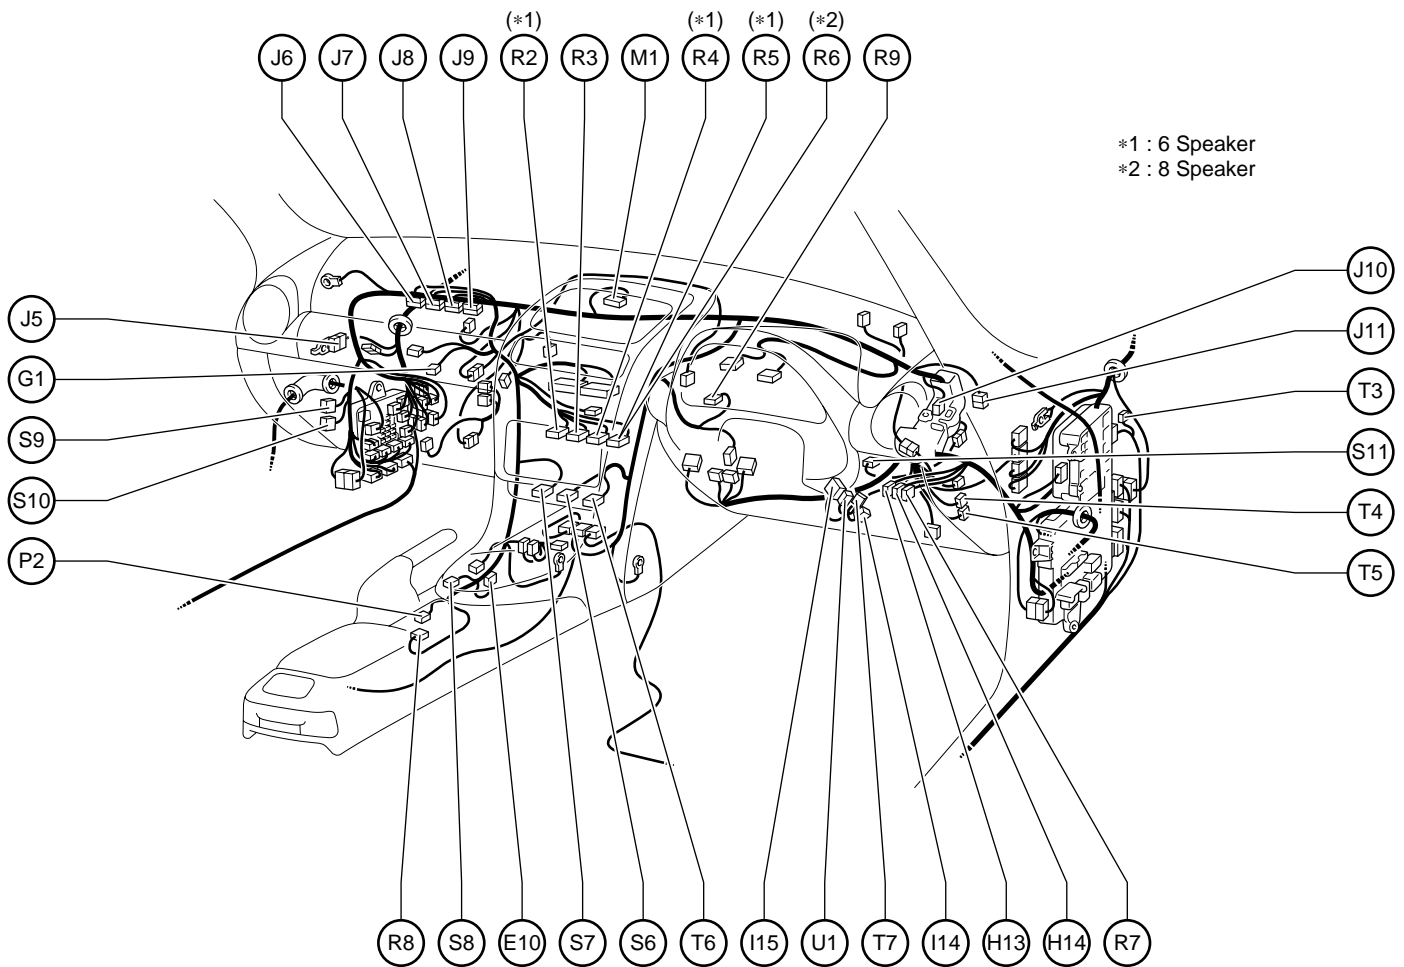

E 10 ECT Pattern Select SW

G 1 Glove Box Light

H 13 Headlight Beam Level Control SW

H 14 Headlight Cleaner SW

I 14 Ignition Key Cylinder Light

I 15 Ignition SW

J 5 Junction Connector

J 6 Junction Connector

J 7 Junction Connector

J 8 Junction Connector

J 9 Junction Connector

J 10 Junction Connector

J 11 Junction Connector

M 1 Multi-Display

P 2 Parking Brake SW

R 2 Radio and Player

R 3 Radio and Player

R 4 Radio and Player

R 5 Radio and Player

R 6 Radio and Player

R 7 Rear Fog Light SW

R 8 Remote Control Receiver

R 9 Rheostat

S 6 Seat Heater SW (Driver's Seat)

S 7 Seat Heater SW (Passenger's Seat)

S 8 Shift Lock Control ECU

S 9 Stereo Component Amplifier

S 10 Stereo Component Amplifier

S 11 Stop Light SW

T 3 Telephone Microphone

T 4 Theft Deterrent ECU

T 5 Theft Deterrent ECU

T 6 Traction Cut SW (A/T), Traction Cut SW and Snow SW (M/T)

T 7 Transponder Key Amplifier

U 1 Unlock Warning SW and Key Interlock Solenoid