


Connector Joining Wire Harness and Wire Harness

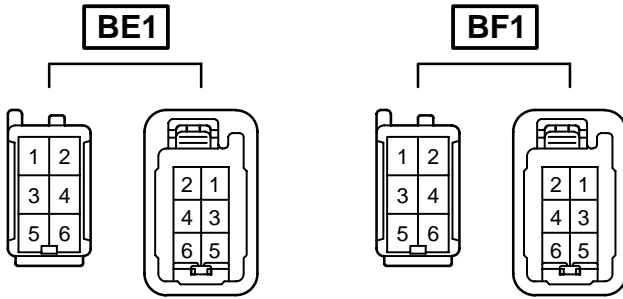

Code	Joining Wire Harness and Wire Harness (Connector Location)
BE1	Floor Wire and Front Seat RH Wire (Under the Driver's Seat)
BF1	Floor No.2 Wire and Front Seat LH Wire (Under the Passenger's Seat)