

REASSEMBLY

1. INSTALL NEW EXTENSION HOUSING OIL SEAL


- (a) Using SST and a hammer, carefully drive a new oil seal in as far as it will go.

SST 09325-20010

NOTICE:

Clean the extension housing before removing the oil seal.

- (b) Coat the lip of a new oil seal with MP grease.

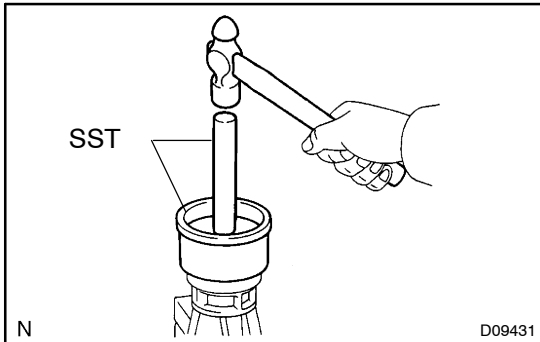

2. INSTALL NEW EXTENSION HOUSING DUST DEFLECTOR

Using SST and hammer, carefully drive a new dust deflector in as far as it will go.

SST 09223-15030, 09950-70010 (09951-07100)