


G ELECTRICAL WIRING ROUTING

Position of Parts in Body

[RHD]

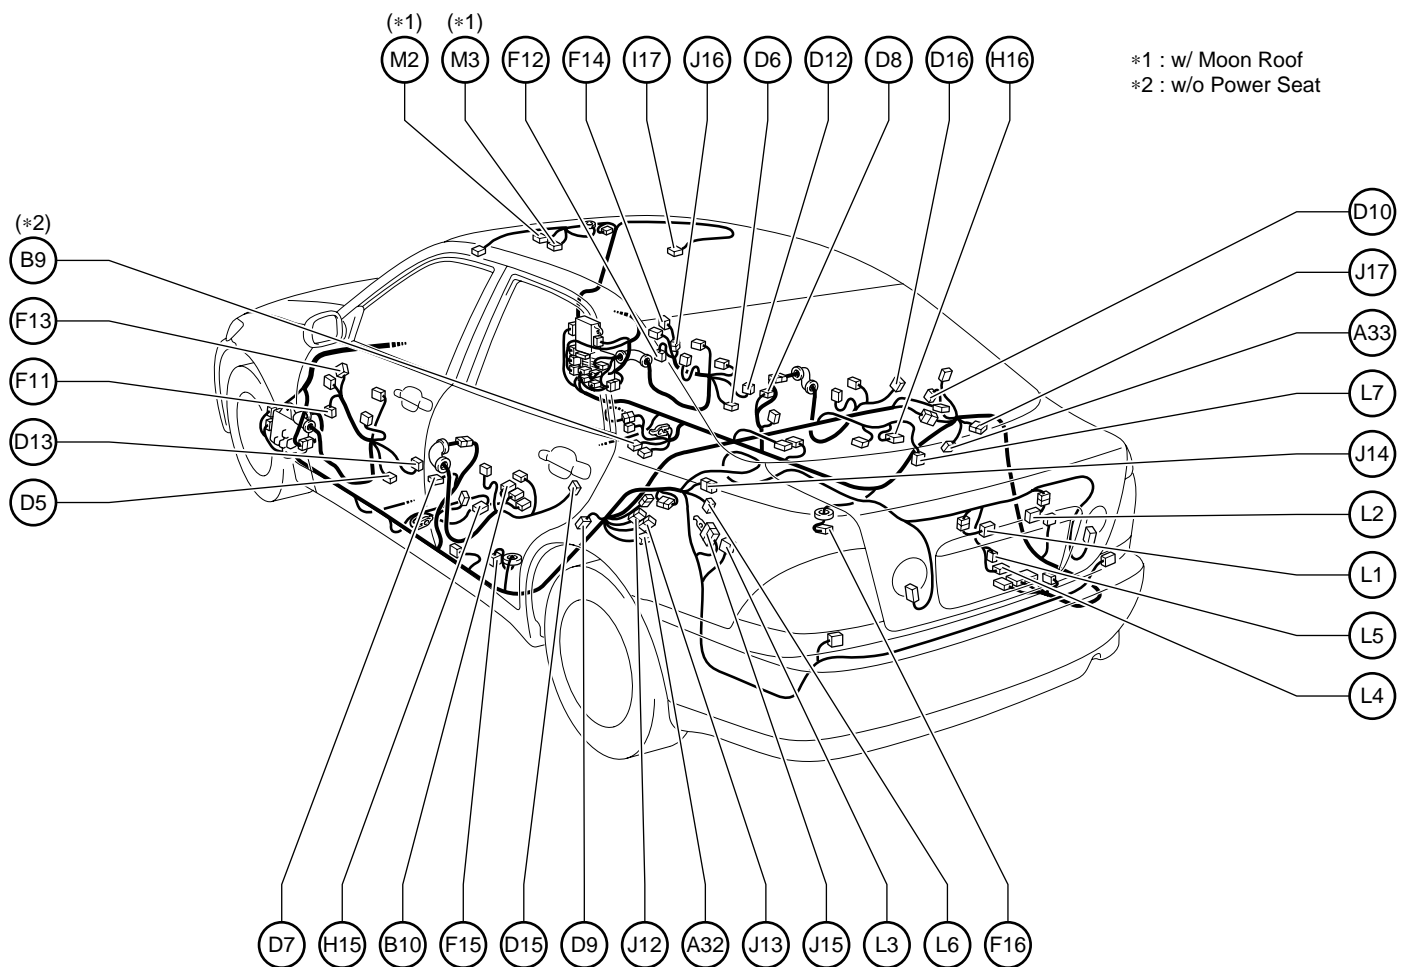

A32 ABS Speed Sensor Rear LH
A33 ABS Speed Sensor Rear RH

B 9 Buckle SW RH
B10 Buckle SW LH and Seat Belt Warning
Occupant Detection Sensor

D 5 Door Courtesy Light Front LH
D 6 Door Courtesy Light Front RH
D 7 Door Courtesy SW Front LH
D 8 Door Courtesy SW Front RH
D 9 Door Courtesy SW Rear LH
D10 Door Courtesy SW Rear RH
D12 Door Lock Motor, Door Key Lock and Unlock SW and
Door Lock Detection SW Front RH
D13 Door Lock Motor and Door Lock Detection SW Front LH
D15 Door Lock Motor and Door Lock Detection SW Rear LH
D16 Door Lock Motor and Door Lock Detection SW Rear RH

F 11 Front Door Speaker LH
F 12 Front Door Speaker RH
F 13 Front Door Tweeter Speaker LH
F 14 Front Door Tweeter Speaker RH
F 15 Fuel Pump and Sender
F 16 Fuel Sender (Sub)

H15 Heated Oxygen Sensor (Bank 1 Sensor 2)
H16 High Mounted Stop Light

I 17 Interior Light and Radar Sensor

J 12 Junction Connector
J 13 Junction Connector
J 14 Junction Connector
J 15 Junction Connector
J 16 Junction Connector
J 17 Junction Connector

L 1 License Plate Light LH
L 2 License Plate Light RH
L 3 Light Failure Sensor
L 4 Luggage Compartment Door Courtesy SW and
Opener Motor
L 5 Luggage Compartment Door Key Unlock SW
L 6 Luggage Compartment Door Opener Relay
L 7 Luggage Compartment Light

M 2 Moon Roof Control ECU
M 3 Moon Roof Control SW and Personal Light