


## REASSEMBLY


### 1. INSTALL CENTER PLANETARY RING GEAR

- (a) Install the center planetary ring gear to the intermediate shaft.
- (b) Using a screwdriver, install the snap ring.

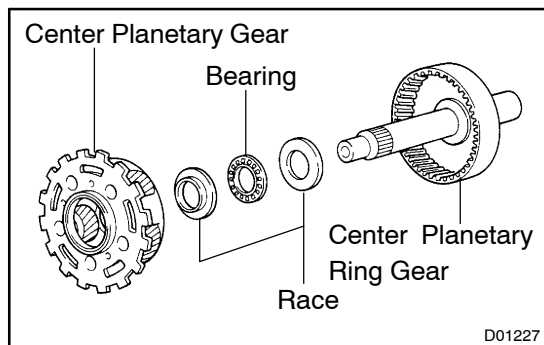

### 2. INSTALL CENTER PLANETARY GEAR

- (a) Install the bearing and 2 races to the center planetary ring gear.
- (b) Install the center planetary gear.

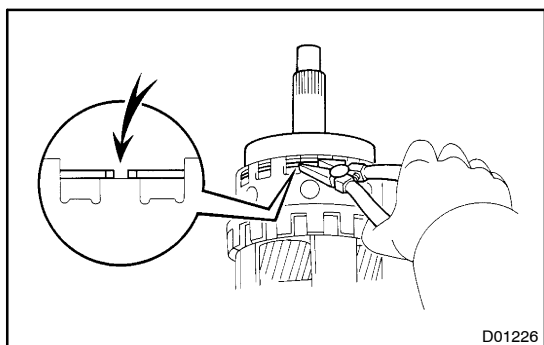

- (c) Assemble the snap ring to the front planetary ring gear. Nip the both ends of snap ring using needle nose pliers and install them to the output shaft with rear planetary gear so that the end gap of the snap ring comes on the indented part of the output shaft with rear planetary gear.