


Position of Parts in Body

[RHD]

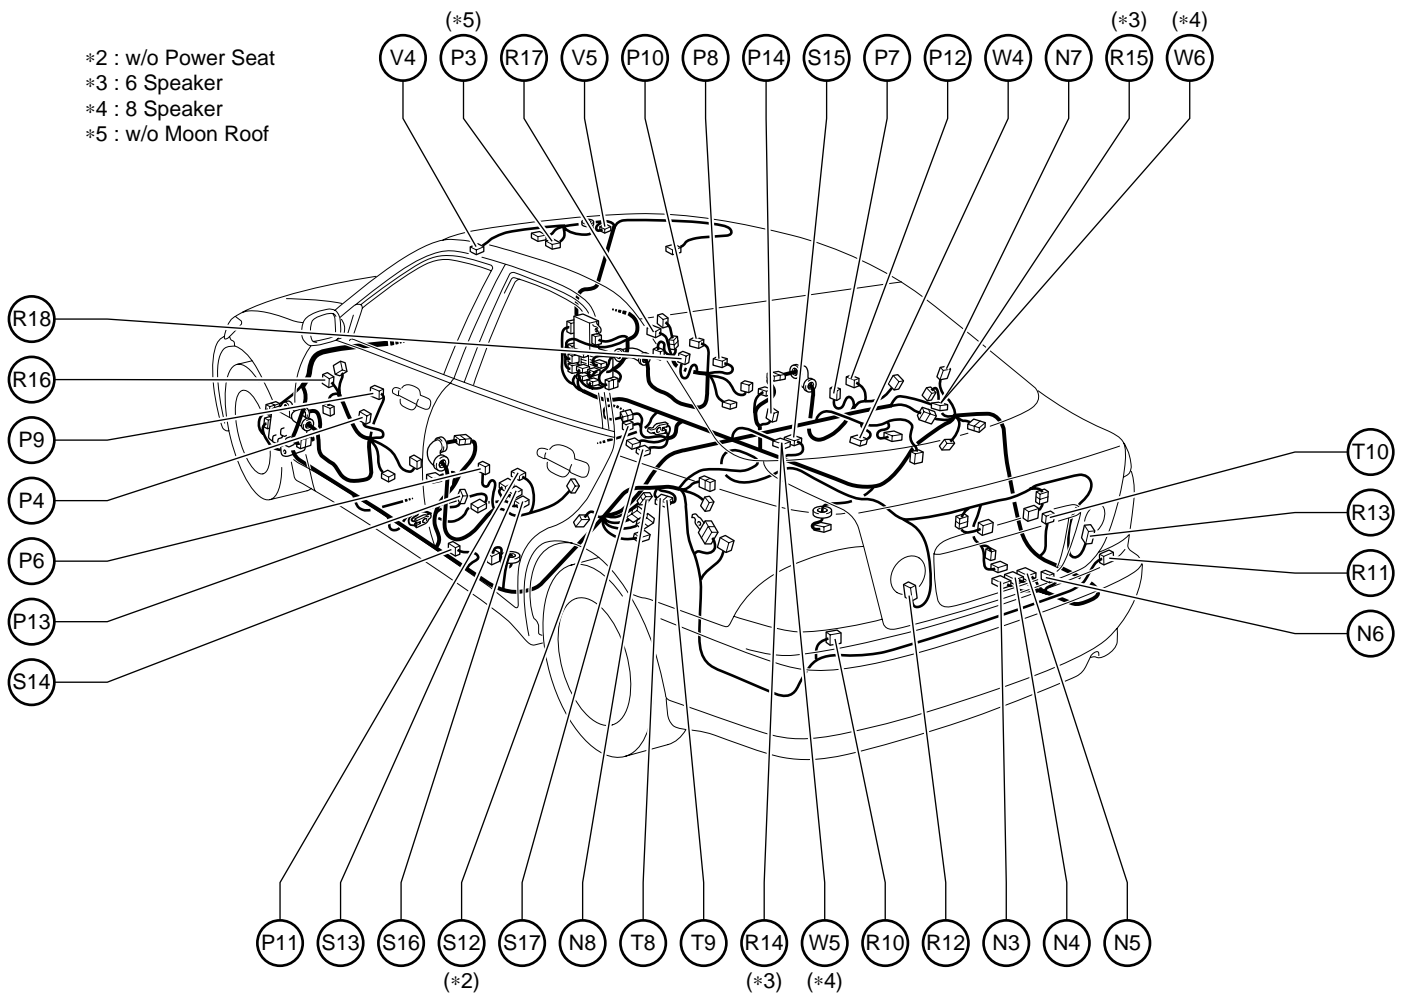

N 3 Navigation ECU
 N 4 Navigation ECU
 N 5 Navigation ECU
 N 6 Navigation ECU
 N 7 Noise Filter (Rear Window Defogger)
 N 8 Noise Filter (Stop Light)

P 3 Personal Light
 P 4 Power Window Control SW Front LH
 P 6 Power Window Control SW Rear LH
 P 7 Power Window Control SW Rear RH
 P 8 Power Window Master SW
 P 9 Power Window Motor Front LH
 P10 Power Window Motor Front RH
 P11 Power Window Motor Rear LH
 P12 Power Window Motor Rear RH
 P13 Pretensioner LH
 P14 Pretensioner RH

R10 Rear Combination Light LH
 R11 Rear Combination Light RH
 R12 Rear Fog Light LH
 R13 Rear Fog Light RH
 R14 Rear Speaker LH
 R15 Rear Speaker RH
 R16 Remote Control Mirror LH
 R17 Remote Control Mirror RH
 R18 Remote Control Mirror SW

S12 Seat Heater (Driver's Seat)
 S13 Seat Heater (Passenger's Seat)
 S14 Side Airbag Sensor LH
 S15 Side Airbag Sensor RH
 S16 Side Airbag Squib LH
 S17 Side Airbag Squib RH

T 8 Telephone Transceiver and Speaker Relay
 T 9 Telephone Transceiver and Speaker Relay
 T10 Theft Warning Siren

V 4 Vanity Light LH
 V 5 Vanity Light RH

W 4 Wireless Door Lock ECU
 W 5 Woofer Speaker LH
 W 6 Woofer Speaker RH