


## Position of Parts in Body

[RHD : S/D]

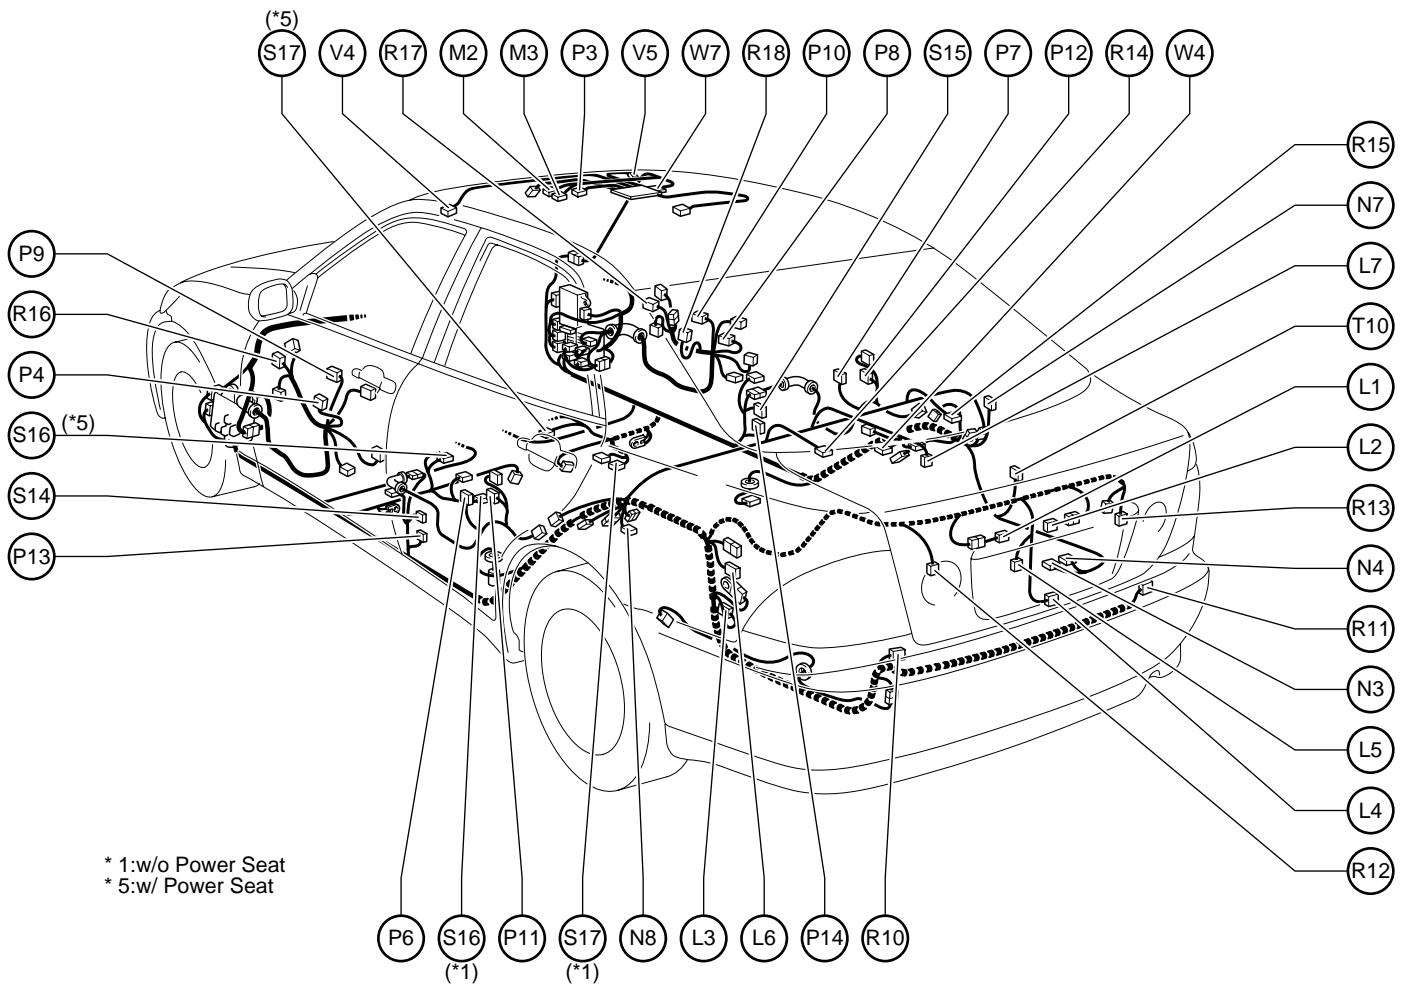

\* 1:w/o Power Seat  
\* 5:w/ Power Seat

- L 1 License Plate Light LH
- L 2 License Plate Light RH
- L 3 Light Failure Sensor
- L 4 Luggage Compartment Door Courtesy SW and Opener Motor
- L 5 Luggage Compartment Door Key Unlock SW
- L 6 Luggage Compartment Door Opener Relay
- L 7 Luggage Compartment Light

- M 2 Moon Roof Control ECU
- M 3 Moon Roof Control SW  
Personal Light

- N 3 Navigation ECU
- N 4 Navigation ECU
- N 7 Noise Filter (Rear Window Defogger)
- N 8 Noise Filter (Stop Light)

- P 3 Personal Light
- P 4 Power Window Control SW Front LH
- P 6 Power Window Control SW Rear LH
- P 7 Power Window Control SW Rear RH
- P 8 Power Window Master SW
- P 9 Power Window Motor Front LH
- P 10 Power Window Motor Front RH
- P 11 Power Window Motor Rear LH
- P 12 Power Window Motor Rear RH

- P 13 Pretensioner LH
- P 14 Pretensioner RH

- R 10 Rear Combination Light LH
- R 11 Rear Combination Light RH
- R 12 Rear Fog Light LH
- R 13 Rear Fog Light RH
- R 14 Rear Speaker LH
- R 15 Rear Speaker RH
- R 16 Remote Control Mirror LH
- R 17 Remote Control Mirror RH
- R 18 Remote Control Mirror SW

- S 14 Side Airbag Sensor LH
- S 15 Side Airbag Sensor RH
- S 16 Side Airbag Squib LH
- S 17 Side Airbag Squib RH

- T 10 Theft Warning Siren

- V 4 Vanity Light LH
- V 5 Vanity Light RH

- W 4 Wireless Door Lock ECU
- W 7 Wire to FFC Holder