

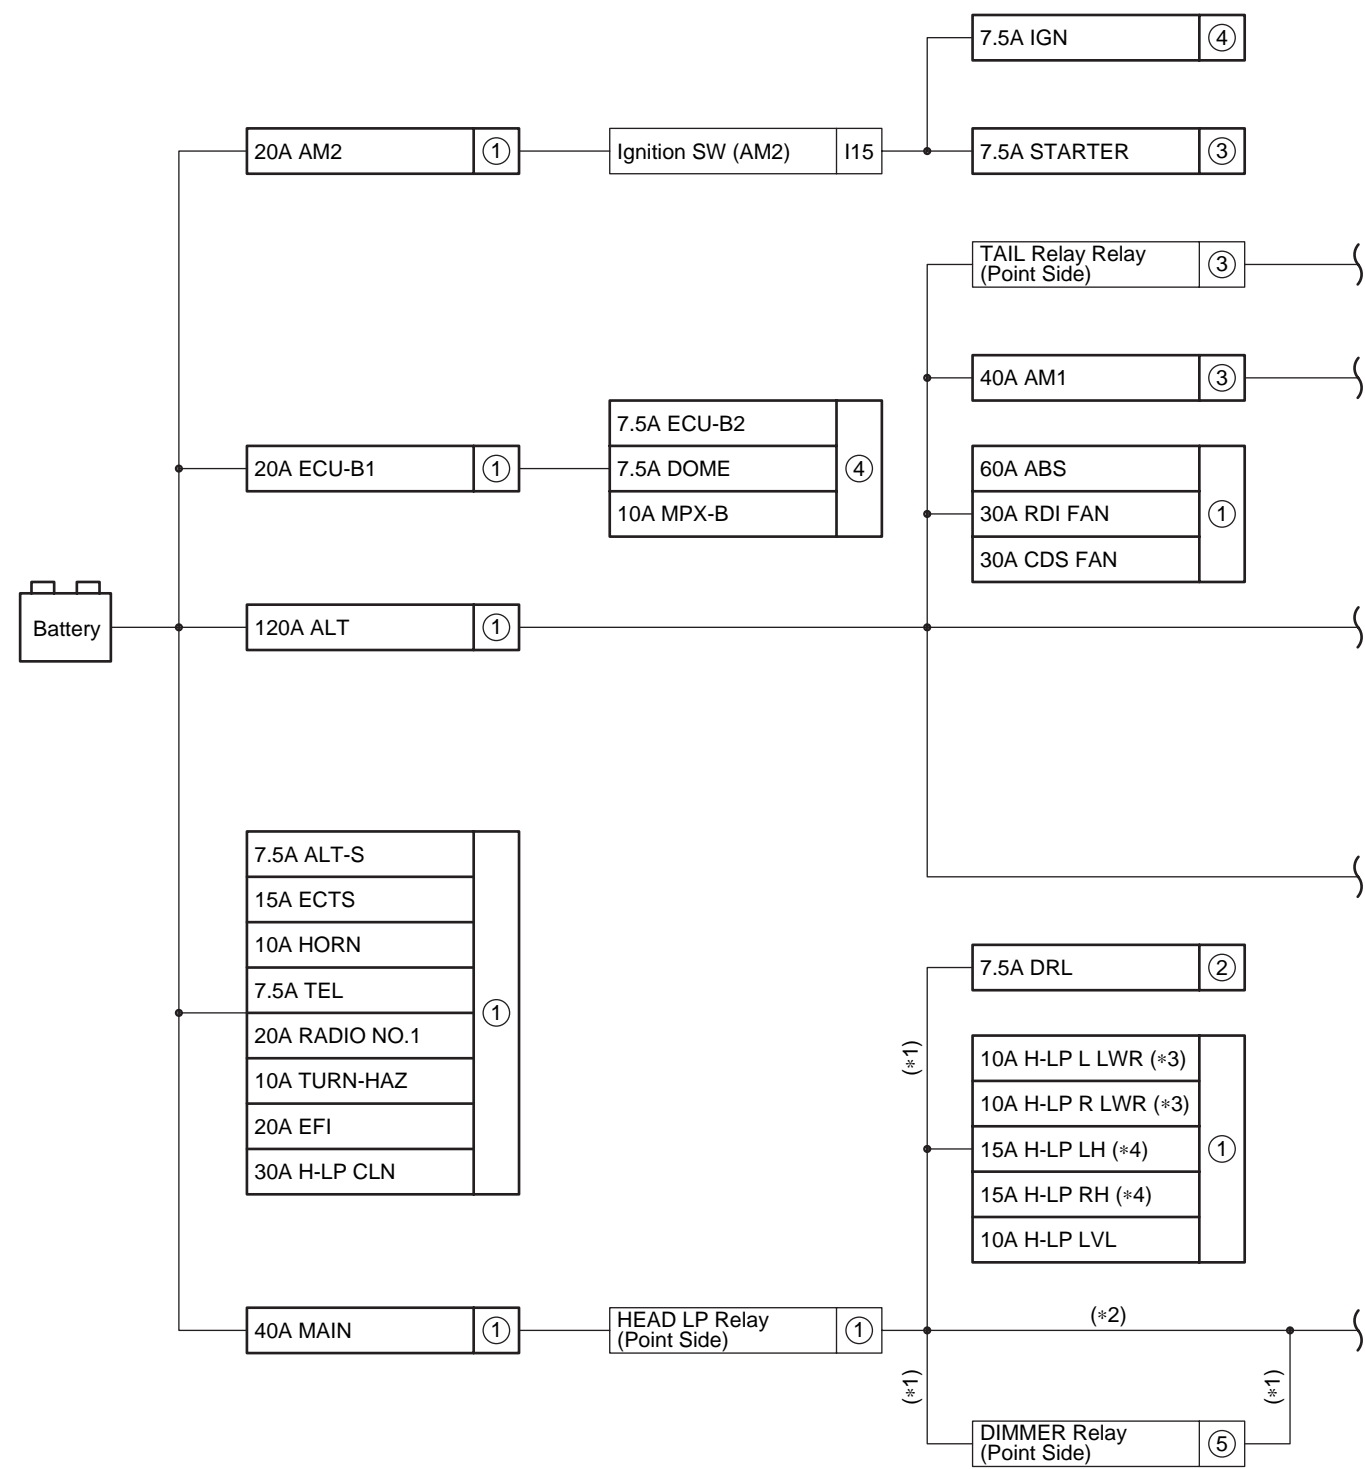


The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other Parts.

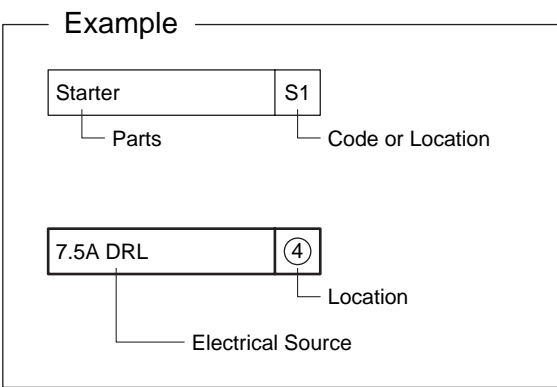

[LOCATION] ① : Engine Room No.1 R/B (See page 80 (LHD) or 81 (RHD))  
③ : Driver Side J/B (See page 82 (LHD) or 88 (RHD))

\*1 : w/ Daytime Running Light  
\*2 : w/o Daytime Running Light  
\*3 : Except Australia  
\*4 : Australia

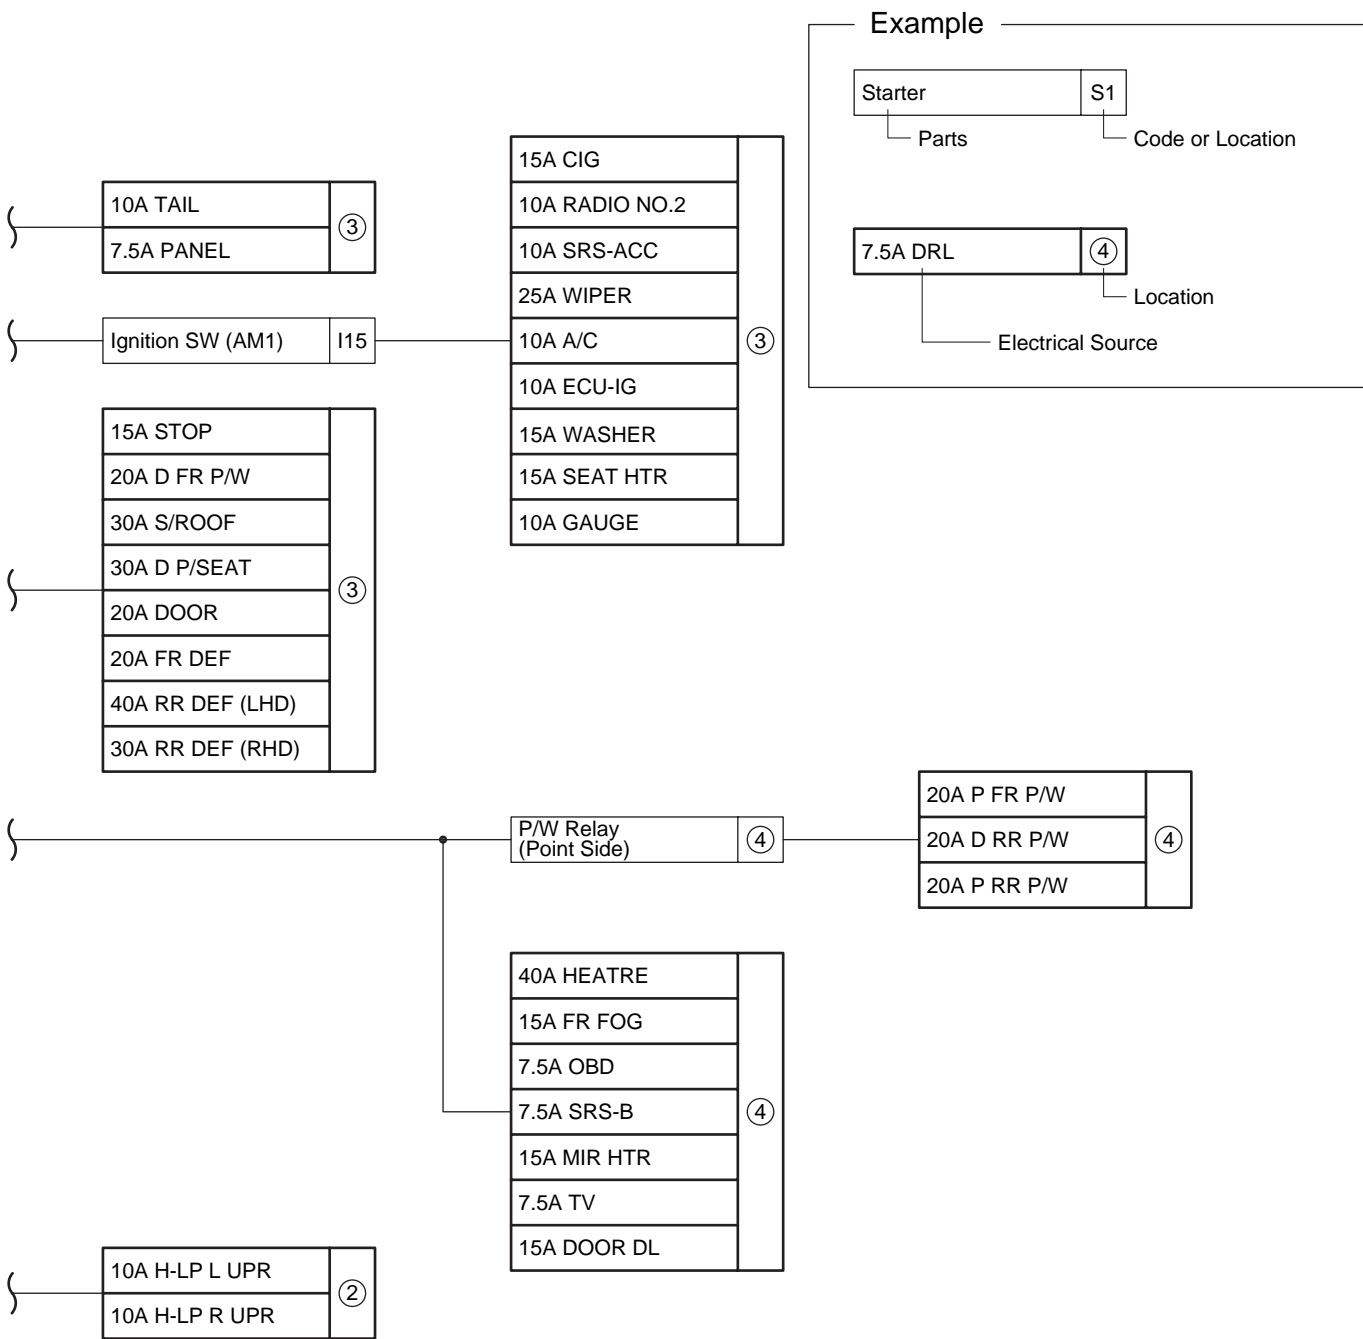

② : Engine Room No.2 R/B (See page 80 (LHD) or 81 (RHD))  
④ : Passenger Side J/B (See page 84 (LHD) or 90 (RHD)) ⑤ : Engine Room No.3 R/B (See Page 94)