


G ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[RHD]

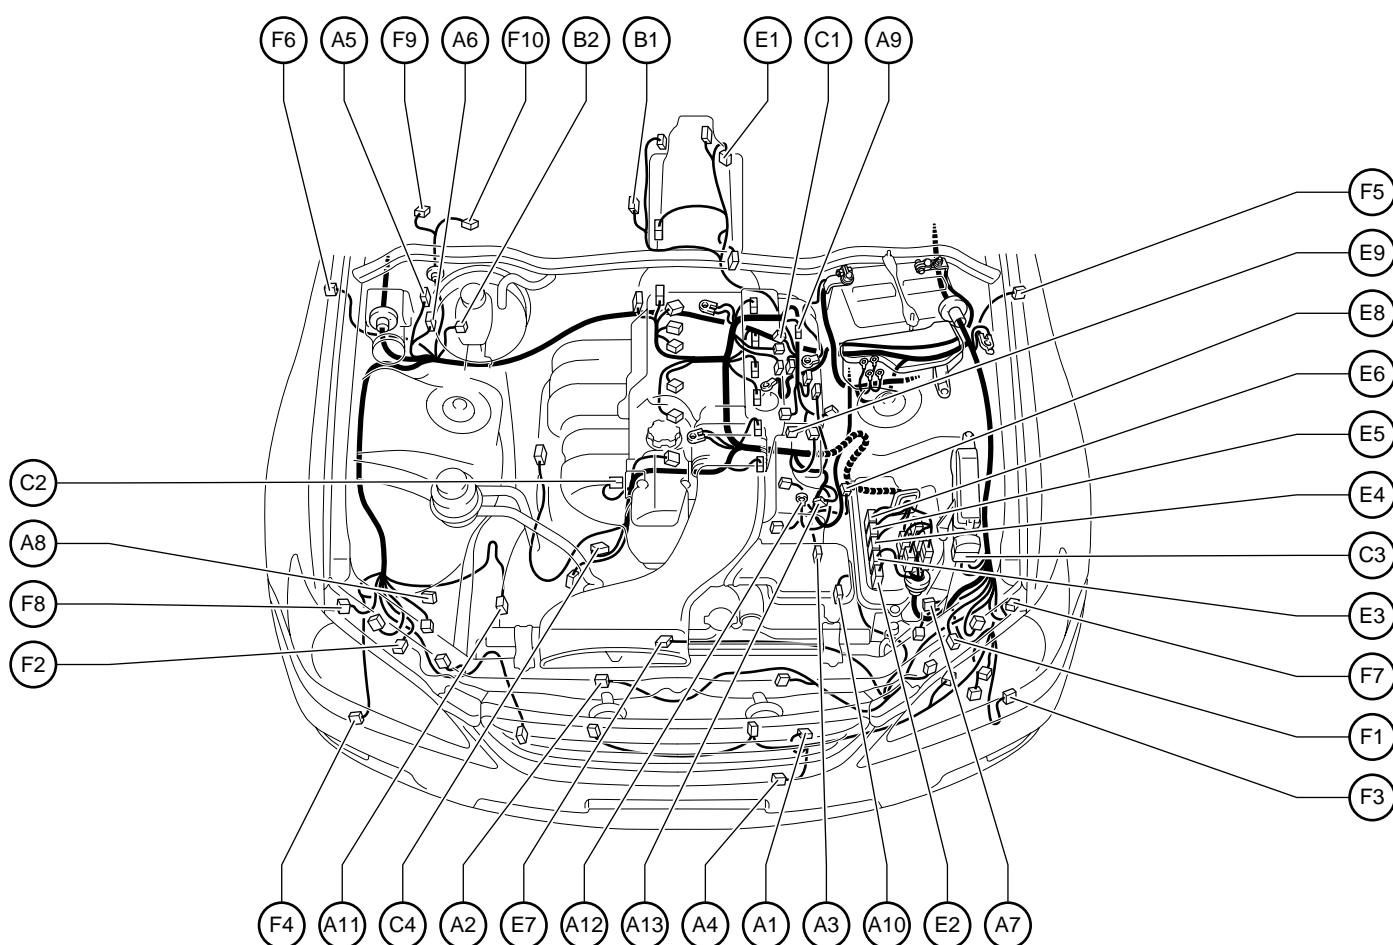

- A 1 A/C Ambient Temp. Sensor
- A 2 A/C Condenser Fan Motor
- A 3 A/C Magnetic Clutch
- A 4 A/C Triple Pressure SW
(A/C Dual and Single Pressure SW)
- A 5 ABS and Traction Actuator
- A 6 ABS and Traction Actuator
- A 7 ABS Speed Sensor Front LH
- A 8 ABS Speed Sensor Front RH
- A 9 Accel Position Sensor
- A10 Airbag Sensor Front LH
- A11 Airbag Sensor Front RH
- A12 Alternator
- A13 Alternator

- B 1 Back-Up Light SW
- B 2 Brake Fluid Level Warning SW

- C 1 Camshaft Position Sensor
- C 2 Camshaft Timing Oil Control Valve
- C 3 Check Connector
- C 4 Crankshaft Position Sensor

- E 1 ECT Solenoid
- E 2 Engine ECU (M/T) or Engine and ECT ECU (A/T)
- E 3 Engine ECU (M/T) or Engine and ECT ECU (A/T)
- E 4 Engine and ECT ECU
- E 5 Engine ECU (M/T) or Engine and ECT ECU (A/T)
- E 6 Engine ECU (M/T) or Engine and ECT ECU (A/T)
- E 7 Engine Hood Courtesy SW
- E 8 Engine Oil Level Sensor
- E 9 Engine Oil Pressure SW

- F 1 Front Clearance Light LH
- F 2 Front Clearance Light RH
- F 3 Front Fog Light LH
- F 4 Front Fog Light RH
- F 5 Front Side Turn Signal Light LH
- F 6 Front Side Turn Signal Light RH
- F 7 Front Turn Signal Light LH
- F 8 Front Turn Signal Light RH
- F 9 Front Window Deicer
- F10 Front Wiper Motor