


Connector Joining Wire Harness and Wire Harness

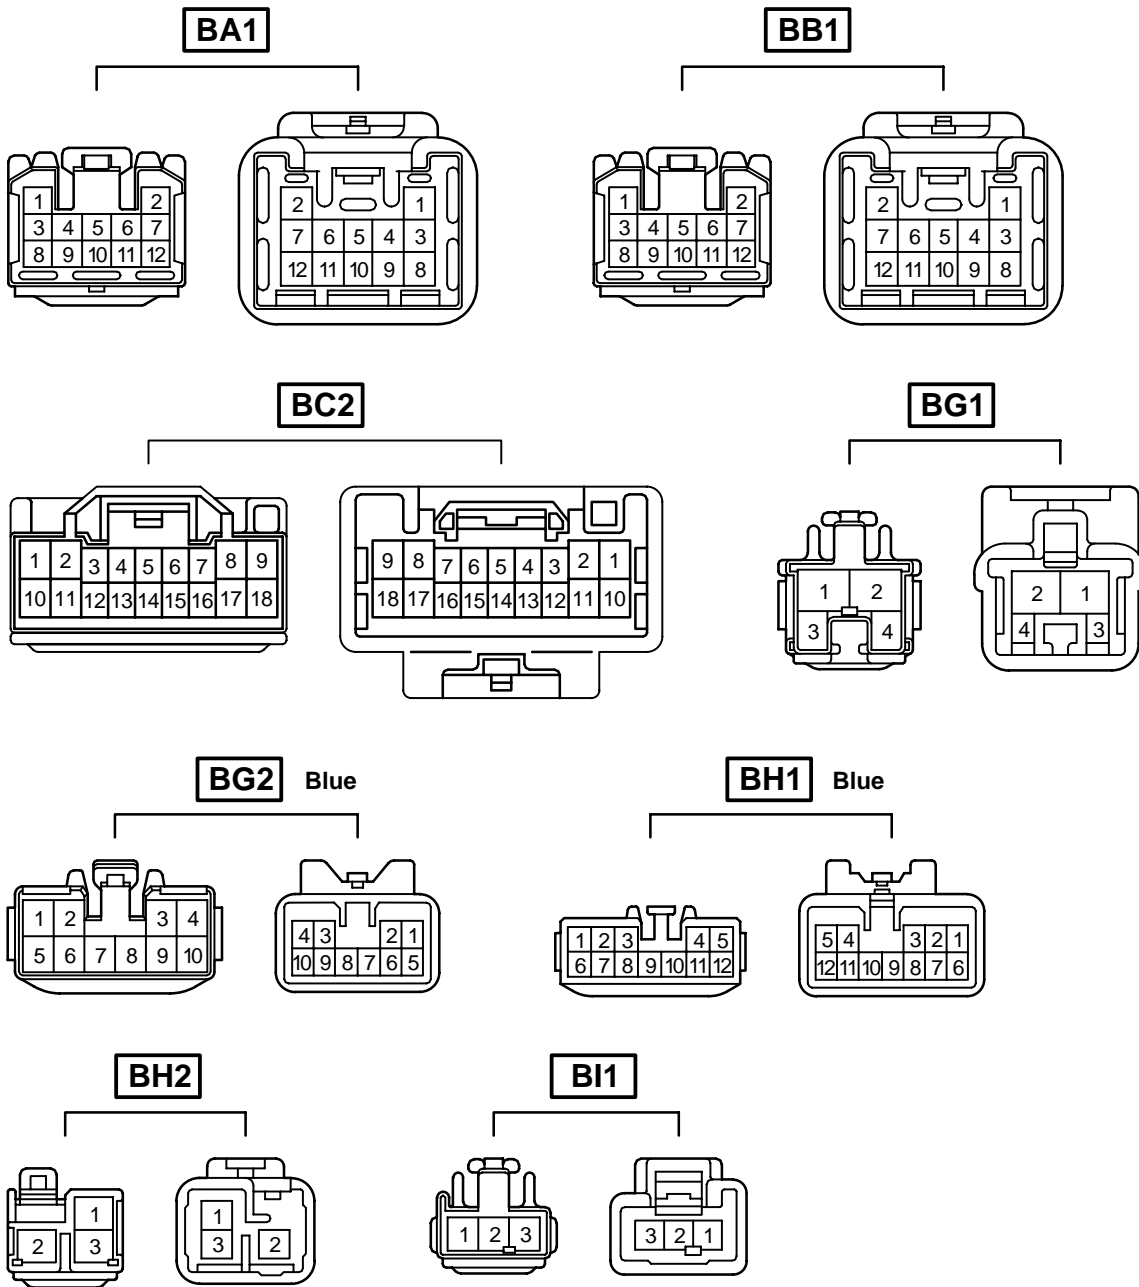

Code	Joining Wire Harness and Wire Harness (Connector Location)
BA1	Rear Door No.2 Wire and Floor No.2 Wire (Left Center Pillar)
BB1	Rear Door No.1 Wire and Floor Wire (Right Center Pillar)
BC2	Floor No.2 Wire and Floor Wire (Right Floor Partition Panel Center)
BG1	Back Door No.1 Wire and Floor No.2 Wire (Left Side of the Back Panel Upper)
BG2	Back Door No.1 Wire and Back Door No.2 Wire (Left Side of the Back Panel Lower)
BH1	Back Door No.1 Wire and Back Door No.2 Wire (Left Side of the Back Panel Lower)
BH2	Sensor Wire and Floor No.2 Wire (Lower Back Panel LH)
BI1	Sensor Wire and Floor No.2 Wire (Lower Back Panel LH)