


## Connector Joining Wire Harness and Wire Harness

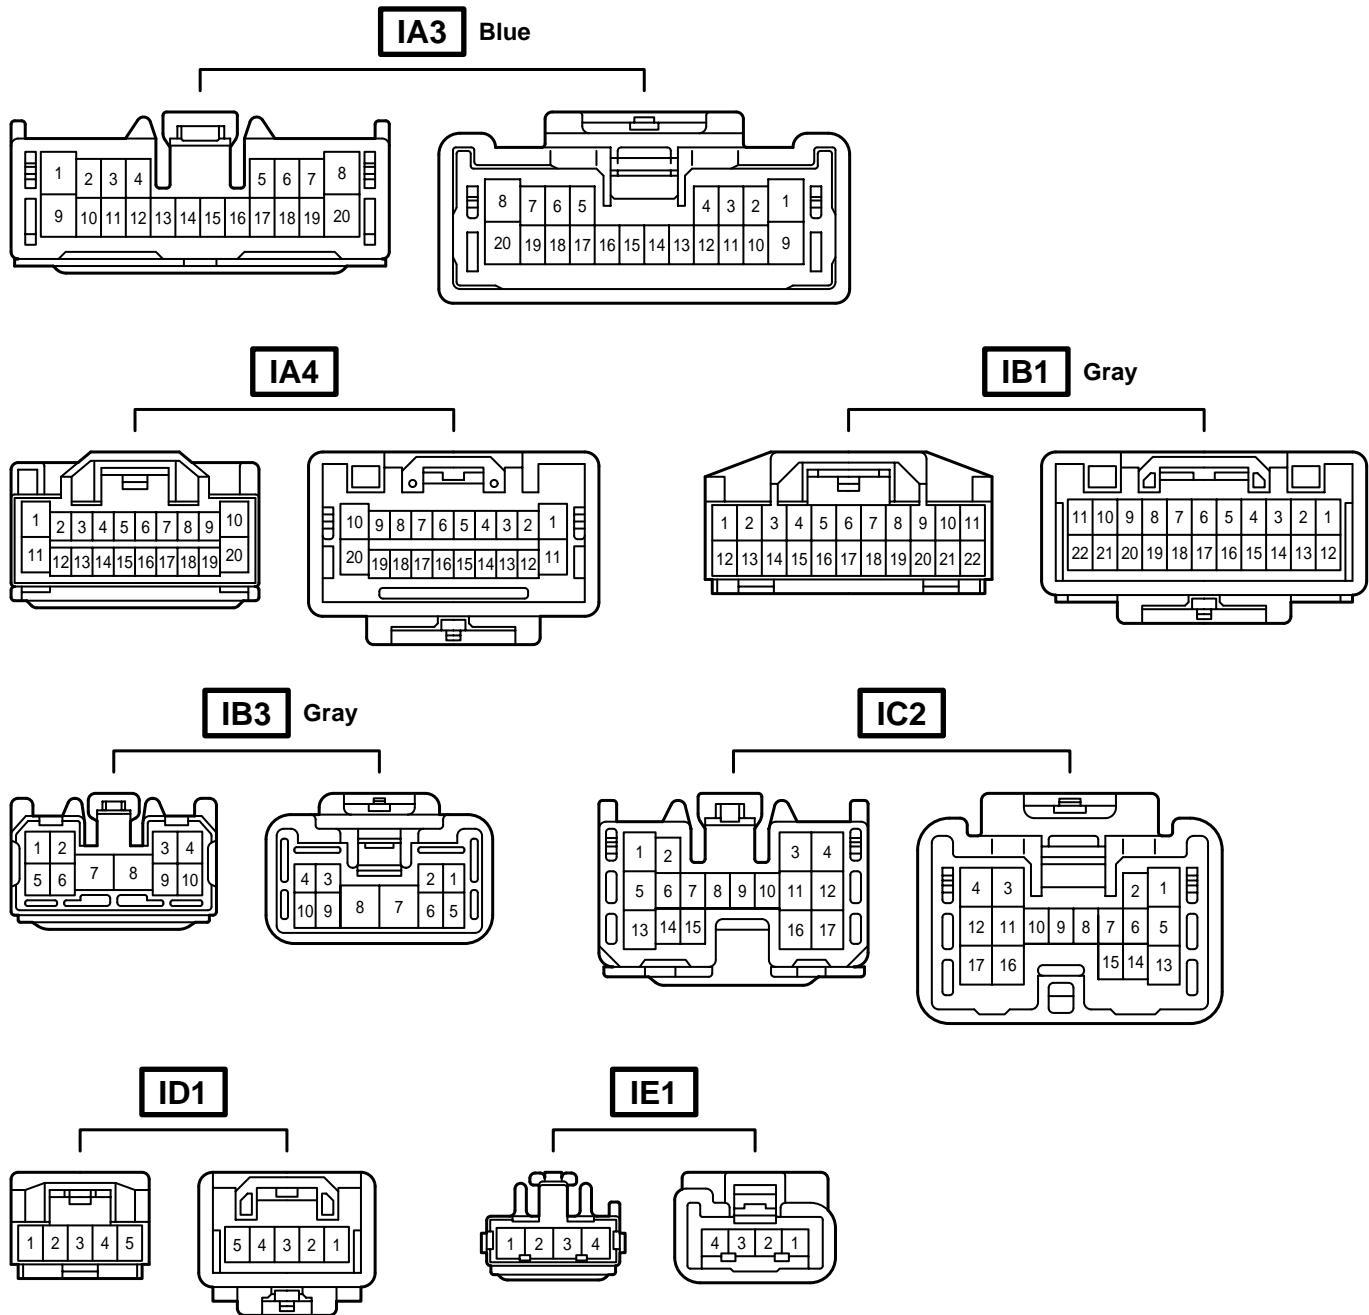

Code	Joining Wire Harness and Wire Harness (Connector Location)
IA3	Instrument Panel Wire and Engine Room Main Wire (Near the Driver Side J/B)
IA4	Instrument Panel Wire and Engine Room Main Wire (Near the Driver Side J/B)
IB1	Instrument Panel Wire and Floor No.2 Wire (Near the Driver Side J/B)
IB3	Instrument Panel Wire and Floor No.2 Wire (Near the Driver Side J/B)
IC2	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
ID1	Instrument Panel No.2 Wire and Instrument Panel Wire (Left Side of the Instrument Panel)
IE1	Floor No.3 Wire and Floor No.2 Wire (Near the Driver Side J/B)