


## Position of Parts in Engine Compartment

**[RHD : 2JZ-GE]**

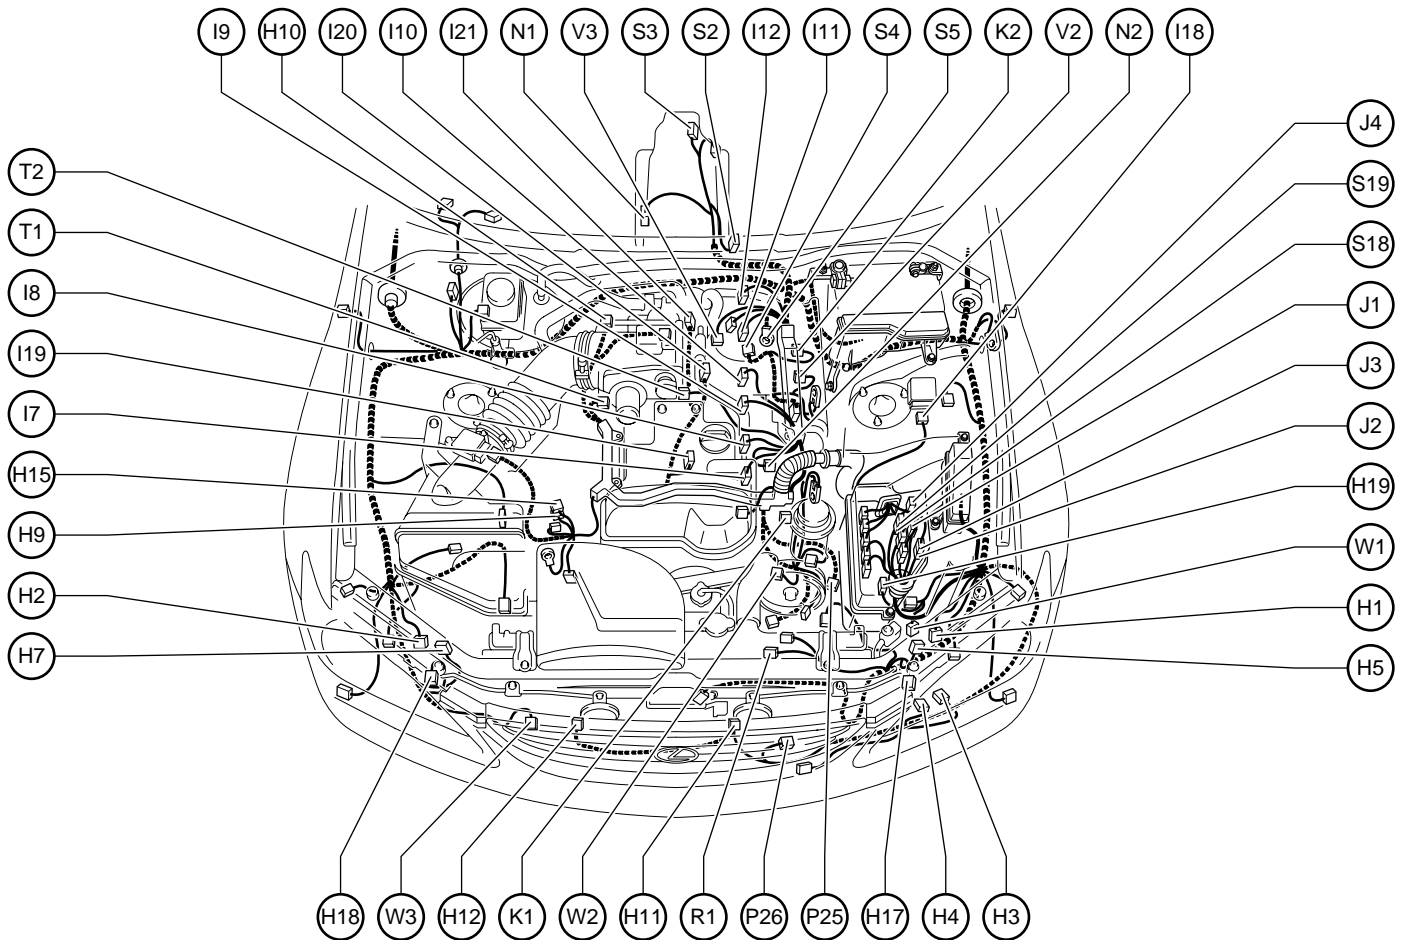

H 1 Headlight Beam Level Control Actuator LH  
 H 2 Headlight Beam Level Control Actuator RH  
 H 3 Headlight Cleaner Control Relay  
 H 4 Headlight Cleaner Motor  
 H 5 Headlight LH (High)  
 H 7 Headlight RH (High)  
 H 9 Heated Oxygen Sensor (Bank 1 Sensor 1)  
 H10 Heated Oxygen Sensor (Bank 2 Sensor 1)  
 H11 Horn LH  
 H12 Horn RH  
 H15 Heated Oxygen Sensor (Bank 1 Sensor 2)  
 H17 Headlight Control ECU LH  
 H18 Headlight Control ECU RH  
 H19 Height Control Sensor Front LH

I 7 Injector No.1  
 I 8 Injector No.2  
 I 9 Injector No.3  
 I10 Injector No.4  
 I11 Injector No.5  
 I12 Injector No.6  
 I18 Igniter  
 I19 Ignition Coil No.1  
 I20 Ignition Coil No.2  
 I21 Ignition Coil No.3

J 1 Junction Connector  
 J 2 Junction Connector  
 J 3 Junction Connector  
 J 4 Junction Connector

K 1 Knock Sensor 1  
 K 2 Knock Sensor 2

N 1 Neutral Start SW  
 N 2 Noise Filter (Ignition)

P25 Power Steering Oil Pressure Sensor  
 P26 Pressure SW

R 1 Radiator Fan Motor

S 2 Speed Sensor (Transmission Input)  
 S 3 Speed Sensor (Transmission Output)  
 S 4 Starter  
 S 5 Starter  
 S18 Short Connector  
 S19 Short Connector

T 1 Throttle Control Motor  
 T 2 Throttle Position Sensor

V 2 VSV (ACIS)  
 V 3 VSV (EVAP)

W 1 Washer Motor  
 W 2 Water Temp. Sensor  
 W 3 Water Temp. SW