

INSTRUCTIONS

English

Thank you for choosing this product. After correctly setting, the remote will support the following categories of devices:

Device key	Categories of devices covered
TV	TV / DTV Receiver / TDT
SAT	SAT / Decoder Cable / DVB-T
DVD	DVD / DVD-R
AUX	AUX / Audio / Amplifiers / Tuners / Receivers / Audio Tape Players / MINI Systems / Misc. / HTIB / Web & Computer TV / Scart Switch Boxes / Digital Set Top Boxes / Misc. Set Top Boxes / Media Receivers / Picture Frame / Media Center PC / Home Automation / Entertainment Box / Video On Demand
CD	CD / LD
HD	HDD-DVR
DVR	DVR / VCR

※ Warm tip

To control other devices not present on the panel of the remote, press any key to enter code of the device, and the device will be controllable with the remote.

Example:

For "TV" device, enter the codes of "VCR" from the code list, follow the setting method A, then "VCR" device can be controlled with the remote under "TV" mode.

* This operation is only for setting method "A. MANUALLY INPUT THE CORRESPONDING CODE".

* Using setting method B/C just can search the devices mentioned above. It cannot be used for the devices without the devices button.

< The remote control picture shown in the manual is only for setting reference, detailed information is in accordance with the final product. >

< 1 >


A MANUALLY INPUT THE CORRESPONDING CODE

1. Turn on the household appliances you want to control (such as TV, STB, DVD).
2. Look up the code list for the code corresponding to the brand of the household appliances you want to control. For example, if the brand of your household appliances is "AKAI", then the first code will be 5012.



CODE

AKAI 5012 5055 5060 5067 5093 5094 5095 5102 5120 5121 5122 5123 5124 5125 5126 5127 5128 5129 5130 5131 5132 5133 5134 5135 5136 5137 5138 5139 5140 5141 5142 5143 5144 5145 5146 5147 5148 5149 5150 5151 5152 5153 5154 5155 5156 5157 5158 5159 5160 5161 5162 5163 5164 5165 5166 5167 5168 5169 5170 5171 5172 5173 5174 5175 5176 5177 5178 5179 5180 5181 5182 5183 5184 5185 5186 5187 5188 5189 5190 5191 5192 5193 5194 5195 5196 5197 5198 5199 5200 5201 5202 5203 5204 5205 5206 5207 5208 5209 5210 5211 5212 5213 5214 5215 5216 5217 5218 5219 5220 5221 5222 5223 5224 5225 5226 5227 5228 5229 5230 5231 5232 5233 5234 5235 5236 5237 5238 5239 5240 5241 5242 5243 5244 5245 5246 5247 5248 5249 5250 5251 5252 5253 5254 5255 5256 5257 5258 5259 5260 5261 5262 5263 5264 5265 5266 5267 5268 5269 5270 5271 5272 5273 5274 5275 5276 5277 5278 5279 5280 5281 5282 5283 5284 5285 5286 5287 5288 5289 5290 5291 5292 5293 5294 5295 5296 5297 5298 5299 5300 5301 5302 5303 5304 5305 5306 5307 5308 5309 5310 5311 5312 5313 5314 5315 5316 5317 5318 5319 5320 5321 5322 5323 5324 5325 5326 5327 5328 5329 5330 5331 5332 5333 5334 5335 5336 5337 5338 5339 5340 5341 5342 5343 5344 5345 5346 5347 5348 5349 5350 5351 5352 5353 5354 5355 5356 5357 5358 5359 5360 5361 5362 5363 5364 5365 5366 5367 5368 5369 5370 5371 5372 5373 5374 5375 5376 5377 5378 5379 5380 5381 5382 5383 5384 5385 5386 5387 5388 5389 5390 5391 5392 5393 5394 5395 5396 5397 5398 5399 5400 5401 5402 5403 5404 5405 5406 5407 5408 5409 5410 5411 5412 5413 5414 5415 5416 5417 5418 5419 5420 5421 5422 5423 5424 5425 5426 5427 5428 5429 5430 5431 5432 5433 5434 5435 5436 5437 5438 5439 5440 5441 5442 5443 5444 5445 5446 5447 5448 5449 5450 5451 5452 5453 5454 5455 5456 5457 5458 5459 5460 5461 5462 5463 5464 5465 5466 5467 5468 5469 5470 5471 5472 5473 5474 5475 5476 5477 5478 5479 5480 5481 5482 5483 5484 5485 5486 5487 5488 5489 5490 5491 5492 5493 5494 5495 5496 5497 5498 5499 5500 5501 5502 5503 5504 5505 5506 5507 5508 5509 5510 5511 5512 5513 5514 5515 5516 5517 5518 5519 5520 5521 5522 5523 5524 5525 5526 5527 5528 5529 5530 5531 5532 5533 5534 5535 5536 5537 5538 5539 5540 5541 5542 5543 5544 5545 5546 5547 5548 5549 5550 5551 5552 5553 5554 5555 5556 5557 5558 5559 5560 5561 5562 5563 5564 5565 5566 5567 5568 5569 5570 5571 5572 5573 5574 5575 5576 5577 5578 5579 5580 5581 5582 5583 5584 5585 5586 5587 5588 5589 5590 5591 5592 5593 5594 5595 5596 5597 5598 5599 5600 5601 5602 5603 5604 5605 5606 5607 5608 5609 5610 5611 5612 5613 5614 5615 5616 5617 5618 5619 5620 5621 5622 5623 5624 5625 5626 5627 5628 5629 5630 5631 5632 5633 5634 5635 5636 5637 5638 5639 5640 5641 5642 5643 5644 5645 5646 5647 5648 5649 5650 5651 5652 5653 5654 5655 5656 5657 5658 5659 5660 5661 5662 5663 5664 5665 5666 5667 5668 5669 5670 5671 5672 5673 5674 5675 5676 5677 5678 5679 5680 5681 5682 5683 5684 5685 5686 5687 5688 5689 5690 5691 5692 5693 5694 5695 5696 5697 5698 5699 5700 5701 5702 5703 5704 5705 5706 5707 5708 5709 5710 5711 5712 5713 5714 5715 5716 5717 5718 5719 5720 5721 5722 5723 5724 5725 5726 5727 5728 5729 5730 5731 5732 5733 5734 5735 5736 5737 5738 5739 5740 5741 5742 5743 5744 5745 5746 5747 5748 5749 5750 5751 5752 5753 5754 5755 5756 5757 5758 5759 5760 5761 5762 5763 5764 5765 5766 5767 5768 5769 5770 5771 5772 5773 5774 5775 5776 5777 5778 5779 5780 5781 5782 5783 5784 5785 5786 5787 5788 5789 5790 5791 5792 5793 5794 5795 5796 5797 5798 5799 5800 5801 5802 5803 5804 5805 5806 5807 5808 5809 5810 5811 5812 5813 5814 5815 5816 5817 5818 5819 5820 5821 5822 5823 5824 5825 5826 5827 5828 5829 5830 5831 5832 5833 5834 5835 5836 5837 5838 5839 5840 5841 5842 5843 5844 5845 5846 5847 5848 5849 5850 5851 5852 5853 5854 5855 5856 5857 5858 5859 5860 5861 5862 5863 5864 5865 5866 5867 5868 5869 5870 5871 5872 5873 5874 5875 5876 5877 5878 5879 5880 5881 5882 5883 5884 5885 5886 5887 5888 5889 5890 5891 5892 5893 5894 5895 5896 5897 5898 5899 5900 5901 5902 5903 5904 5905 5906 5907 5908 5909 5910 5911 5912 5913 5914 5915 5916 5917 5918 5919 5920 5921 5922 5923 5924 5925 5926 5927 5928 5929 5930 5931 5932 5933 5934 5935 5936 5937 5938 5939 5940 5941 5942 5943 5944 5945 5946 5947 5948 5949 5950 5951 5952 5953 5954 5955 5956 5957 5958 5959 5960 5961 5962 5963 5964 5965 5966 5967 5968 5969 5970 5971 5972 5973 5974 5975 5976 5977 5978 5979 5980 5981 5982 5983 5984 5985 5986 5987 5988 5989 5990 5991 5992 5993 5994 5995 5996 5997 5998 5999 6000


3. Press the device category key (such as "TV" key), and the indicator light will twinkle once

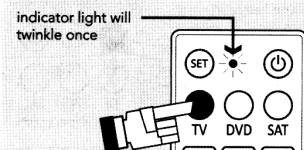

4. Press on the "SETUP" (SET) key until the indicator light lights and keeps shining; input successively the four-digit code you found. Note: when you input one-digit number, the indicator light will twinkle once. When you finish your inputting, the indicator light will quench.

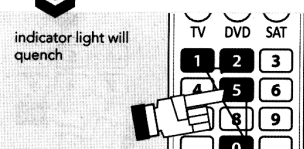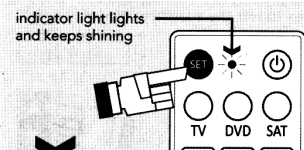


5. Check whether each function key of the remote control operates normally, if it does, it represents that the corresponding setting is successful; if some of the function keys don't operate normally, please repeat procedure 4 and input other code of the corresponding brand




< 2 >

B MANUALLY SEARCH FOR THE CORRESPONDING CODE



1. Turn on the household appliances you want to control (such as TV, STB, DVD)
2. Press the device category key (such as TV, SAT, DVD), and the indicator light will twinkle once

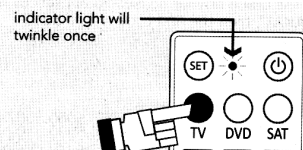

3. Press on the "SETUP" (SET) key until the indicator light lights and keeps shining

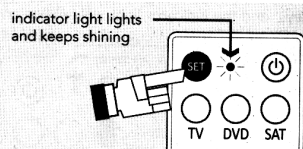

1. Point the remote control towards the infrared reception window of the equipment you're going to control, and press on "CH+" (P+) key at certain intervals (with the interval being less than 1.5s, or the remote control will enter into the automatic searching mode) until the channel of the equipment changes, then you should loose the "CH+" (P+) key at once, and then press "OK" key to exit the searching mode.

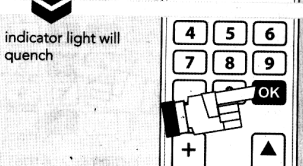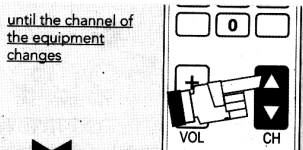


Attention:

If the equipment doesn't have "CH+" (P+) function, you may use the "PLAY" key or the "POWER" key instead, and when the equipment's status begin to change, press "OK" key to exit.


Check whether every function keys of the remote control work normally, if it does, the setting is successful; if not, please repeat procedure 3-4.

C FULL-AUTOMATIC SEARCHING FOR CODE



1. Turn on the household appliances you want to control (such as TV, STB, DVD)
2. Press the device category key (such as TV, SAT, DVD), and the indicator light will twinkle once

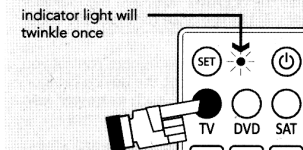

3. Press on the "SETUP" (SET) key until the indicator light lights and keeps shining

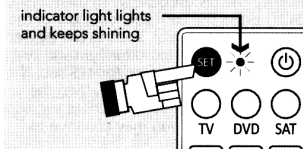

4. Point the remote control towards the infrared reception window of the equipment you're going to control, press "Channel +" (CH+/P+), enter the status for automatic search as the indicator flashes rapidly, the remote transmits a set of codes every second. When the device responds, press "OK" key quickly and exit search status.

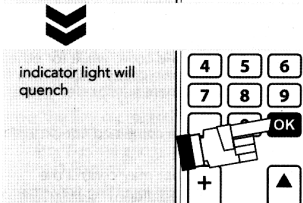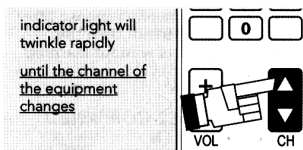

Attention:

If the equipment doesn't have "CH+" (P+) function, you may use the "PLAY" key or the "POWER" key instead, and when the equipment's status begin to change, press "OK" key to exit.

5. Check whether every function keys of the remote control work normally, if it does, the setting is successful; if not, please repeat procedure 3-4.

HOW TO SET LEARN FUNCTION

1. Press the category key of the equipment you want to learn (such as TV, SAT, DVD), and the indicator light will twinkle once
2. Press on the "SETUP" (SET) key until the indicator light lights and keeps shining
3. Press the "LEARN" key, and the indicator light will twinkle once (or input the code 9980)
4. Press the keys of this remote control you want to learn (except the device category key, SETUP, LEARN), such as power key, and the indicator light will twinkle once
5. Lie flat the original remote control (the remote control to be learned) and this remote control, and align the infrared emission window of the two remote controls and keep the distance between them being 2-5CM; press the corresponding key of the original remote control, such as the power supply key, and the indicator light will keep on shining after quenching for 1-3 sec. If your learning is not successful, then the indicator light will twinkle for three sec and keeps shining, and you may continue to learning other keys
6. Repeat the procedure 5 to learn other keys, and when you finish your learning, press "SETUP" (SET) key to exit the learning mode

! Warm tip

Learning Function only work for some models. If there is not "Learn" key on the remote control or the indicator light has no response after entering code "9980", then this remote control is without learning function.

HOW TO USE COMBINED EQUIPMENTS

This is related with the equipments brands and the combined equipments (TV/VCR, DVD/VCR etc.) types, for some of them, it will be ok to input one code, while for others, it requires to input two codes respectively for two different equipment keys; refer to the code list for detail.

1. Manually turn on the combined equipments you want to control.
2. Find out the code that may control the equipment in the code inputting way, manual searching way or automatic searching way according to the above hint.
3. If you can't control the other equipment, then repeat procedure 2

SEARCHING FOR THE CURRENT CODE

After the manual searching or the automatic searching is successful, if you want to know the code that controls your household appliances, please operate according to the following procedures:

< 5 >

1. Press the category key of the equipment you want to inquire (such as TV, SAT, DVD), and the indicator light will twinkle once
2. Press on the "SETUP" (SET) key until the indicator light lights and keeps shining
3. Press the "SETUP" (SET) key once again, and after twinking once, the indicator light will keeps shining
4. Press number 0-9 successively until the indicator light twinkles once, and the current number is just the first-digit number of the code
5. Repeat procedure 4, find out the 2nd-digit, 3rd-digit and 4th-digit number successively, and when you find out the 4th-digit number, the indicator light will quench

DELETE ALL THE LEARNED KEYS OF CERTAIN EQUIPMENT

1. Press the device category key you want to delete (such as TV, SAT, DVD), and the indicator light will twinkle once
2. Press on the "SETUP" (SET) key until the indicator light lights and keeps shining
3. Press the "LEARN" key twice, the indicator flashes once (or enter code "9981");
4. Press the number "1" key. All the learned keys of the equipment will be deleted

DELETE THE LEARNING OBJECTS OF ALL EQUIPMENTS

1. Press on the "SETUP" (SET) key until the indicator light lights and keeps shining
2. Press the "LEARN" key twice, the indicator flashes once (or enter code "9981");
3. Press the number "0" key. The learning objects of all equipments will be deleted

VOLUME CONTROL PENETRATING FUNCTION SETTING

By setting this function, you may, even if then the current controlled equipment is not TV, still be able to control TV equipment under the volume of TV control mode.

1. Press on the "SETUP" (SET) key until the indicator light lights and keeps shining
2. Press the "V+" (VOL+) key, and the indicator light lights and keeps shining
3. Press the key representing certain device (eg. TV, SAT, DVD, etc) to get through, the indicator flashes and goes out, and the setting is finished.

CANCEL VOLUME CONTROL PENETRATING FUNCTION

1. Press the corresponding device category key (such as TV, SAT, DVD), and the indicator light will twinkle once
2. Press on the "SETUP" (SET) key until the indicator light lights and keeps shining
3. Press the "V-" (VOL-) key, and the indicator light will quench after twinkling twice, the volume control penetrating function being cancelled.

< 6 >