


YS2R6X400E9183544 / ICL, Instrument cluster / O 1, Instrument cluster / ICL2 / E, Electronic control units / E33, Audio system

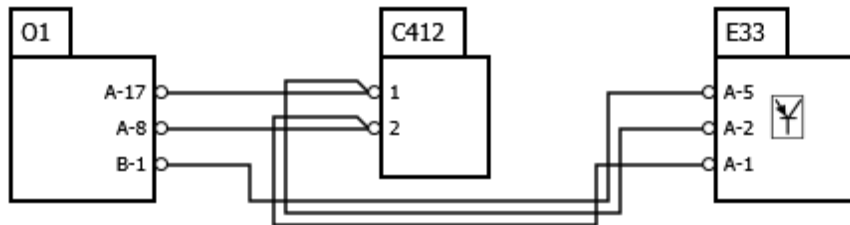

E33, Audio system

Audio system

Active when the audio system is switched on.

CD player, audio system

Active when the audio system is equipped with a CD player. For audio systems with navigator, the function is only active when a CD is in the CD player.

AUX input, audio system

Active when the AUX input is activated in audio systems with navigator. If the input is not activated, check that the AUX input is set to Audio. The AUX input is always activated in audio systems without navigator.

Bluetooth, audio system

Shows whether the audio system is equipped with Bluetooth.