


YS2R6X400E9183544 / ICL, Instrument cluster / O 1, Instrument cluster / ICL2 / T, Sensors and monitors / T27, Outdoor temperature sensor 1

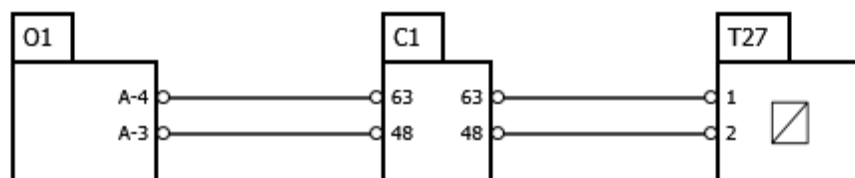

T27, Outdoor temperature sensor 1

T27, Outdoor temperature sensor 1

The outdoor temperature sensor records the air temperature outside the vehicle. The measured value is interpreted by the instrument cluster and presented to the driver. The instrument cluster also sends the temperature values to the engine management system and the climate system.

Sensor for measuring outside temperature. The value is presented in the instrument cluster.

Outdoor temperature sensor, temperature level

The temperature sensor value is displayed here in degrees Celsius. The value can be -40 - 100 degrees Celsius.