




## Lathe machine Read Head Installation instructions




support@accudro.com  
1-877-407-3515

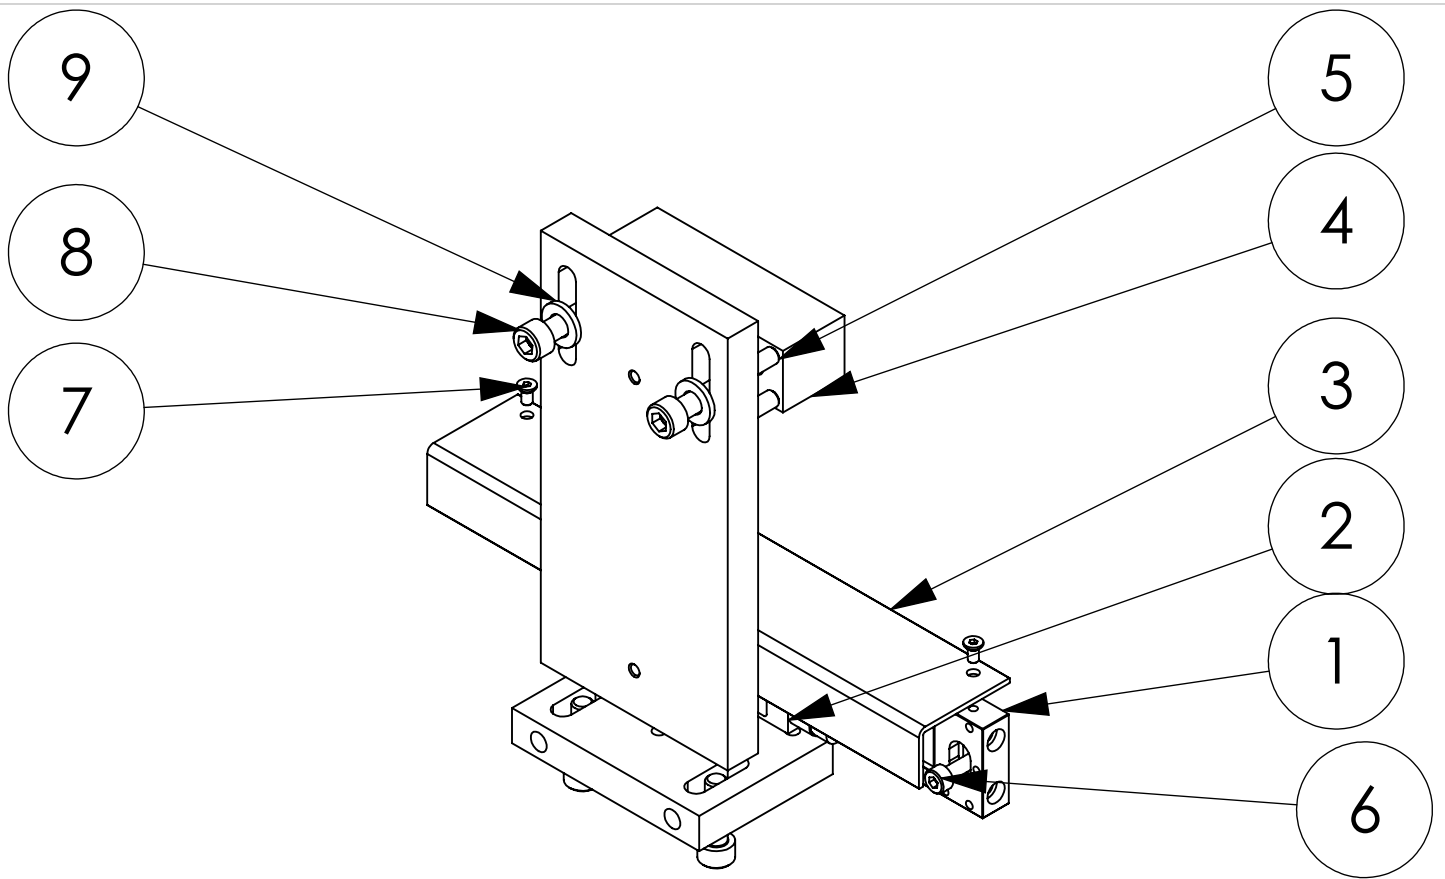

ITEM NO	DESCRIPTION	ITEM CODE	QTY.
1	Magnetic Scale		1
2	Magnetic head		1
3	Scale Gurad		1
4	R/H Bracket		3
5	Socket set flat point grub M5*15		4
6	Socket head cap screw -m4 * 16		4
7	Socket countrshank screw M3 * 5		2
8	Socket head cap screw -m6 * 20		6
9	Plane washer m6		4

<b>PROPRIETARY AND CONFIDENTIAL</b> THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF <INSERT COMPANY NAME HERE>. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF <INSERT COMPANY NAME HERE> IS PROHIBITED.			DIMENSIONS ARE IN INCHES TOLERANCES: FRACTIONAL ± ANGULAR: MACH ± BEND ± TWO PLACE DECIMAL ± THREE PLACE DECIMAL ±	<b>INNOVATIVE AUTOMATION PRODUCT</b>	
	NEXT ASSY	USED ON		<b>ME-6012-20 LATE BRACKET X AXIS ASSEMBLY</b>	
	APPLICATION				
			MATERIAL		
			FINISH		
			DO NOT SCALE DRAWING		

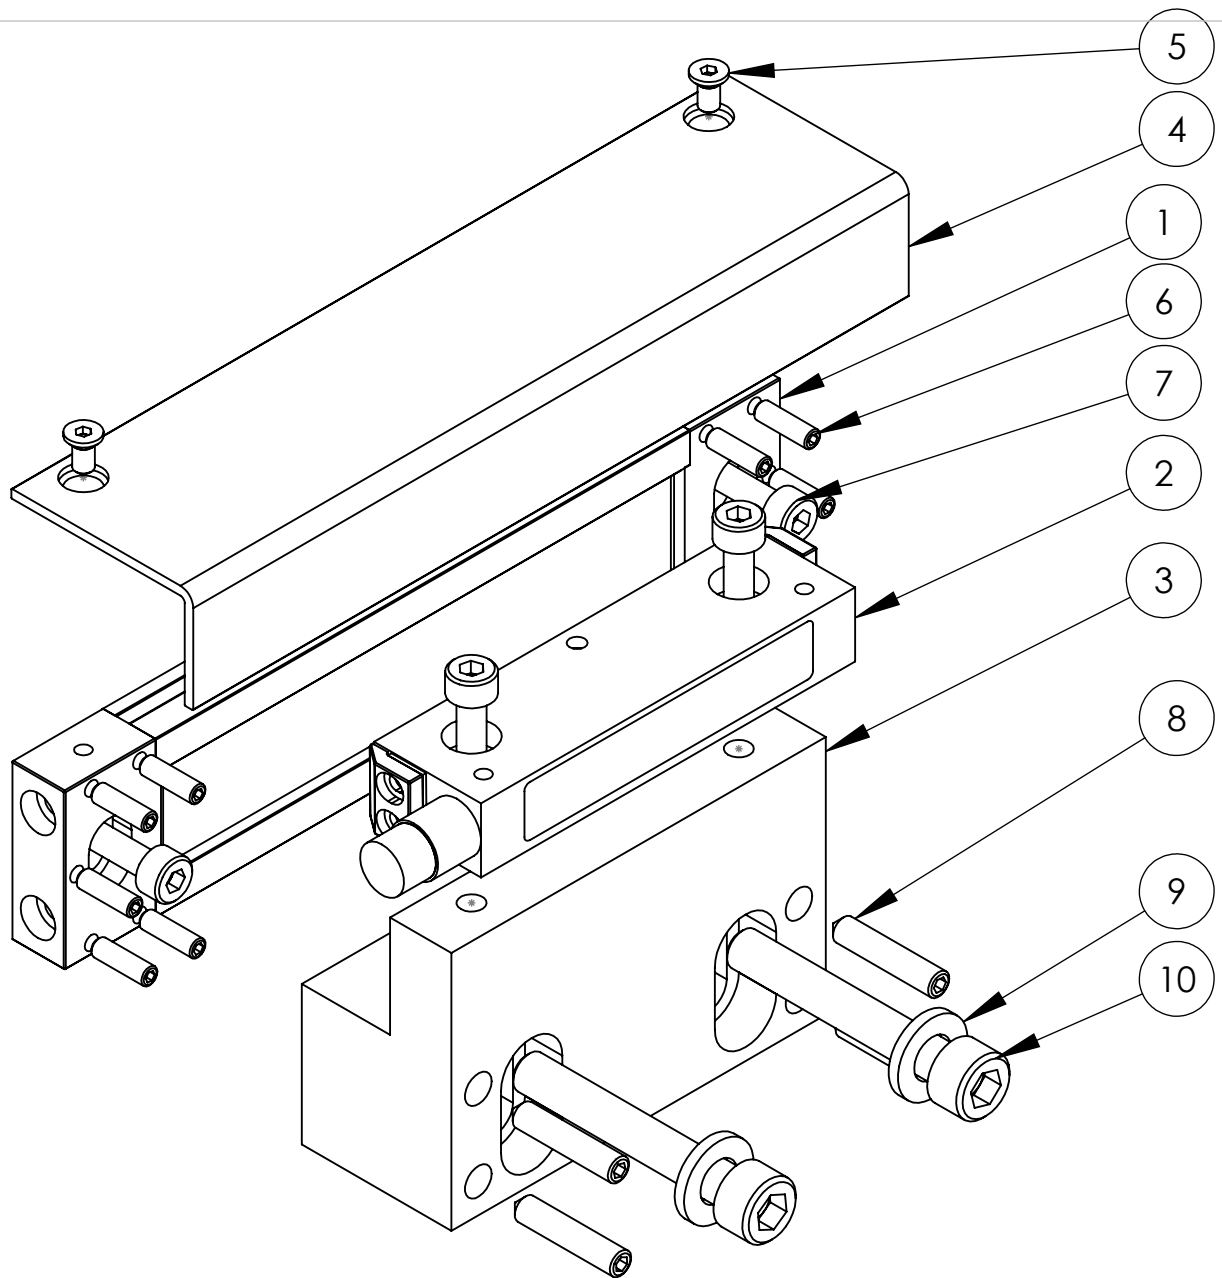

ITEM NO.	DESCRIPTION	ITEM CODE	QTY.
1	Magnetic Scale		1
2	Magnetic Head		1
3	R/H Bracket		1
4	Scale Guard		1
5	Countersunk Screw m3* 5		2
6	Socket set flat point grub m3*10		10
7	Socket head cap screw -m4 * 16		4
8	Socket set flat point grub m5*10		4
9	Plane washer m6		2
10	Socket head cap screw -m6 * 35		2

**PROPRIETARY AND CONFIDENTIAL**

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF <INSERT COMPANY NAME HERE>. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF <INSERT COMPANY NAME HERE> IS PROHIBITED.

**INNOVATIVE AUTOMATION PRODUCT**

**ME -6012-20 LATHE BRACKET Y AXIS ASSEMBLY**

