

Smart Call Center Phone Fix

THIS IS NOT AN OFFICIAL TECHNICAL PUBLICATION. THIS KNOWLEDGE BASE ENTRY IS THE PROPERTY OF CANON U.S.A. AND IS CONFIDENTIAL INFORMATION TO BE RETAINED FOR REFERENCE PURPOSES BY THE AUTHORIZED DEALER WITH WHOM SERVICE AGREEMENTS HAVE BEEN ENTERED INTO. USER AGREES TO INDEMNIFY CANON U.S.A., INC. AND TO HOLD IT HARMLESS AGAINST ANY CLAIM ARISING BY REASON OF THE POSSESSION OR USE THEREOF ITS UNAUTHORIZED USE IS PROHIBITED.

Product:

imageRUNNER ADVANCE C5000 Series

Title:

0205 Jam Code

Problem:

A jam code of 0205 is displayed on the user interface. This is an indication that there is a piece of paper jammed in the main unit of the machine.

Solution:

Fixing Unit (Inside the Main Unit)

If a paper jam occurs in the fixing unit area, a screen prompting you to remove the jammed paper appears on the touch panel display. Check the location of the paper jam, and follow the procedure described below, and the procedure that appears on the touch panel display, to remove the jammed paper.


CAUTION

The fixing unit and its surroundings inside the machine may become hot during use. When removing jammed paper or when inspecting the inside of the machine, do not touch the fixing unit and its surroundings, as doing so may result in burns or electrical shock.


1 Grip the handle, and open the lower right and upper right covers of the machine.

If the Paper Deck Unit-B1 is attached to the main unit, move the paper deck away from the main unit before proceeding with this procedure. For more information, see e-Manual > Optional Products.

If the Copy Tray-J1 is attached to the main unit, remove all output paper from the tray. For more information, see e-Manual > Optional Products.

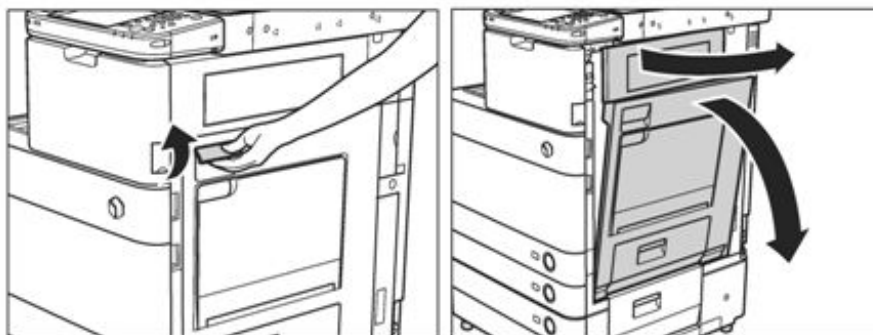

2 Pull down the upper cover of the fixing unit by its tab, and then remove any jammed paper.

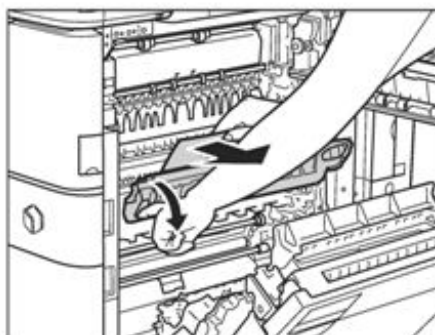

After the jammed paper is removed, return the upper cover of the fixing unit back to its original position.

CAUTION


The fixing unit and its surroundings are subject to high-temperatures. When removing jammed paper, take care not to touch anything in this area, except the jammed paper and the upper cover.

IMPORTANT

If you cannot remove the jammed paper, return the upper cover of the fixing unit back to its original position, and then remove the jammed paper from the lower part of the fixing unit.

3 Gently close the upper right cover and then close the lower right cover until it clicks into place in the closed position.

If the Paper Deck Unit-B1 was moved away from the main unit, reconnect it to the main unit. For more information, see e-Manual > Optional Products.

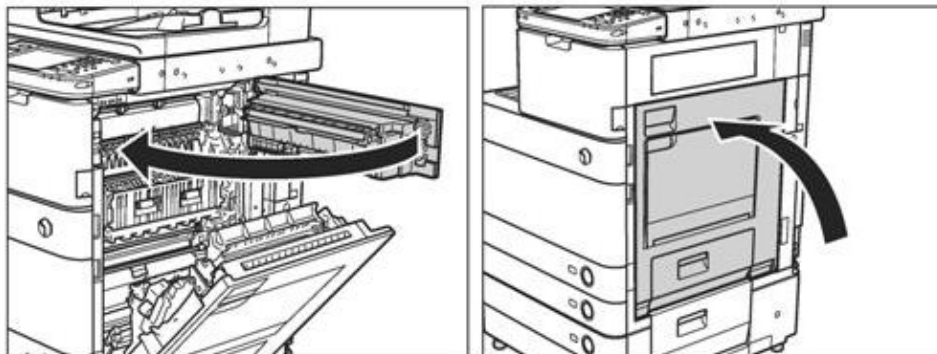

CAUTION

When closing the upper and lower right covers of the main unit, be careful not to get your fingers caught, as this may result in personal injury.

4 Follow the instructions on the touch panel display.

NOTE

The screen indicating the location of the paper jam repeatedly appears on the touch panel display until the paper jam is entirely cleared. For more information, see "Screens Indicating the Locations of Paper Jams," on p. 2-3.