


6.8 *Piston Screws Lubrication*

1. Lower feed and build pistons all the way down.

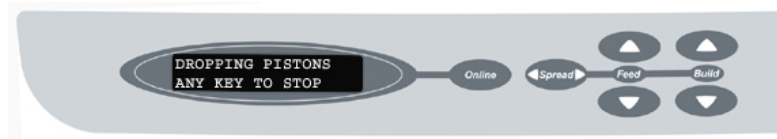

2. Open front cabinet tray.



3. Locate piston screws and apply grease onto the pistons from top to bottom.



4. Use your finger to distribute grease throughout pistons. Close front cabinet tray

