


### 6.7.2 Slow Axis Lubrication


1. Assemble grease gun as instructed on packaging.




2. Select 'Unpark' under the Service menu.

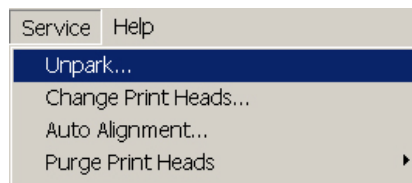


3. Open top cover.

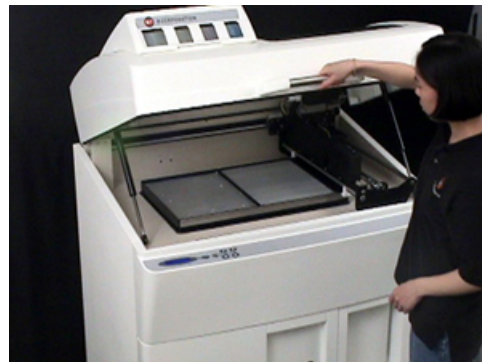


4. Wipe off slow axis rail.

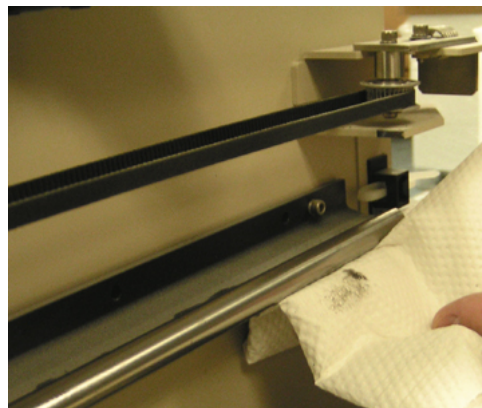

5. Locate the two grease fittings located behind the gantry. Manually move gantry if needed to gain access to grease fittings.

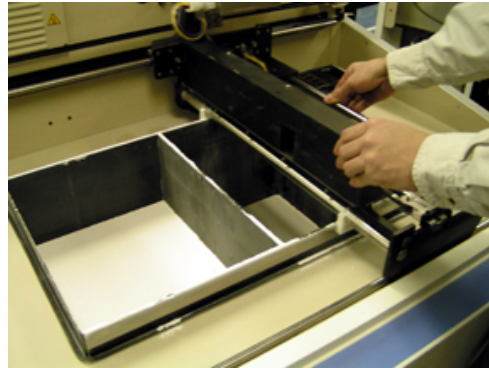


6. Engage the grease gun into the fittings and squeeze once.

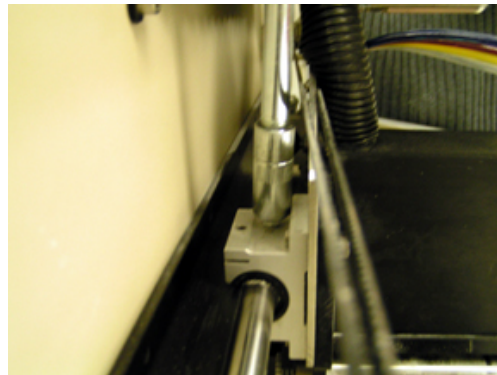

7. Wipe off excess grease with a dry paper towel.



8. Close top cover.

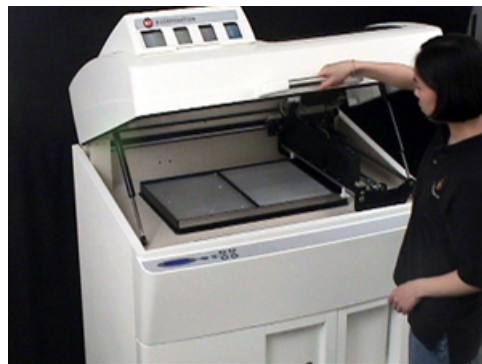

9. With the printer offline, press the 'Spread' button on the control panel to distribute the grease.

