


6.7.1 Fast Axis Lubrication


1. Assemble grease gun as instructed on packaging.




2. Unpark the gantry by choosing 'Unpark' under the Service menu.

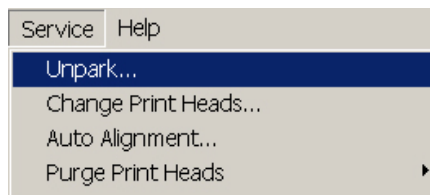


3. Open top cover.

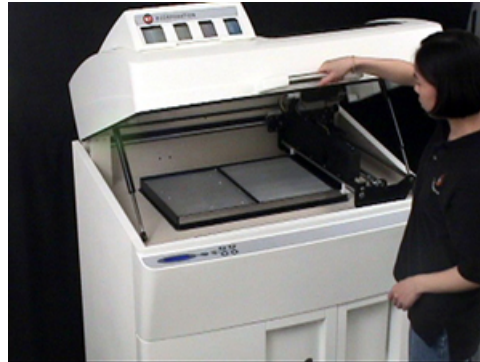


4. Wipe fast axis rails of residue with a dry paper towel.

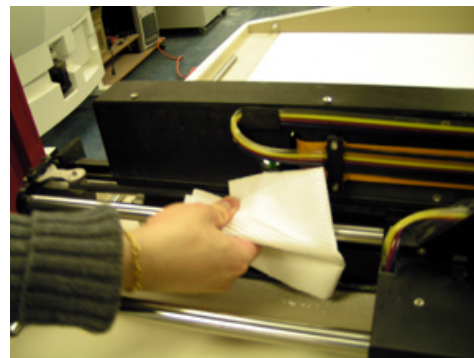

5. Place grease gun on grease fitting on carriage and squeeze once.

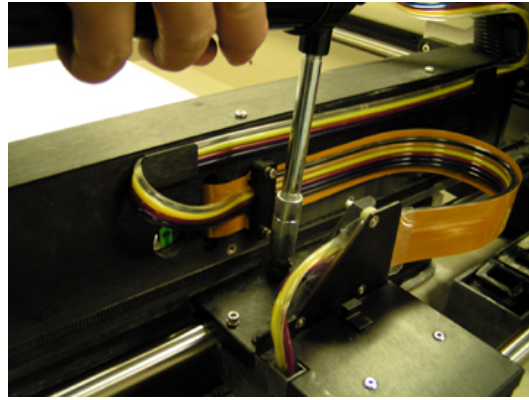

6. Wipe excess grease off with a dry paper towel.

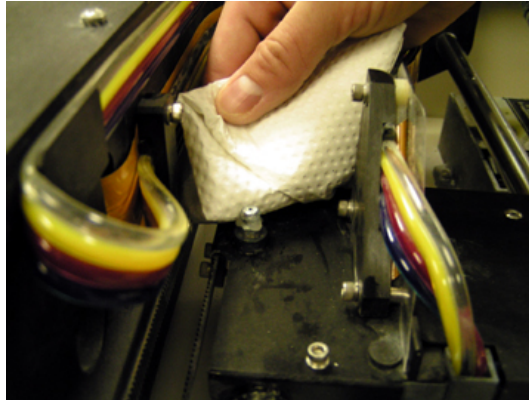

7. Move carriage back and forth manually to distribute the grease. Close top cover.

