

14x28 XY5 FLIPDOT PANELS

USER MANUAL

**Attention: Please read the manual carefully.
In case of any doubts or questions pls contact
Marcin Krynski at info@alfazeta.pl or +48 42 6891200,
mobile +48 501 072 086.
Please note that Poland is GMT+1**

Rev. 5.0 / 23JAN 2014



Alfa-Zeta Co. Ltd.
ul. Starorudzka 6a
93-418 Łódź
POLAND



tel. +48 42 689 12 00
tel. +48 42 689 12 01
tel. +48 42 689 12 02
fax +48 42 689 12 03



<http://www.alfazeta.pl>
<http://www.flipdots.com>
<http://www.swiatlowody.com>
<http://led.alfazeta.pl>

info@alfazeta.pl
info@flipdots.com
info@swiatlowody.com
info@alfazeta.pl


corporate website
visual information displays
fiber optic lighting
LED lighting



SAFETY PRECAUTIONS

- assemble process must be performed by qualified and authorized personnel only,
- always check connection before installing components,
- any additional installations must be made according to local safety regulations,
- assemble process must be performed by at least two qualified persons which read and understood this manual,
- anti-shock protection system must be made according to local regulations.

Handling precautions

- this is a delicate mechanical device. It is very easy to destroy grid of dots. Please always handle boards with care.
- Dots are removable and in case when in result of mishandling any dot is pressed too strong into its socket, you can try to repair it by taking it out by means of tweezers, straighten axes and place the dot again in its socket.

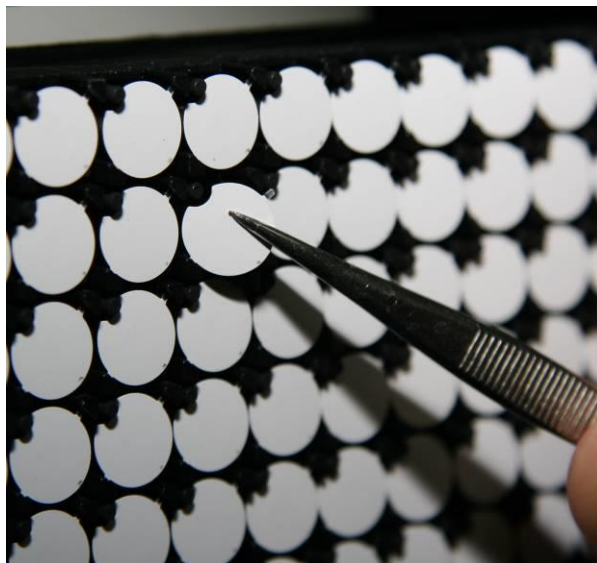

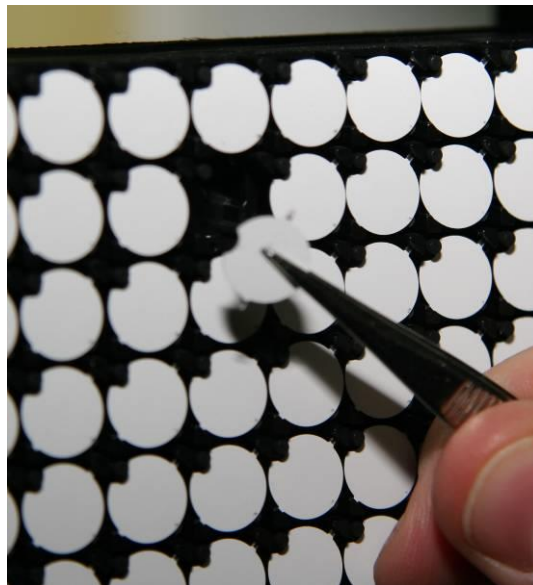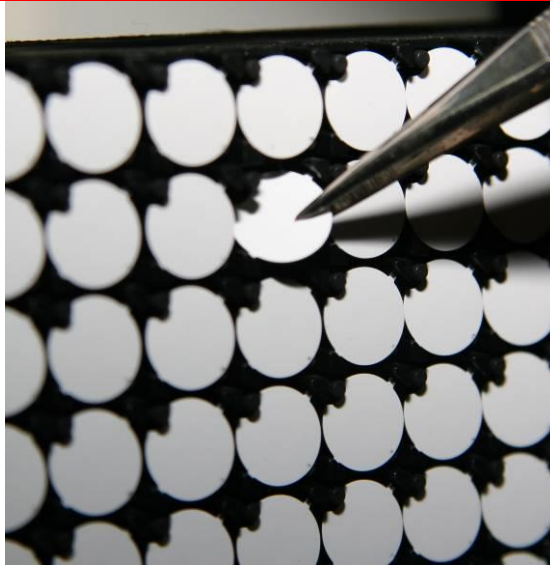

- If you need to place boards on their faces make sure that ALL dots are turned WHITE before doing it and place the dots on flat, clean, hard surface.
- This is extremely electrostatic sensitive device – try to avoid touching dots. It is also strongly advised that persons handling boards wear anti-Electro Static Discharge equipment (wristbands, coat, etc.)
- This is extremely dust sensitive device. Please make sure that you handle and install it in a dust free environment. Especially harmful are metal chips and particles.
NEVER DRILL HOLES WITH BOARDS INSTALLED!!
- Always take columns by edges. Never move columns by gripping display panels.

- In case of 'lazy' or 'slow' dots, you can try to clean them. Remove dot, check if there are no dust, hair, metal particles in the socket and on the dot (around axis) and re-install it carefully. You have a few spare dots: always consider replacing with a new one.
- After longer delay in usage, it may happen that some dots become 'lazy' or 'blocked'. This is a normal situation and does not mean that they broke. It usually helps to run fast black – white flip – flop program for 15 – 20 minutes
- ALWAYS disconnect power supply while making any operations.
- Spare boards can be stored on flat clean surfaces with all dots turned white. They can be also packed with protection cardboard at dot's side.

Every display module is equipped with display elements board and control board. They are connected together by means of multi-pin connector. Every module needs the following connections:

- 24V (+ and -)
- RS485 (+ and -)

PLEASE DISREGARD ALL OTHER CONNECTIONS.

See below description of connections:

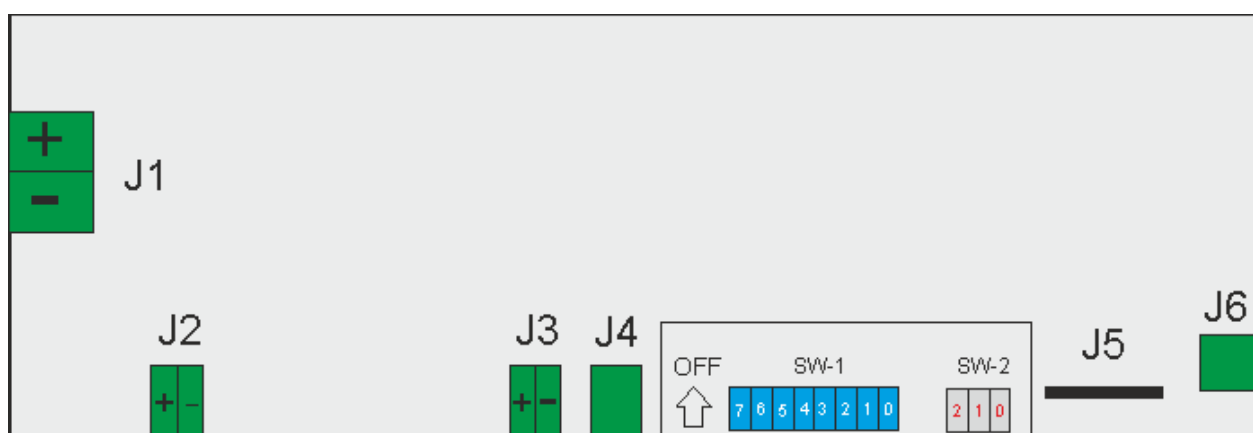


Image 1. Description of inputs / outputs

Name	Description
J1	24V DC Power supply. Please observe polarity.
J2	Optional socket 5V DC for external devices. Not always soldered in.
J3	RS485 input connection. Keep the same polarity along the line.
J4	Optional GND socket for external devices. Not always soldered in.
J5	Ribbon cable connector for extension modules.
J6	Power supply for extension modules.
SW-1	See below for explanation
SW-2	See below for explanation

Dip Switch SW-2 – speed of transmission.

Value	ON			Speed
	1	2	3	
0	↓	↓	↓	N/A
1	↑	↓	↓	N/A
2	↓	↑	↓	N/A
3	↑	↑	↓	9600
4	↓	↓	↑	19200
5	↑	↓	↑	38400
6	↓	↑	↑	57600
7	↑	↑	↑	9600
OFF				

Dip Switch SW-1 – address + test mode

<i>Position</i>	<i>Meaning</i>
0 – 5	Address in binary code (natural)
6 - 7	OFF/OFF – test mode OFF – normal reception of signals OFF / ON / all pixels are flipping black / white ON/ OFF columns and lines are 'moving' ON / ON one pixel is 'moving'

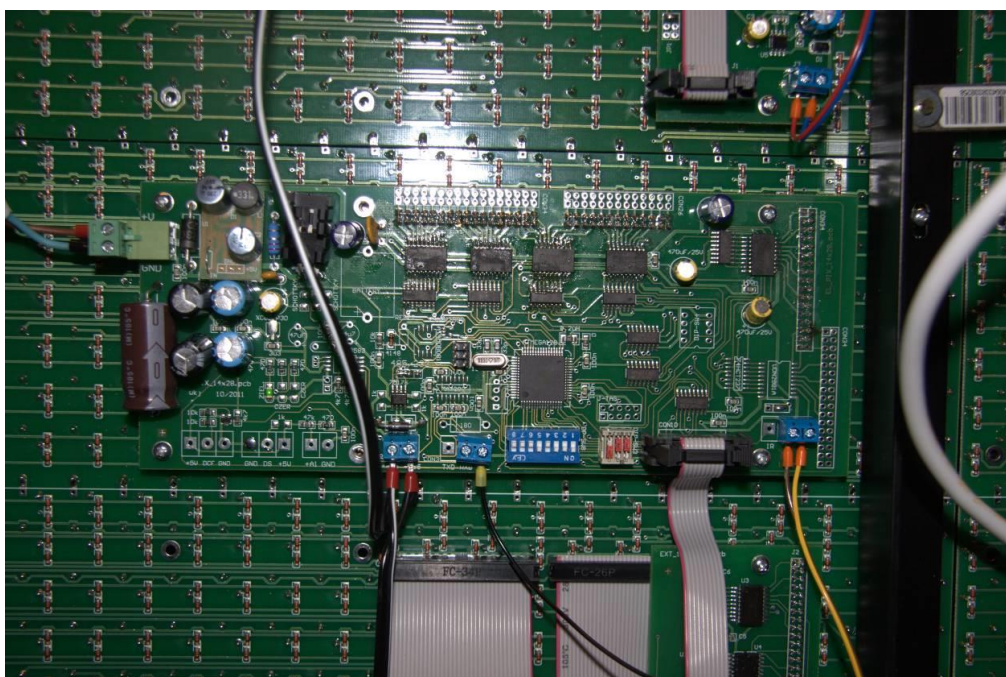


Image 2 A controller

Power consumption considerations

We measured time / energy needed to change one complete 14x28 panel from white to black and obtained the following results:

Max. current consumption	680mA
Idle current	40mA
Energy to swap one complete panel	160ms x 680mA
Max. voltage is	25V DC
Nominal voltage:	24V
Suggested power supplies:	0.8A / panel @ 24V

These above data and suggestions are assuming that you are using 2C configuration and that you are planning to maximize switch time. If power usage is your concern you can reduce by slowing down transmission. If you drive panels 2x slower, you can use 2x smaller power supplies.

Controller configuration options

14x28 panel is physically made of two 7x28 panels soldered onto one pcb but without any electrical connections between them. As a result the following driving configurations are theoretically possible:

C+3E	one controller and three extension boards for one 28x28 area
C+E	one controller and one extension board for one 14x28 area
2C	two controllers for one 14x28 are

The 2C configuration is currently the only available and allows to achieve the fastest refresh rate of the dots.

Cleaning and maintenance

The XY5 panels are mechanical device with small disks being turned by means of magnetic force.

It is strongly advised to protect displays with a housing in order to prevent dust build up.

There are two behaviors of disks which suggests mechanical problem which might be resolved by cleaning procedures:

- Slow or lazy disks - disks which are turning slower then the others or start turning later then the others
- Blocked disks which can't turn.

In order to verify if the disk is only blocked and it is not electrical failure, it is suggested to move manually the blocked disk while being magnetized. If it 'jumps to a right position it means that this dot requires extra cleaning.

Usage of vacuum cleaner.

Vacuum cleaner is a good device because it allows to remove dust from the sign. The main danger while using it is that if a suction force is too strong, it results in either removal of disks from their sockets or at least bending of axis. In both cases disks must be replaced with a new ones because sooner or later they will make problems.


On the other hand the suction force should be strong enough to remove the disks in a delicate manner. If usage of vacuum cleaner is planned, it is strongly advised to set its suction force to a minimum level and test from a distance of approx.. 5 cm if dust is being removed from the sign. In case of too strong force, increase distance or change vacuum cleaner to the one with smaller suction force. It is also advised to use a vacuum cleaner as a final stage of cleaning after usage of compressed air. The compressed air is removing dust from inside and the vacuum cleaner helps to remove them from the sign.

Damages caused by improper cleaning are not covered by a guarantee.

These are the mechanical problems which can prevent free rotation:


- a) Sockets of disks and disks axes are being blocked by hair or dust particles. In order to clean this point (marked by yellow arrows on the following drawing) it is suggested (in this order):

- i. Use compressed air to remove obstacles
- ii. Use vacuum cleaner set at minimum suction force to remove the obstacle
- iii. Take the disk away from its housing and manually remove obstacles (see 'Handling Precautions' chapter of this manual)
- iv. Replace a dot for a new one.

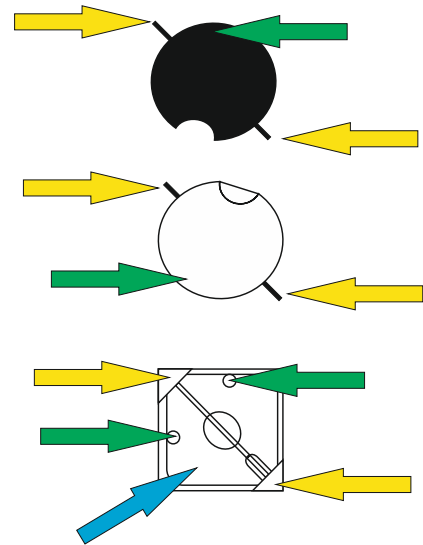

- b) Housing space (marked with blue arrow on the following drawing) can accommodate dust, hair and small metal particles. In order to remove them, it is suggested to perform the following steps (in this order)

- i. Use compressed air to remove obstacles
- ii. Use vacuum cleaner set to a minimum suction force to remove the obstacles
- iii. Remove disk and clean bottom of a housing with a cotton swab with a drop of 70% technical spirit

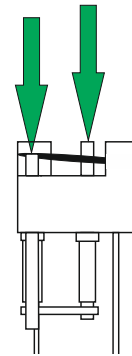

- c) Stator pins can glue to disks because of dust combined with humidity creates an adhesive substance. In order to remove it clean points indicated by green arrows on the following drawing with a cotton swab and a drop of 70% technical spirit. If this does not help, replace this disk.

A daily maintenance which should keep the sign dust free should include:

- Flip/flop program routine (especially after longer break in operation) at least 5 minutes or 10 minutes after longer than 2 days period of inactivity.
- In case of lazy / blocked disks – cleaning according to above procedures

Preventive maintenance

A preventive maintenance would allow to reduce number of blocked / lazy disks. Time period of this general cleaning is difficult to estimate because this is a function of dust level, humidity level, temperature, etc. A reasonable minimum would be once every 4 weeks however in case in increased number of blocking disks, this time period should be shorten.

Preventive maintenance should include:

- Cleaning disks with compressed air (speed of blowing at around 2s/14 dots, angle irrelevant, distance: around 3 cm from dots, assumed usage of technical compressed air containers. It is necessary to use clean air for this operation and to avoid condensation of humidity from this compressed air at disks)
- Cleaning of dots with a vacuum cleaner with regulated suction force and this suction force set to minimum. Distance not closer then 5 cm, angle irrelevant. **It is critical to make sure that suction force is not too strong and is not deflecting disks axes and/or pull the disks out of their sockets completely (see section Usage of vacuum cleaner)**

DO NOT use any kind of lubricants or grease. This may help for a while but later block the disks completely.