



Advanced Card Systems Ltd.
Card & Reader Technologies

ACR38 CCID Smart Card Reader



Casino Demo Guide



Table of Contents

1.0.	Getting Started	3
1.1.	Program Description	3
1.2.	Features	3
1.3.	Supported Card Type.....	3
1.4.	Supported Language	3
1.5.	Supported Driver Platform.....	3
1.6.	System Requirements.....	3
1.7.	Demo Visual Diagram	4
2.0.	Welcome Screen (Connection Screen)	5
3.0.	Main	6
4.0.	Bank Lobby.....	7
5.0.	Registration	8
6.0.	ATM Lobby	9
7.0.	ATM Terminal.....	10
8.0.	ATM Terminal Menu	11
9.0.	ATM (Balance Inquiry).....	12
10.0.	ATM (Transfer Fund To Card).....	13
11.0.	ATM (Withdraw)	14
12.0.	ATM (Transaction Log).....	15
13.0.	ATM (Change PIN)	16
14.0.	Casino Lobby.....	17
15.0.	Casino Slot Machine	18
16.0.	Exiting the Demo	19



1.0. Getting Started

1.1. Program Description

This Demo is an emulation of ATM and Slot Machine using ACR38 CCID smart card reader and ACOS card. It is a multi-application cash card where the same card can be used in ATMs and slot machines. The demo program also logs the last ten (10) Debit/Credit transaction history of the card where information such as Date & Time, Transaction Type, and Terminal ID can be retrieved.

1.2. Features

The demo simulates the following applications:

- smart card-enabled ATM application
- smart card-enabled Casino application

1.3. Supported Card Type

ACOS3 Card

1.4. Supported Language

English


1.5. Supported Driver Platform

ACR38 CCID PC/SC Driver

1.6. System Requirements

- IBM-Compatible Personal Computer with Intel 800 MHz or higher
- Microsoft Windows 98/ME/2000/XP/2003/Vista
- Resolution must be at least 800 X 600 pixel
- Color quality must be at least True Color (24 bit)
- DPI Settings must be Normal size (96 dpi)


1.7. Demo Visual Diagram

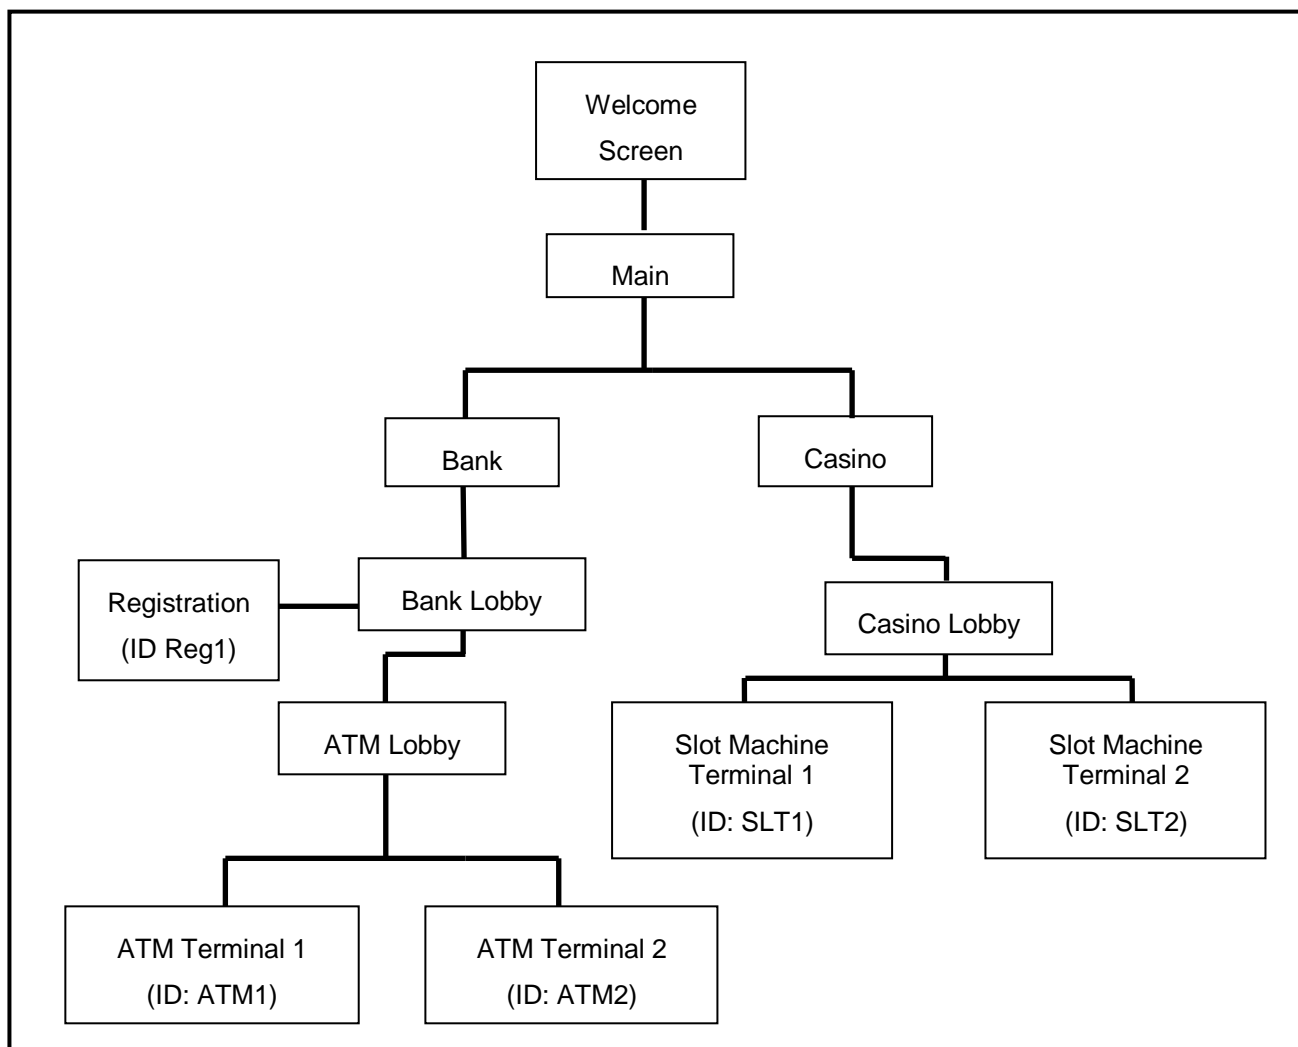



2.0. Welcome Screen (Connection Screen)


This is where you're going to set the ACR38 CCID reader connection. Choose the port where the ACR38 CCID reader is connected then click Enter.

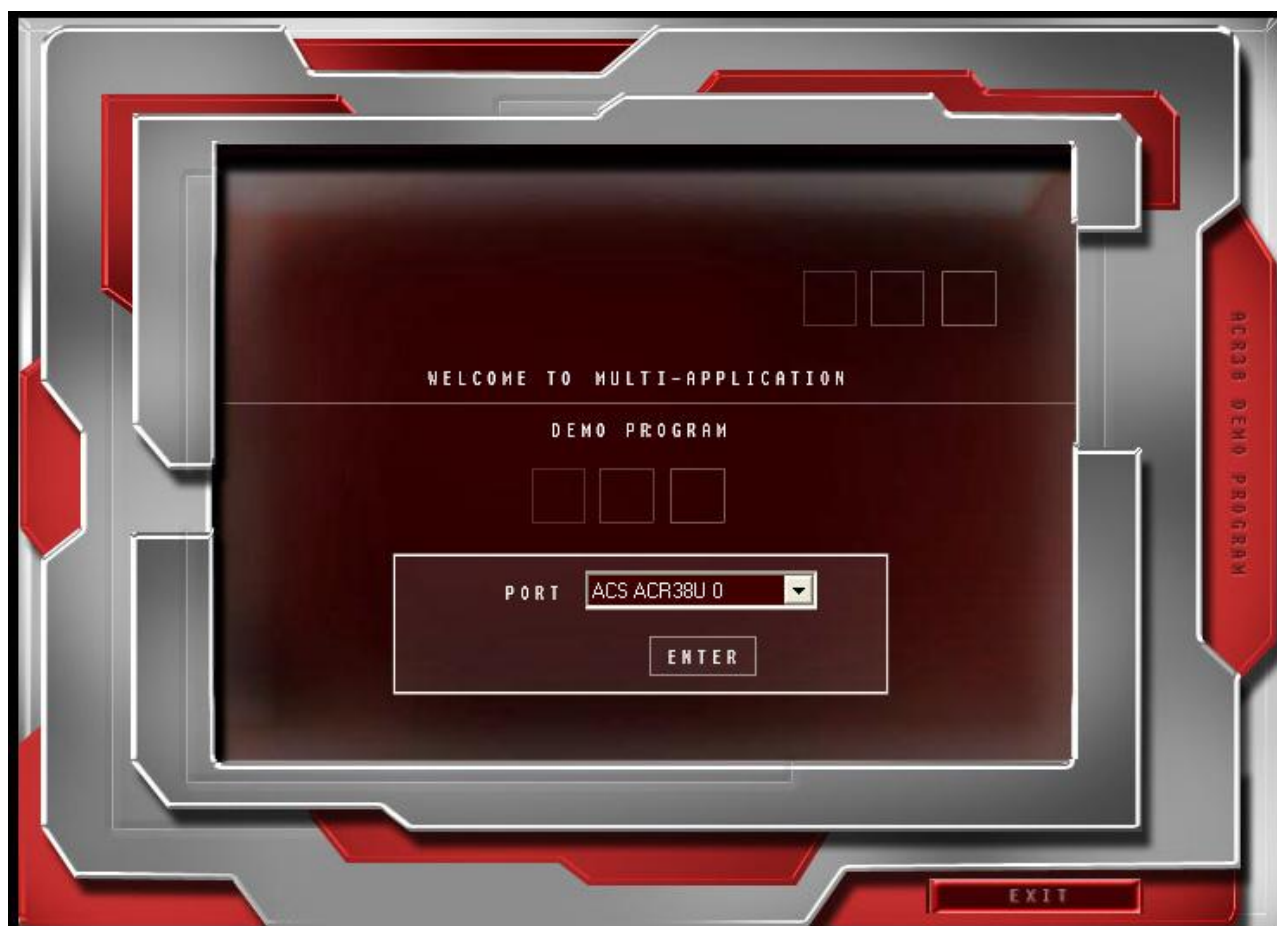

3.0. Main

Through this screen, you can choose to either go to the bank or to the casino.

If you haven't registered a card yet, you should go to the bank where the registration is located. See **Demo Visual Diagram** for applications' location.

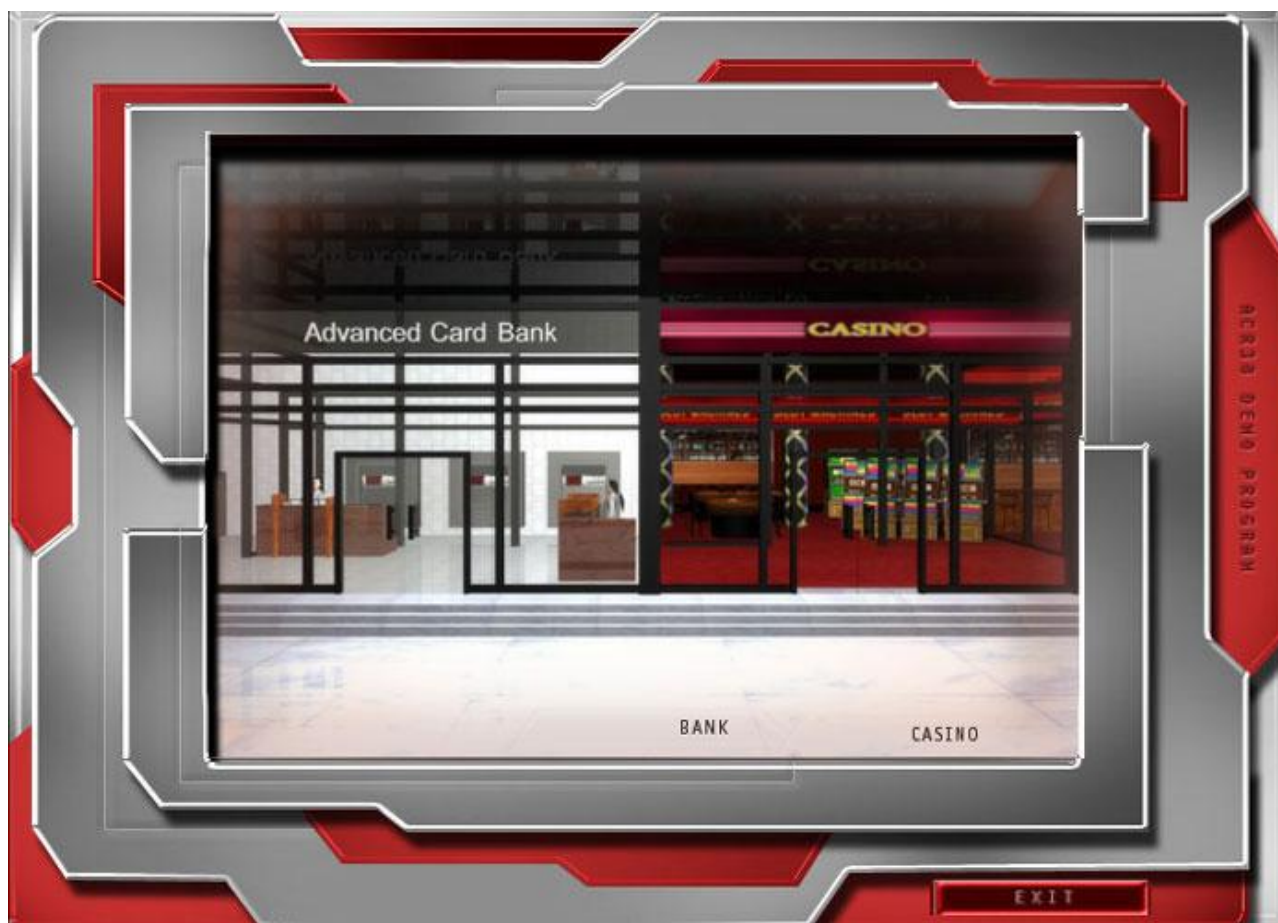

4.0. Bank Lobby

This is the bank lobby. From here you can choose to either go to registration, ATM machine or back to Main screen.





5.0. Registration

This is where you can format and initialize the card to be used in the ATM and slot machine demo. Just fill-up the information sheet and click SUBMIT. You need to register once only and it's set for the demo.

When the registration is done and you need to change the information you entered, modify the entries then click on UPDATE.

ACCOUNT NUMBER	1234567890	
NAME(FIRST/LAST)	Tere	Gonzales
AGE	24	
SEX (M/F)	F	
STATUS (S - SINGLE / M - MARRIED)	S	
ADDRESS	Manila, Philippines	
CONTACT NUMBER	N/A	
INITIAL BALANCE	1,000.00	
Default PIN(1234) Registration Done... Press Exit		
		UPDATE
		EXIT

6.0. ATM Lobby

This is where you can choose which ATM terminal you want to use.





7.0. ATM Terminal


Insert Card then Enter PIN Code, the default is 1234 and you can change this through this ATM Demo.





8.0. ATM Terminal Menu


This is the main ATM Menu. Listed here are the possible transactions you can do with this ATM Demo.

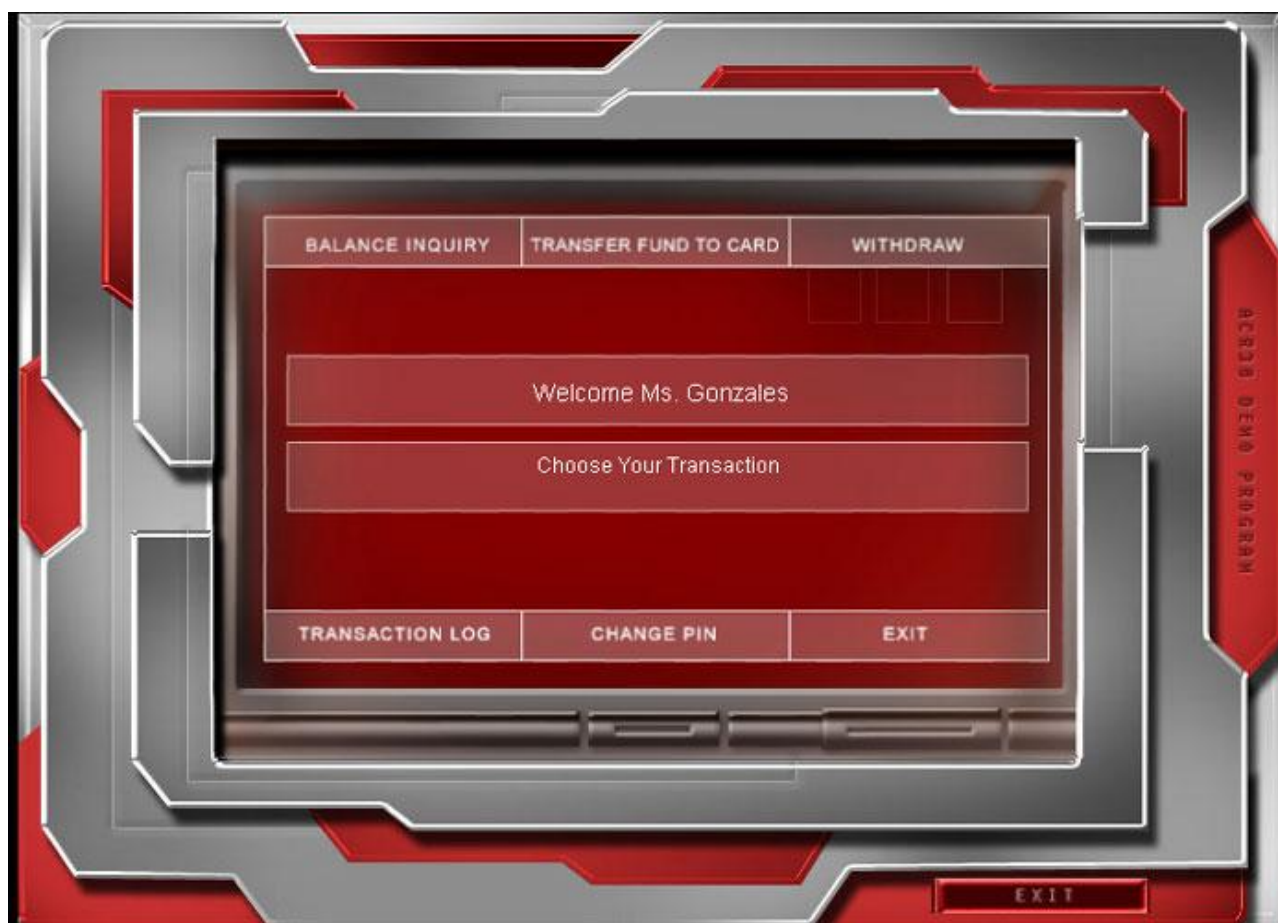



9.0. ATM (Balance Inquiry)

Use this to inquire the current balance of the card.

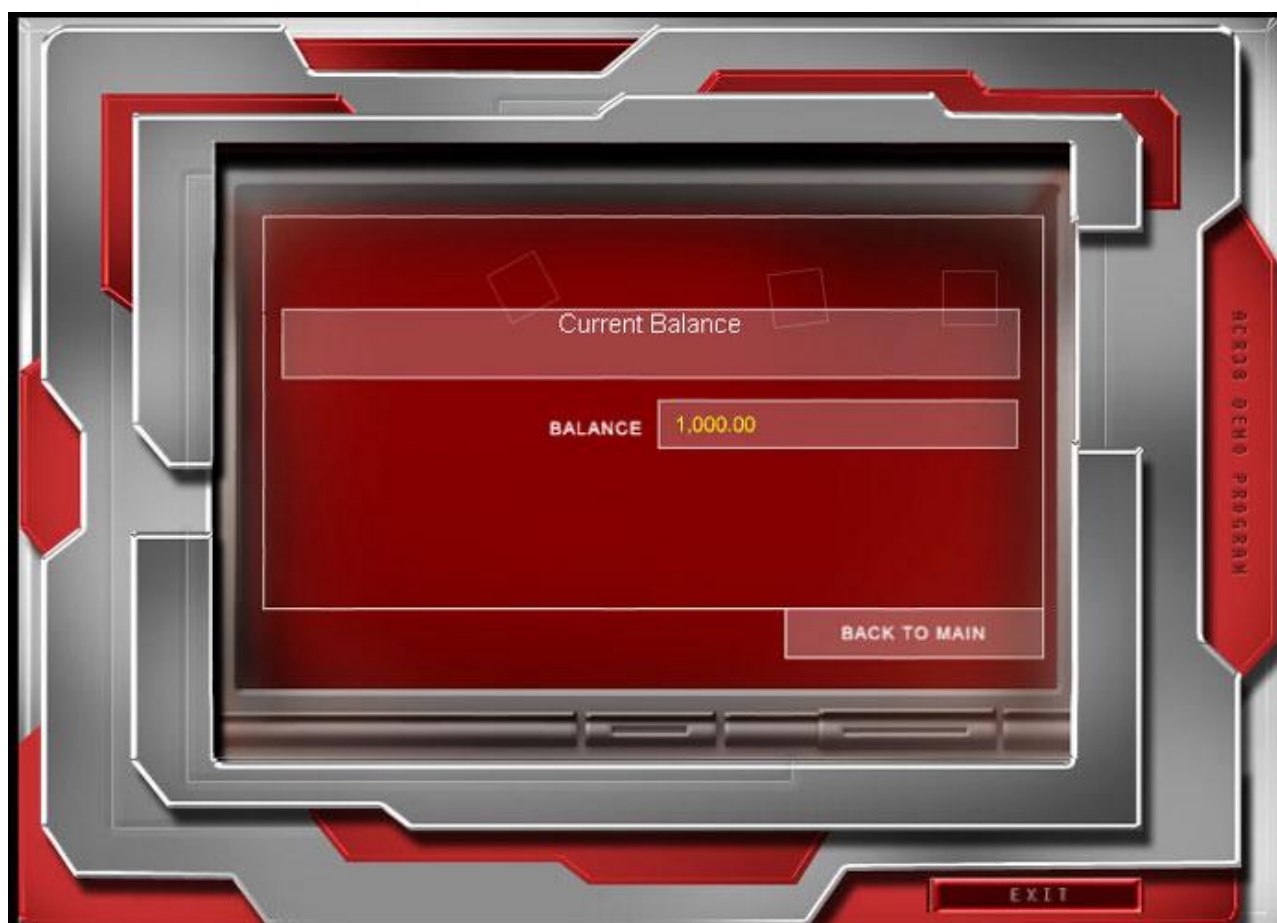



10.0. ATM (Transfer Fund To Card)

Use this to transfer or add up value to the card. Just enter the amount and click TRANSFER FUND TO CARD.

ACR38 DEMO PROGRAM

ACCOUNT NO. 1234567890

Enter Amount To Transfer

AMOUNT 500.00


TRANSFER FUND TO CARD BACK TO MAIN

EXIT



11.0. ATM (Withdraw)

Use this to withdraw value from the card. Just enter the amount and click WITHDRAW FROM CARD.

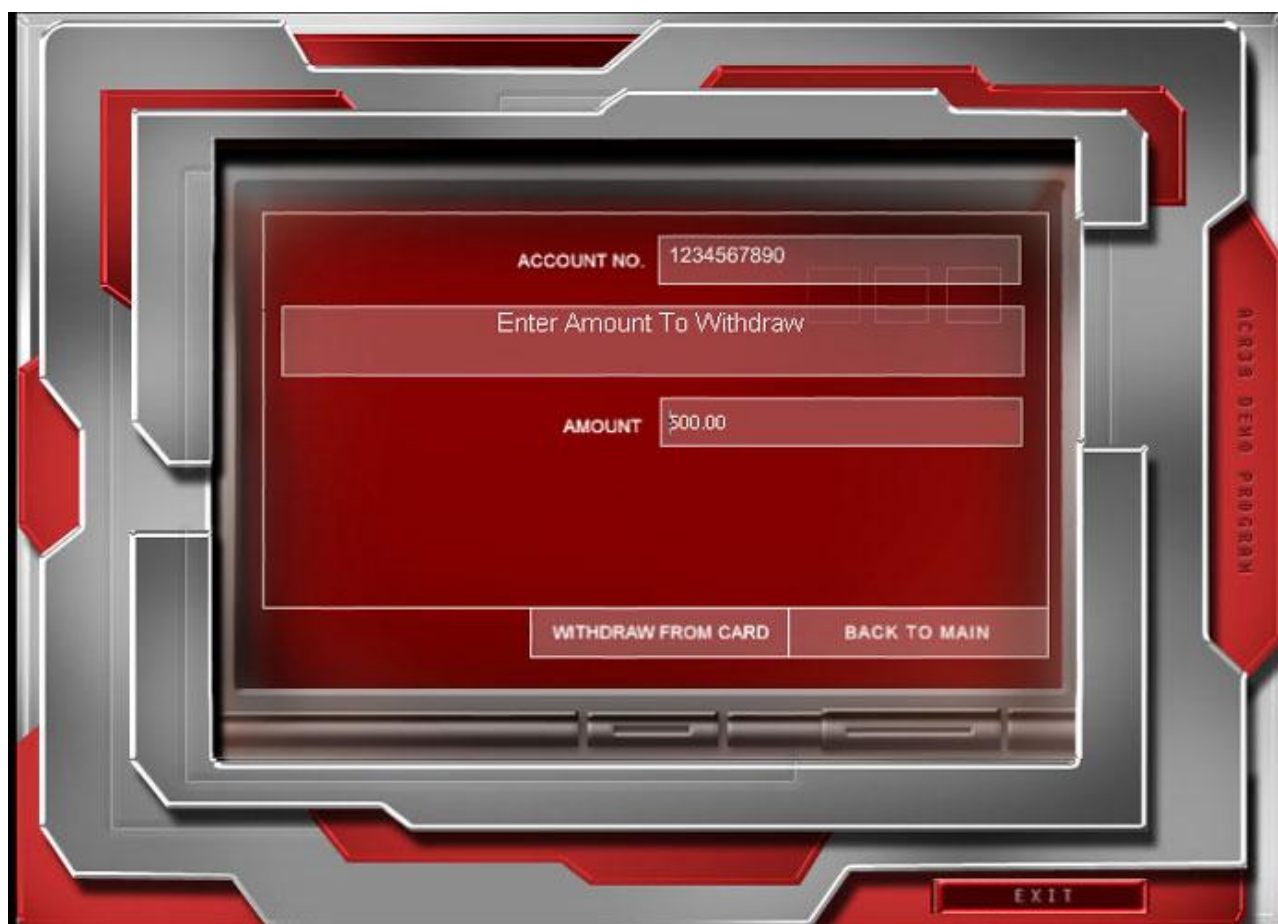



12.0. ATM (Transaction Log)

Use this to view the credit/debit transaction history, date, time and terminal ID.

ACCOUNT NO.	DATE	TRANSACTION	TERMINAL ID
1234567890	09/19/05 17:37	Cr: 1,000.00	Regl



13.0. ATM (Change PIN)

Use this to change the card PIN code. Enter the old PIN code, new PIN code you want and enter it again in the confirm box then, click ENTER.

The image shows a simulated ATM screen with a red and grey metallic frame. The screen displays the following text and input fields:

- ENTER OLD PIN CODE: [****]
- ENTER NEW PIN CODE: [****]
- CONFIRM NEW PIN CODE: [****]

Below the input fields are two buttons: "ENTER" and "BACK TO MAIN". At the bottom right of the screen, there is an "EXIT" button. On the right side of the frame, there is a vertical label "ACR38 DEMO PROGRAM".

14.0. Casino Lobby

This is where you can choose which slot machine terminal you want to use.



15.0. Casino Slot Machine

This is a simulation of a digital slot machine. With an ACR38 CCID reader attached, insert your card and if the card credit appears, place your bet by clicking either BET ONE or BET FIVE button then, click SPIN REELS.





16.0. Exiting the Demo

You can exit anytime you wish by clicking the EXIT button in the lower right corner of the demo.

