
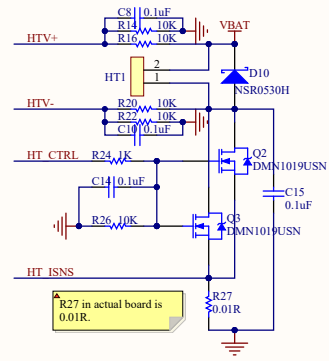
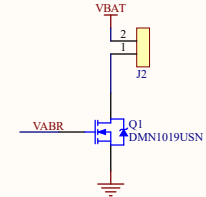
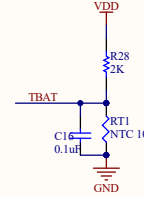






R5, R7, R8, R9 do not populate.

Reverse the OPAMP Inverting circuit.

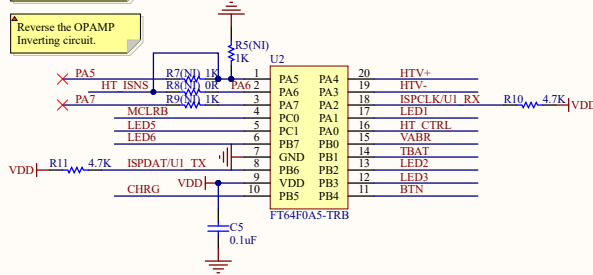

R27 in actual board is 0.01R.

For charging status purpose - detect the presence of the 5V.

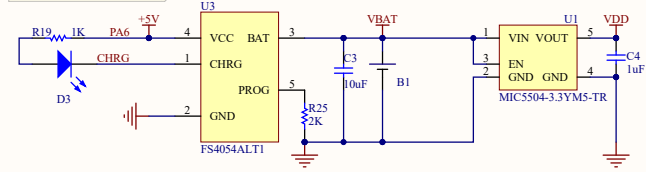

Title		
Size	Number	Revision
A3		
Date:	10/18/2022	Sheet of
File:	C:\Users\...\inf\pre01.SchDoc	Drawn By: