

ONE-TOUCH Automation

Samsung TV Deployment Guide

This document will guide the installer through the menu settings setup process for any Samsung Television.

Setup:

Skip through the initial setup steps, selecting “next” or “skip” depending on what screen you are on. Skip over wifi setup if tv smart features are not being used on the TV.

Once through the initial setup screens Press the house shaped Button on the remote. (Pictured to the right)

On the following menu navigate left, then down to the icon with three lines stacked on top of one another then press the center “select” button.



Navigate right and Select the setting option.

On the setting menu that appears at the bottom of the screen navigate to the far right of the screen and select “All Settings”



On the “Picture” Settings Menu select the “Picture Mode” option, then on the drop down select “FILMMAKER MODE”

Back on the “Picture” Setting Menu select the “Expert Settings” Option, adjust the brightness to full 50.

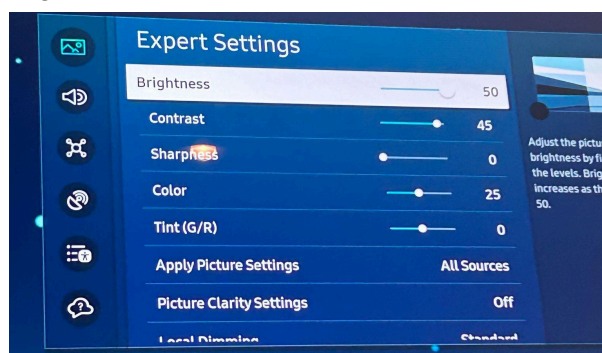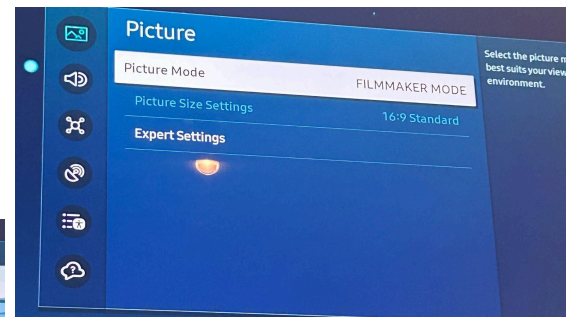

ONE-TOUCH Automation




Navigate back to the setting icons and then down to the “Connections” Menu. On the Connections menu select “External Device Manager”.

On the “External Device Manager” menu turn off “Anynet+ (HDMI-CEC)” by selecting it and making sure the circle next to the words is not filled in.

Back on the “External Device Manager” menu select the “Input Signal Plus” option and on the following screen ensure that signal plus is off for all HDMI inputs.

Navigate back to the setting icons and then down to the “General and Privacy” Menu. On that menu navigate down to the “Power and Energy Savings” Option.

On the “Power and Energy Savings” menu turn off the “Brightness Optimization” Setting and the “Screen Saver” Option.

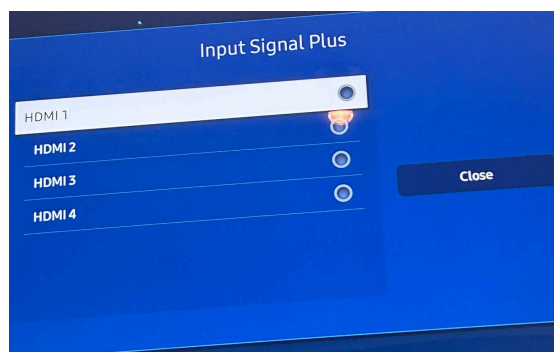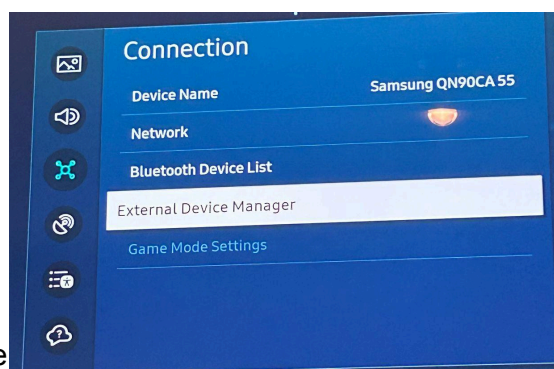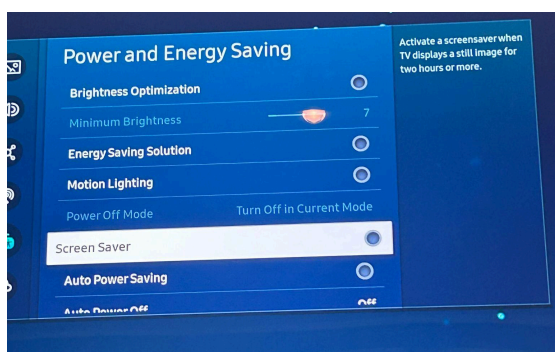

ONE-TOUCH

Automation

Navigate back to the “General and Privacy” Menu.
Then down to the “Start Screen Option” Menu.

On the “Start Screen Option” menu, ensure that all the options are turned off, meaning the circle next to the option is unfilled.

Navigate back to the setting icons and then down to the “Support” Menu. On the Support menu select “Software Update”, Then ensure that auto update is turned off.

