


[Print](#)[Exit](#)**6AR-FSE ENGINE CONTROL SFI SYSTEM DETAILS FUEL PRESSURE SENSOR****CONSTRUCTION**

- a. The fuel pressure sensor, which is mounted on the fuel delivery pipe sub-assembly, outputs a signal to the ECM that represents the fuel pressure in the fuel delivery pipe sub-assembly in order to allow the constant regulation of the fuel at an optimal pressure.

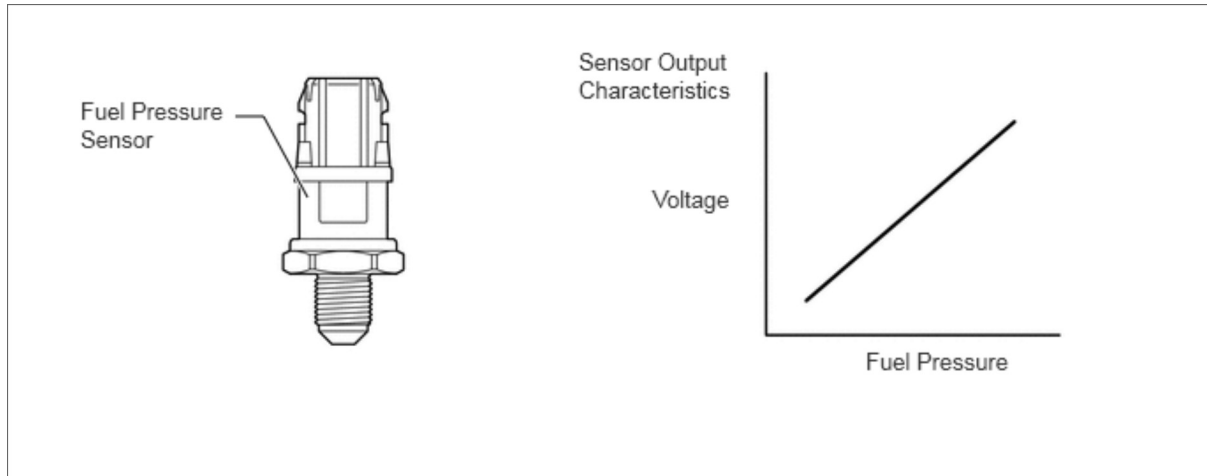

© 2012 TOYOTA MOTOR CORPORATION. All Rights Reserved.