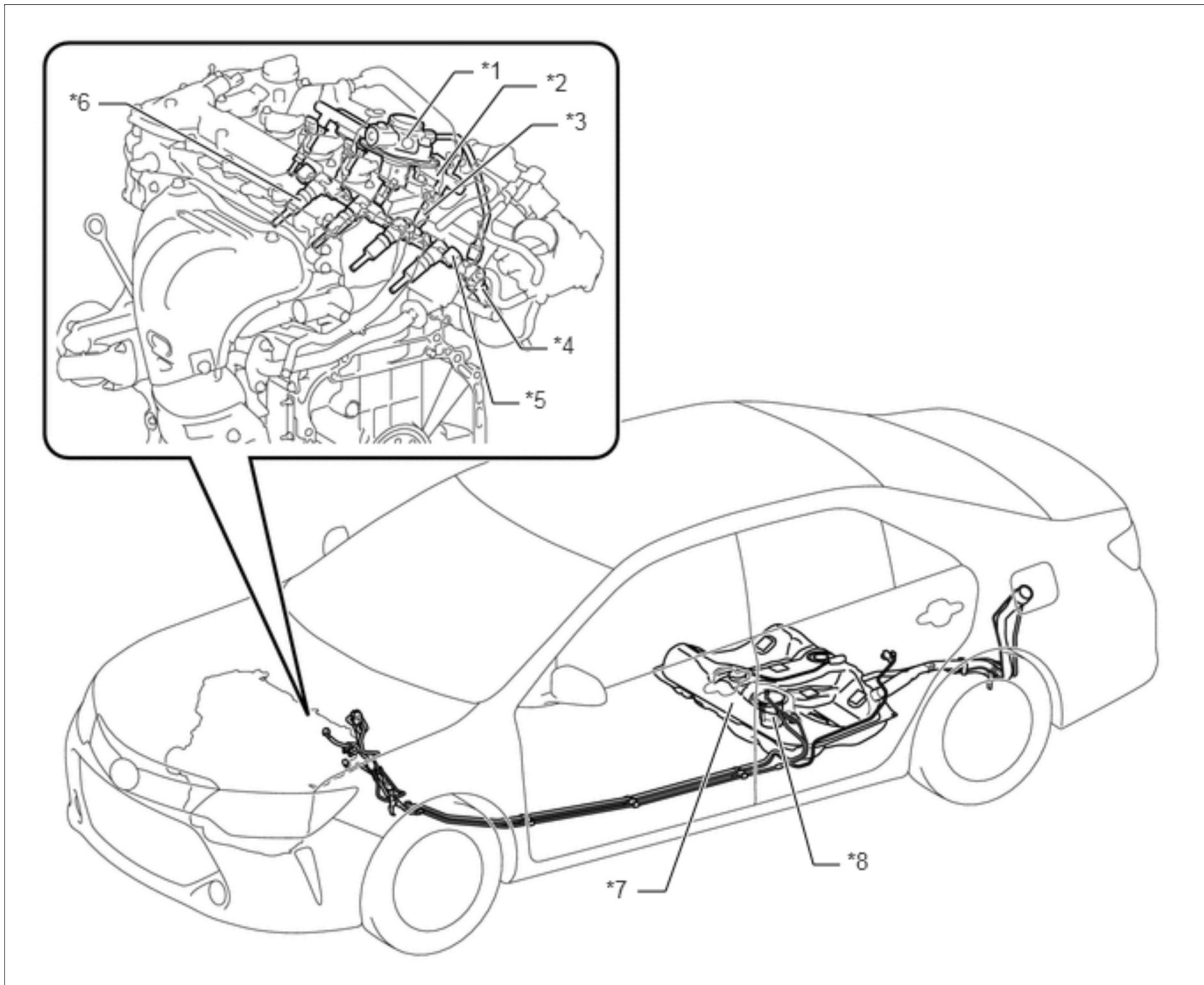


[Print](#)[Exit](#)**6AR-FSE FUEL FUEL SYSTEM GENERAL PARTS LOCATION**

*1	Fuel Pump Assembly (for High Pressure)	*2	Fuel Delivery Pipe Sub-assembly (for Port Injection)
*3	Fuel Injector Assembly (for Port Injection)	*4	Fuel Pressure Sensor
*5	Fuel Delivery Pipe Sub-assembly (for Direct Injection)	*6	Fuel Injector Assembly (for Direct Injection)
*7	Fuel Tank Assembly	*8	Fuel Suction Tube Assembly <ul style="list-style-type: none"><li>• Fuel Pump (for Low Pressure)</li><li>• Fuel Filter Assembly</li><li>• Fuel Suction Filter</li><li>• Fuel Pressure Regulator Assembly</li><li>• Fuel Sender Gauge Assembly</li></ul>