


[Print](#)[Exit](#)**6AR-FSE FUEL FUEL SYSTEM DETAILS FUEL PUMP****CONSTRUCTION**

- a.** A compact fuel pump assembly (for low pressure) is used. Its basic components are a fuel pump, a fuel filter assembly, a pressure regulator assembly and a fuel sender gauge assembly.
- b.** The fuel pump assembly (for low pressure) is located in the fuel tank assembly. This fuel pump pressurizes the fuel from the fuel tank assembly and sends the fuel to the high-pressure and low-pressure fuel systems.

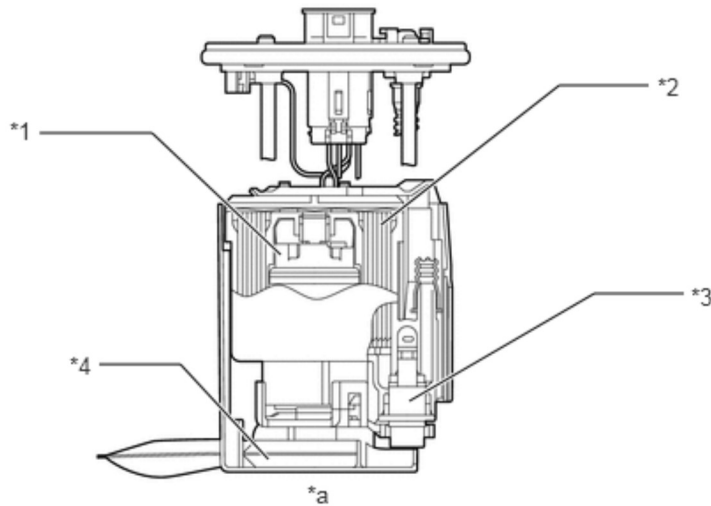

*1	Fuel Pump Assembly (for Low Pressure)	*2	Fuel Filter Assembly
*3	Fuel Pressure Regulator Assembly	*4	Fuel Suction Filter
*a	Cross Section	-	-