
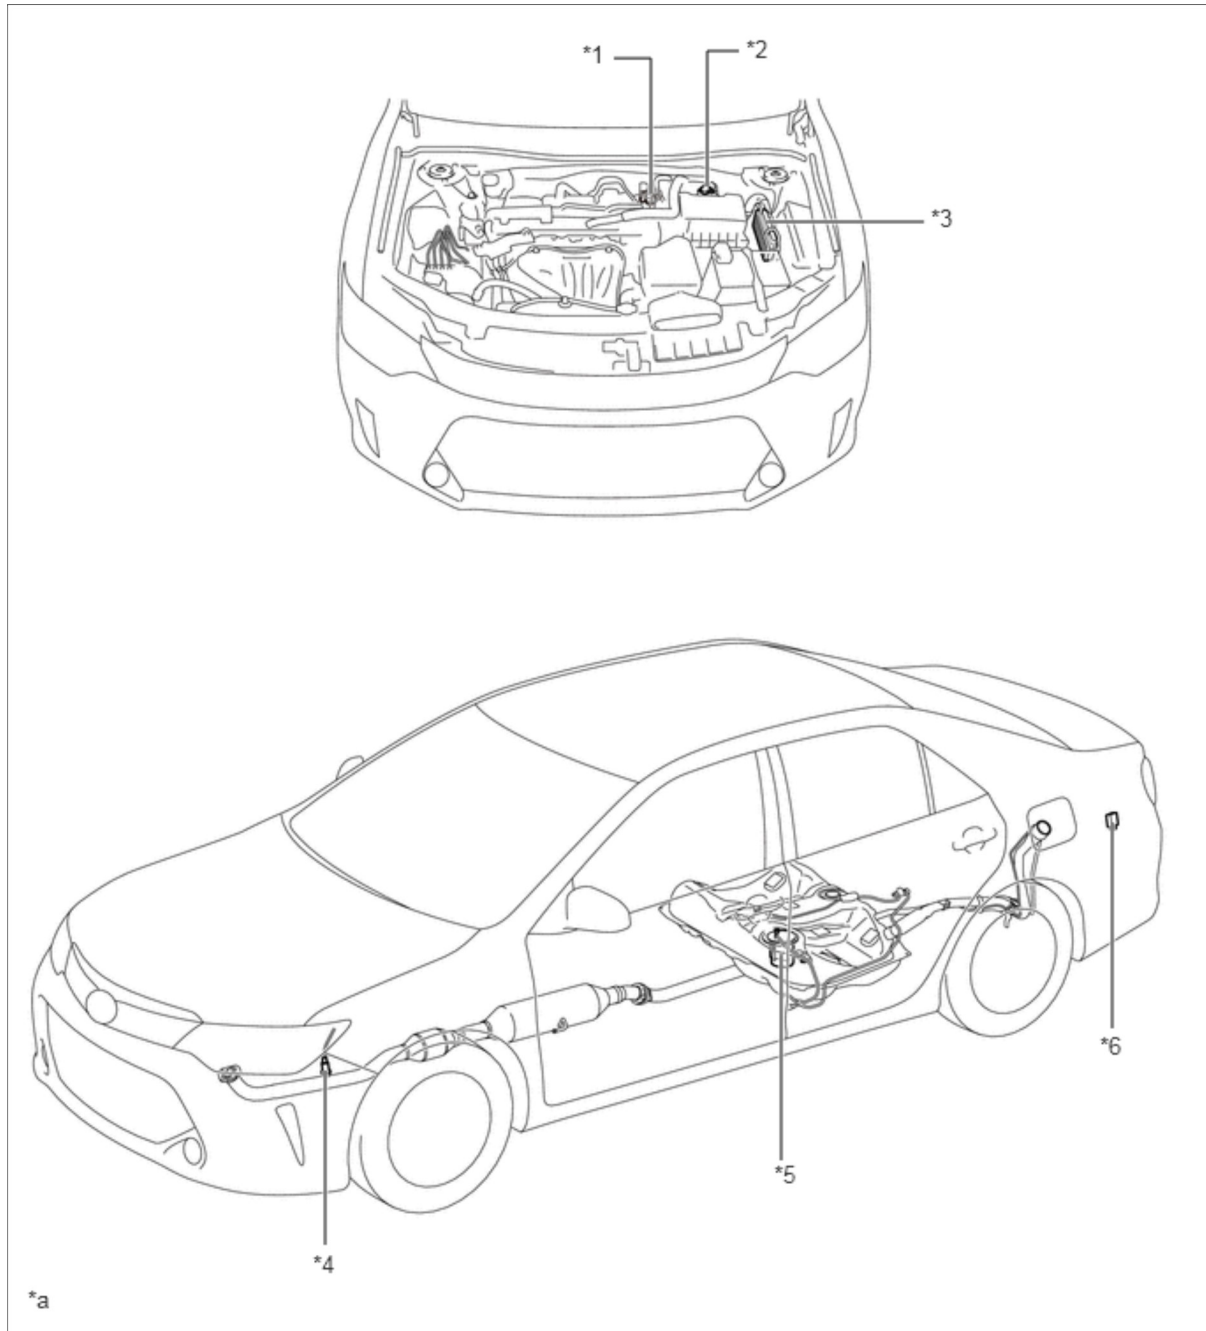



[Print](#)[Exit](#)**6AR-FSE ENGINE CONTROL SFI SYSTEM GENERAL PARTS LOCATION**

*1	Purge VSV	*2	Mass Air Flow Meter Sub-assembly · Intake Air Temperature Sensor
*3	ECM	*4	Heated Oxygen Sensor
*5	Fuel Pump (for Low Pressure)	*6	Fuel Pump Control ECU Assembly
*a	The illustrations shown are examples only.		

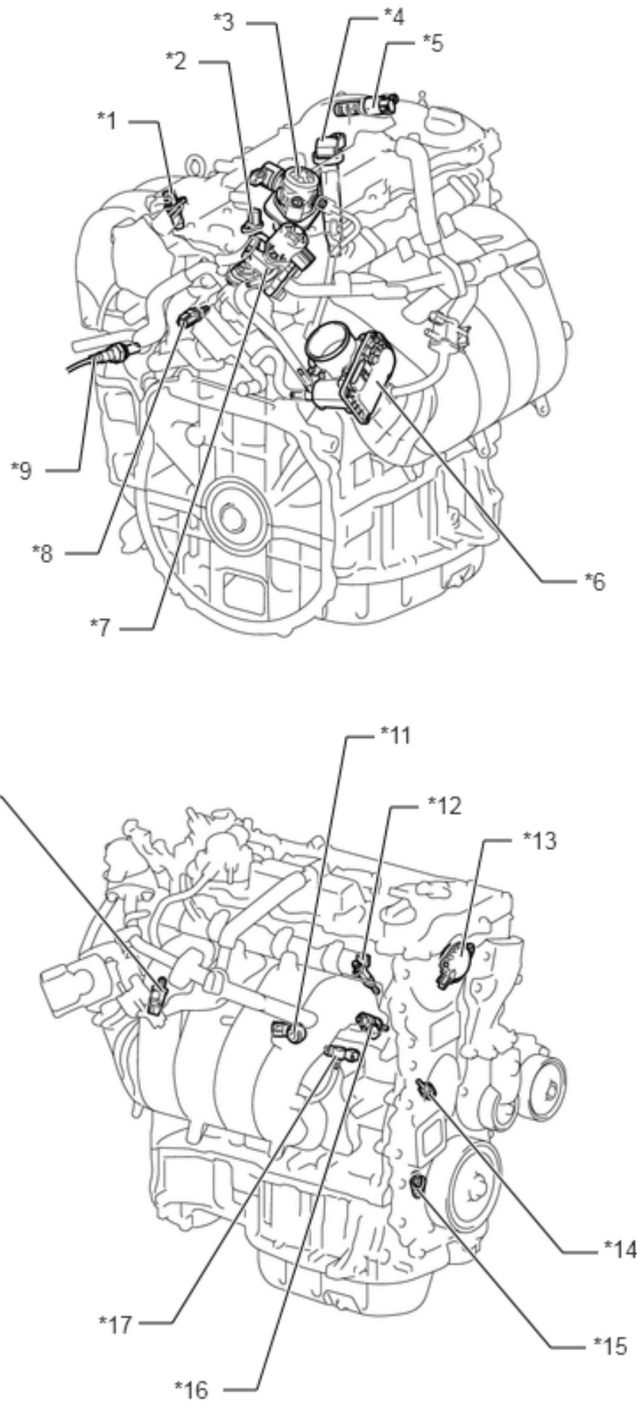

*1	Camshaft Position Sensor (for Exhaust Camshaft)	*2	Camshaft Position Sensor (for Intake Camshaft)
*3	Fuel Pump Assembly (for High Pressure)	*4	Ignition Coil Assembly

*5	Camshaft Timing Oil Control Valve Assembly	*6	Throttle Body with Motor Assembly <ul style="list-style-type: none"> Throttle Position Sensor Throttle Control Motor
*7	EGR Valve Assembly	*8	Engine Coolant Temperature Sensor
*9	Air Fuel Ratio Sensor	*10	Fuel Pressure Sensor
*11	Knock Control Sensor	*12	Fuel Injector Assembly (for Port Injection)
*13	Cam Timing Oil Control Solenoid Assembly	*14	Temperature Sensor
*15	Crankshaft Position Sensor	*16	Fuel Injector Assembly (for Direct Injection)
*17	Manifold Absolute Pressure Sensor	-	-

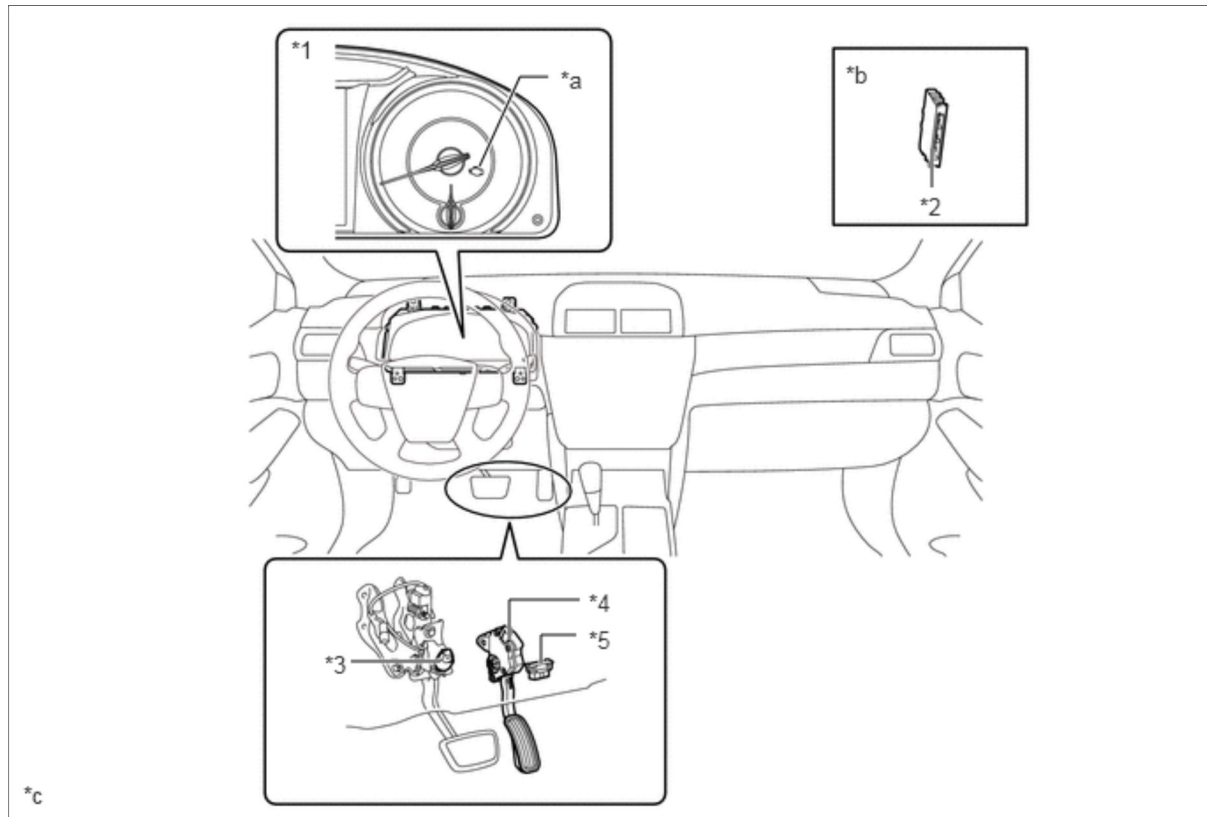

*1	Combination Meter Assembly	*2	Certification ECU (Smart Key ECU Assembly)
*3	Stop Light Switch Assembly	*4	Accelerator Pedal Sensor Assembly <ul style="list-style-type: none"> Accelerator Pedal Position Sensor
*5	DLC3	-	-
*a	Malfunction Indicator Lamp (MIL)	*b	Refer to Service Bulletin for the installation position of the part.
*c	The illustrations shown are examples only.	-	-