


# LOCO-Universal 2.2-s

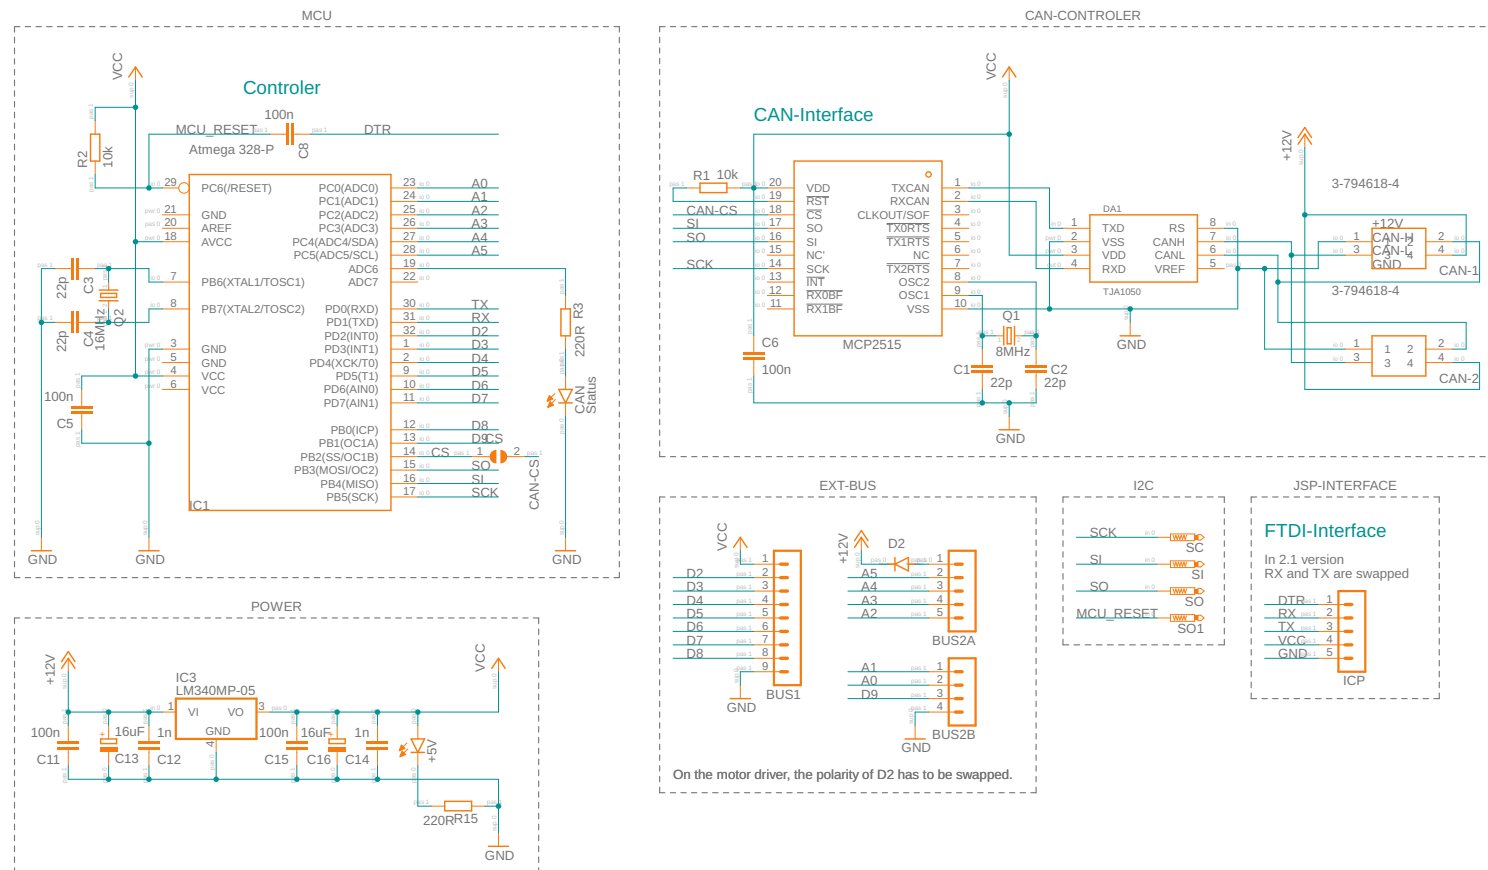

On the motor driver, the polarity of D2 has to be swapped.

## FTDI-Interface

In 2.1 version  
RX and TX are swapped

