



# ESP32 Programmer

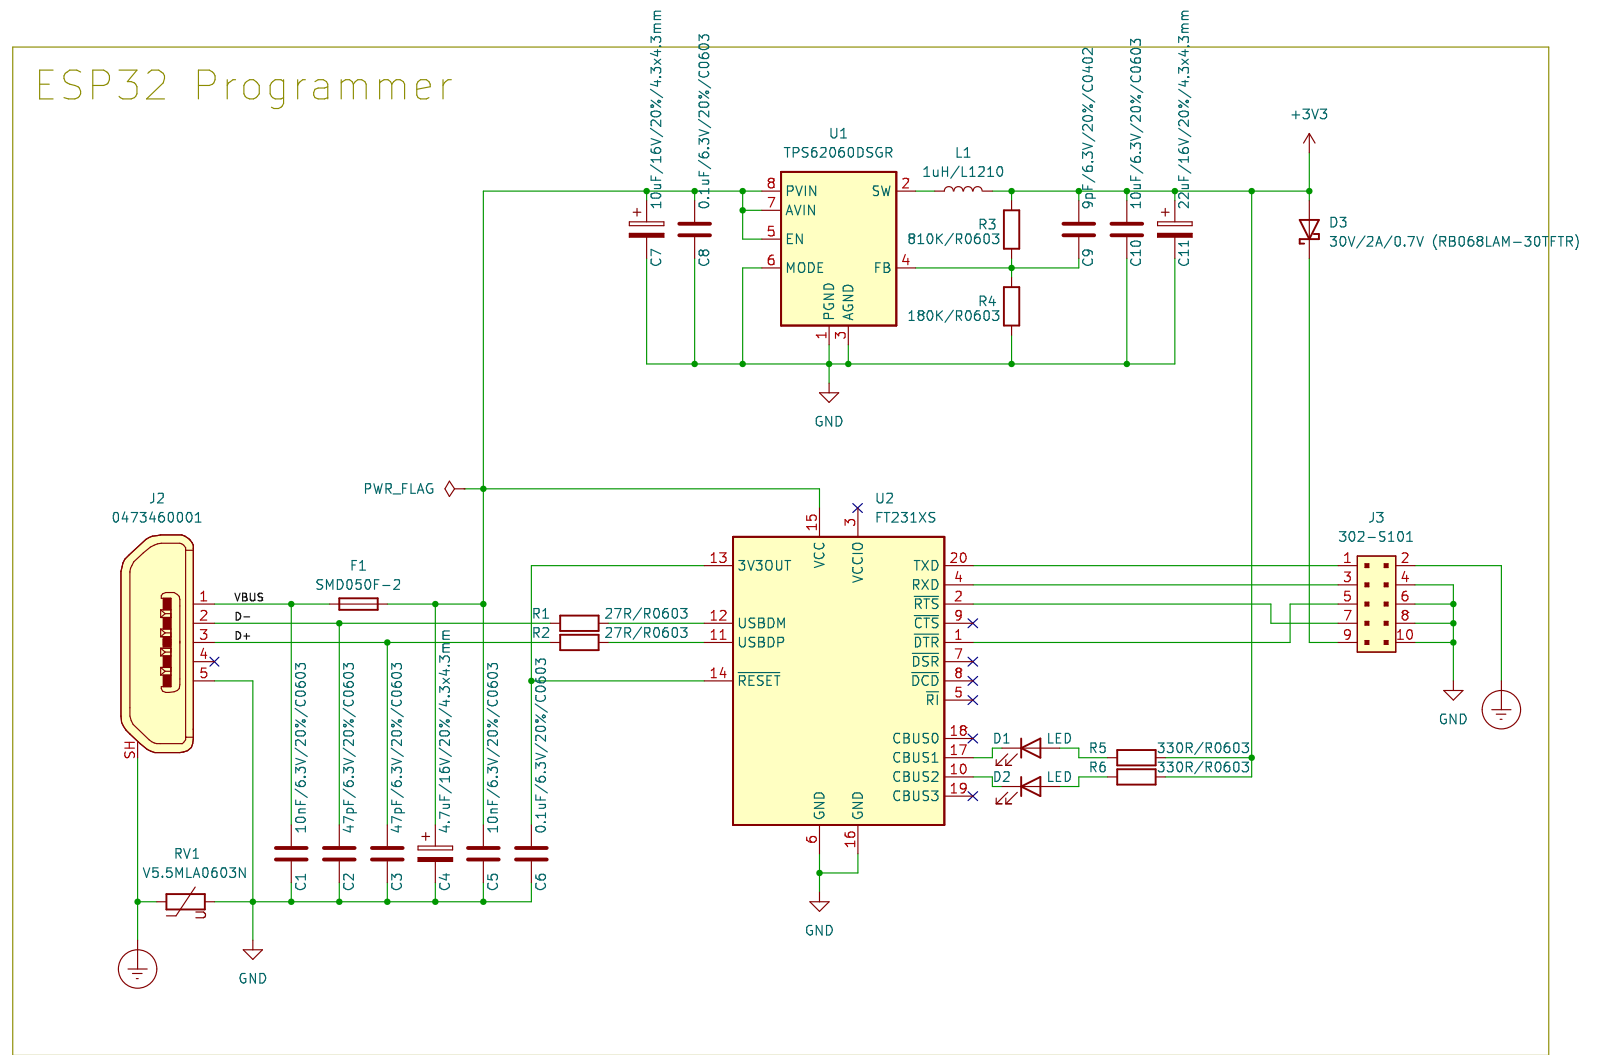


## Observations:

This is the USB ESP32 programmer used to flash ESP32 boards via UART. Boot & Enable options are available in ESP32 uC documentation.

## Test Pins

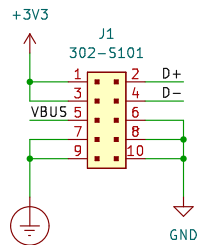

## PWR References

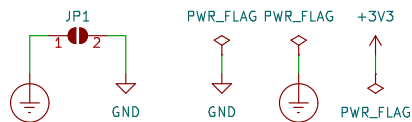

Author: Nicolae-Andrei Vasile

Sheet: /  
File: ESP32-PLC-programmer.kicad\_sch

**Title: ESP32 Programmer**

Size: A4 Date: 2023-12-01  
KiCad E.D.A. kicad 7.0.7-7.0.7-ubuntu20.04.1

**Rev: A**  
Id: 1/1