



**OWNER'S MANUAL**

**COMPACT REFRIGERATOR**

**SR-1730/2570**



# Table of Contents

Introduction.....	3
Finding Your Model and Serial Numbers.....	3
Identifying Parts of SR-1730.....	4
Identifying Parts of SR-1740.....	4
Installing Your Refrigerator.....	5
Adjusting the Feet.....	5
Controlling the Temperature.....	6
Cleaning Your Refrigerator.....	7
Preparing to Clean.....	7
Cleaning the Inside.....	7
Cleaning the Trays and Shelves.....	7
Cleaning Your Refrigerator (Con'td).....	8
Cleaning the Outside.....	8
Defrosting Your Refrigerator.....	9
Troubleshooting.....	10

# Introduction


Thank you for choosing a Sanyo compact refrigerator. This manual contains important information about the installation and care of your new appliance.

This manual is for two models: **SR-1730, and SR-2570**. You can find your model name on the front of your new refrigerator.

Please read the instructions carefully before using your refrigerator.

## Finding Your Model and Serial Numbers

1. Locate the Model and Serial numbers on the back of your refrigerator.
2. Write both numbers in the spaces below. You will need these in case of theft of your refrigerator.

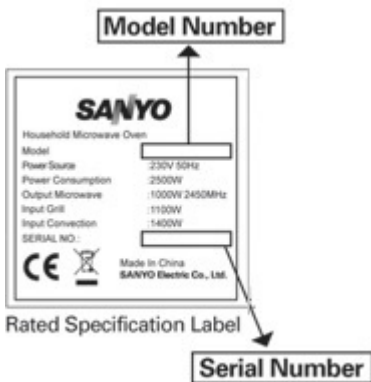

Model Number:


---

Serial Number:


---

**KEEP THIS MANUAL IN A  
SAFE PLACE**

## IDENTIFYING PARTS OF SR-1730

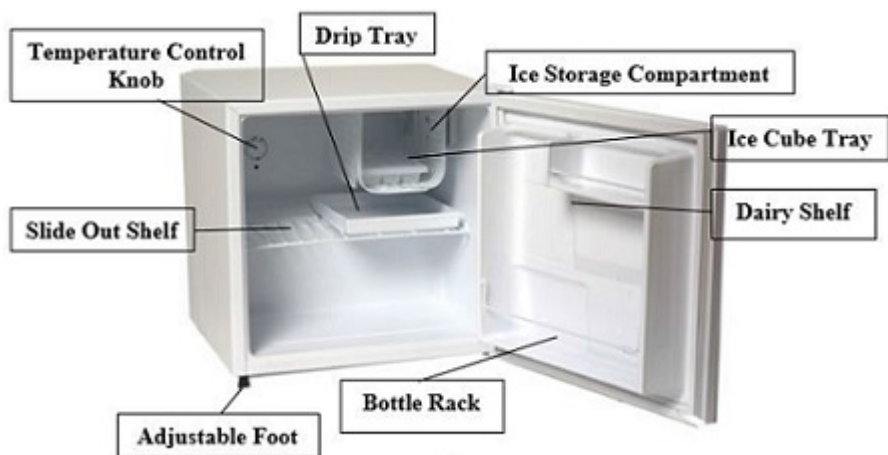

## IDENTIFYING PARTS OF 2570

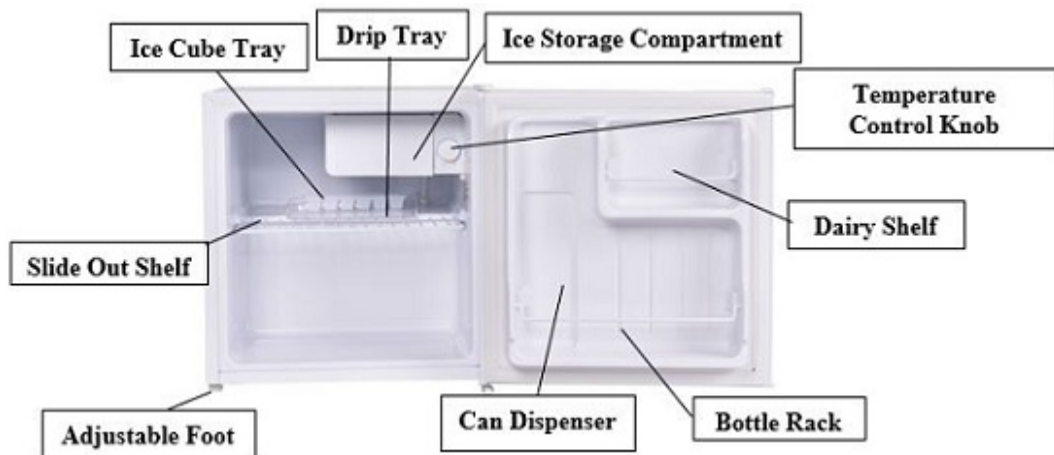

# Installing your Refrigerator




- For your safety your refrigerator has three prongs.
- This plug is grounded to prevent electrical faults.
- **DO NOT REMOVE THE THIRD PRONG.**
- Plug your refrigerator into a grounded plug only

## When choosing a place for your refrigerator...

- DO**... leave 4 inches (10cm) of space on the back and sides to allow air flow.
- DO**... place your refrigerator on a level floor.
- DO**... adjust the feet of the refrigerator if the floor is not level.

- DO NOT**... build your refrigerator into the wall in any way.
- DO NOT**... place your refrigerator in direct sunlight.
- DO NOT**... place your refrigerator near a heat source.
- DO NOT**... place your refrigerator in a moist area.
- DO NOT**... plug your refrigerator into an extension lead.

## Adjusting the Refrigerator Feet

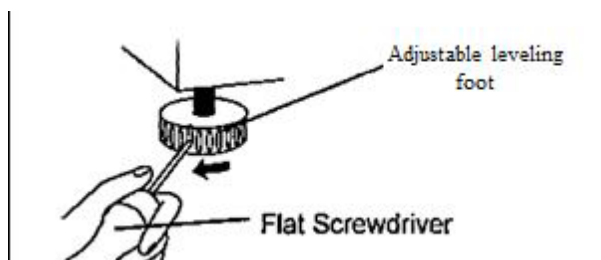

1. Empty the refrigerator.
2. Unplug the refrigerator.
3. Insert a flat screwdriver into a ridge on the foot.
4. Turn foot clockwise to raise your refrigerator.
5. Turn foot anti-clockwise to lower your refrigerator.

# Controlling the Temperature



## When controlling your refrigerator's temperature...

- Use the temperature control knob to regulate the temperature
- To make your refrigerator **colder**, turn the knob **clockwise** towards the max setting.
- To make your refrigerator **warmer**, turn the knob **anti-clockwise** towards the minimum setting.

## You should lower the temperature of your refrigerator when...

- You are storing a lot of food.
- You are making ice cubes and need them soon.
- You open the door of the refrigerator frequently.



- All refrigerators turn themselves on and off to regulate their temperature.
- Your refrigerator is compact, and may turn itself on and off frequently.
- **This is normal, and not cause for concern.**



- Your refrigerator has a Thermostat Control Device, which regulates the temperature.
- **If you unplug or turn off your refrigerator, you MUST allow three (3) minutes before restarting it.**
- **It will not restart unless you wait three (3) minutes.**

# Cleaning Your Refrigerator

## Preparing to Clean

1. Remove all food and drink.
2. Remove slide out shelf and ice cube tray.

## Cleaning the Inside

### You will need:

- Warm water
- Baking soda
- A soft cloth

### To clean the inside:

1. Add 2 tablespoons of baking soda to a quart of warm water.
2. Using a cloth, wipe the inside clean, working from top to bottom.



- **Do not use** soaps, detergents, spray cleaners, or other chemical cleaners in the inside of your refrigerator.
- These cleaning products could cause strong odors in your refrigerator.
- If in doubt, use water only.

## Cleaning the Trays and Shelves

### You will need:

- A mild cleaning detergent
- A soft cloth

### To clean the parts of your refrigerator:

1. Dip the ice cube tray and shelves into your cleaning solution.
2. Scrub each part with a cloth if necessary.
3. Dry each part with a soft cloth.

**\*\*\*Cleaning instructions continue on next page.\*\*\***

# Cleaning Your Refrigerator (continued)

## Cleaning the Outside

### You will need:

- Warm water
- Soap
- A soft cloth

### To clean the exterior:

1. Make a solution with the warm water and soap.
2. Using a cloth, wipe the outside of the refrigerator with the cleaning solution.
3. Dry the surface with a soft cloth.



- **NEVER** use acids, chemical thinner, gasoline, benzene or other harsh materials on **ANY** part of your refrigerator.
- **NEVER** use boiling water as this may damage the plastic parts of your refrigerator.



# Defrosting Your Refrigerator

## Defrost your refrigerator when...

- The layer of ice in the ice storage compartment reaches a quarter of an inch thick

## To defrost your refrigerator...

1. Remove all foods.
2. Remove all ice cube trays.
3. Leave the door open.
4. Place trip tray at the base of your refrigerator.
5. Set the temperature control to OFF. See page 6 for instructions.
6. Wait 2-3 hours, or until all the ice melts.
7. Reset the temperature control to its usual position.



- **NEVER** use any sharp or metallic instrument to remove ice from your refrigerator.
- **NEVER** use boiling water or a heater to melt ice.
- These could damage your refrigerator and void your warranty.

# Troubleshooting

If you are experiencing any problems with your refrigerator, please consult the troubleshooting table below...

Problem	Solution
Refrigerator is not running	<ul style="list-style-type: none"><li>• Ensure your refrigerator is plugged in</li><li>• Check your electricity supply</li><li>• Ensure you are using a grounded outlet</li><li>• Plug out for three minutes and plug back in again</li></ul>
Water is not freezing in the ice cube tray	<ul style="list-style-type: none"><li>• Check that the temperature control knob is set to MAX</li></ul>
There is a build-up of ice	<ul style="list-style-type: none"><li>• Defrost your refrigerator according to the instructions on page 9</li></ul>
Refrigerator is making a lot of noise	<ul style="list-style-type: none"><li>• Check that the refrigerator feet are level</li><li>• Plug out for three minutes and plug back in again</li></ul>



If you have worked through the troubleshooting table, and the problem is still there, please call us on our free helpline below.

202-555-0149

Monday - Friday

9am - 9pm

**THIS MANUAL WAS PRODUCED BY**

**SANYO FISHER CO. (USA)  
21350 LASSEN STREET  
CHATSWORTH  
CA 91311**