



1.2 Interface description


Introduction to the location and function of Raspberry Pi PICO components

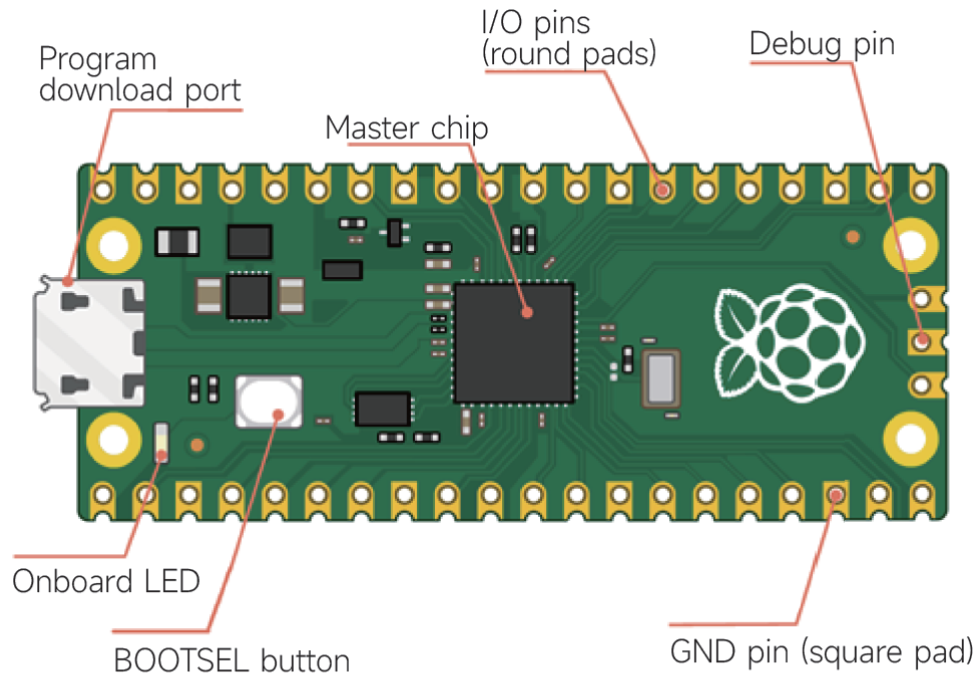

We can connect Raspberry Pi Pico to computer by Micro USB cable to download code.



Expansion board component location and function introduction

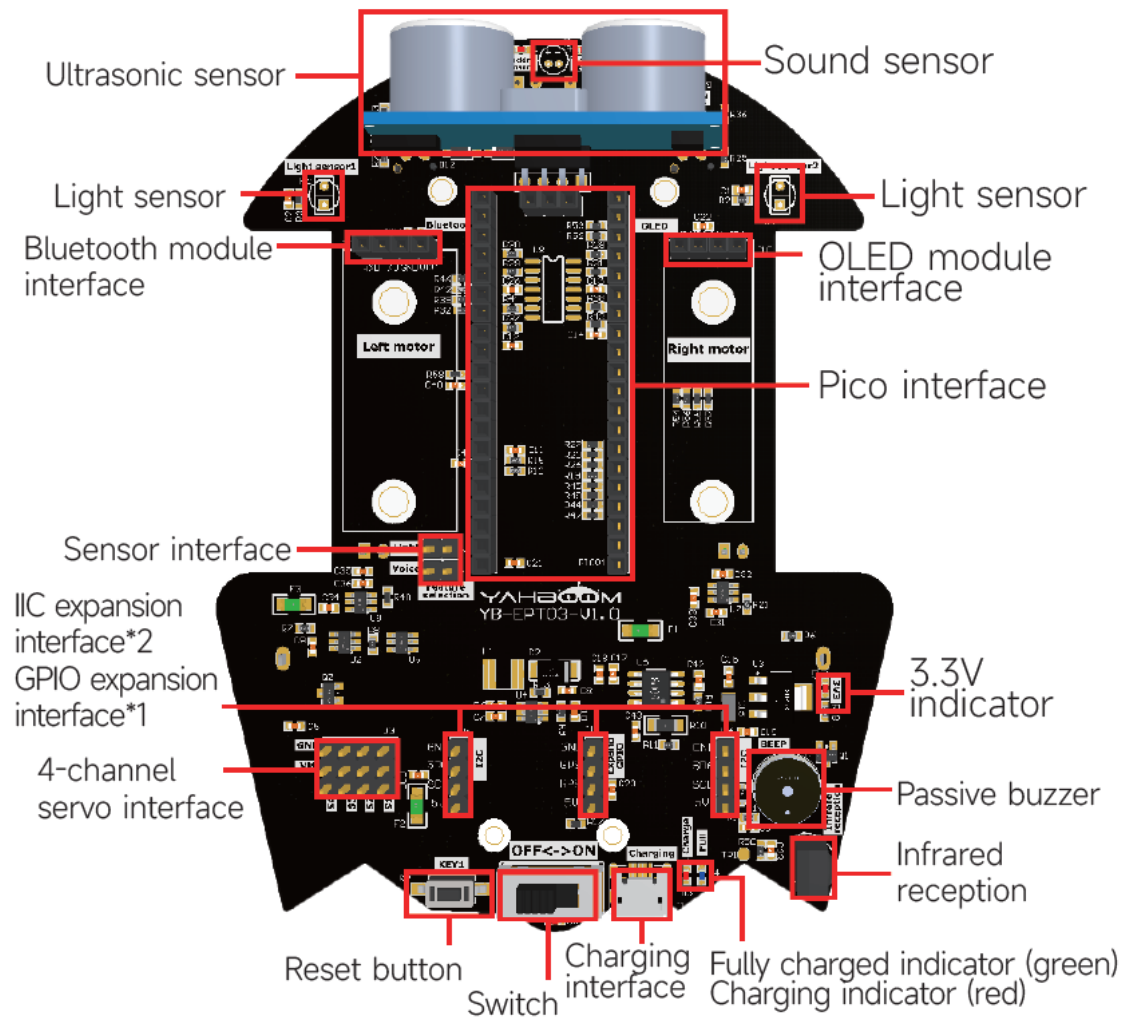

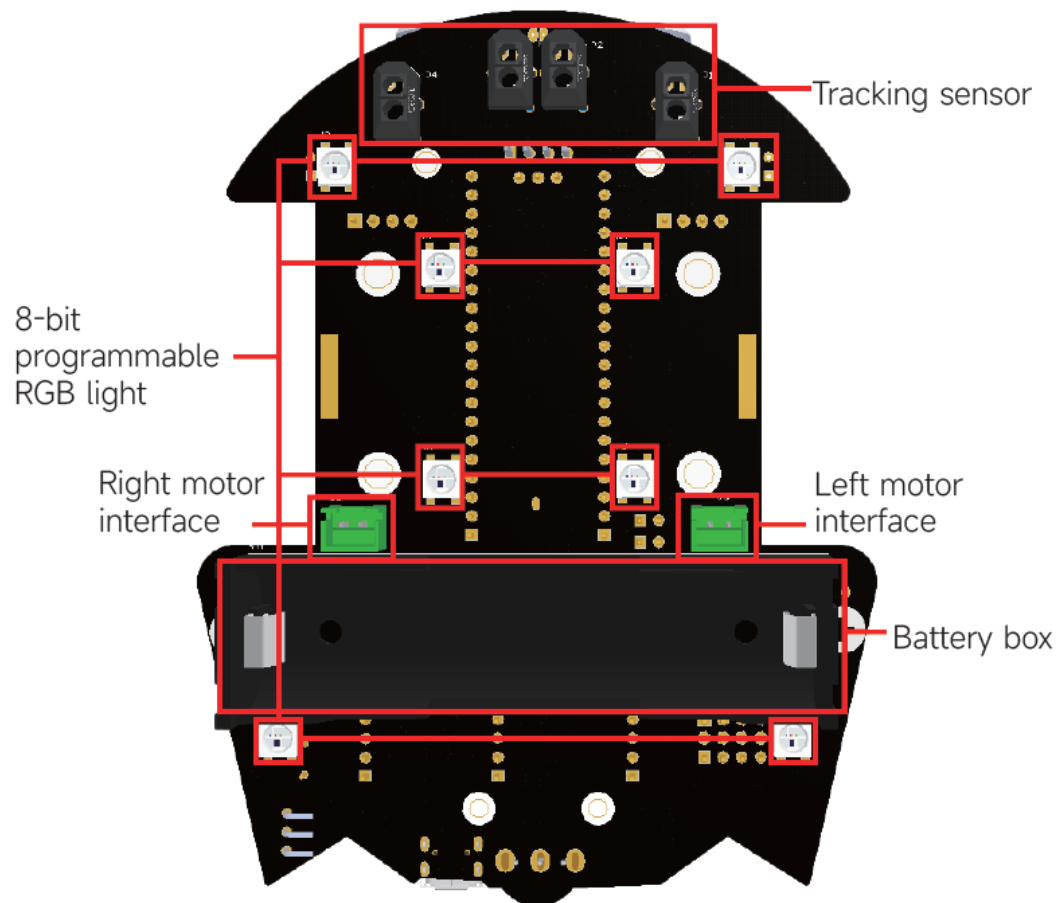

Note: The charging interface is on the expansion board, and the charging voltage is 5V.

Physical wiring diagram

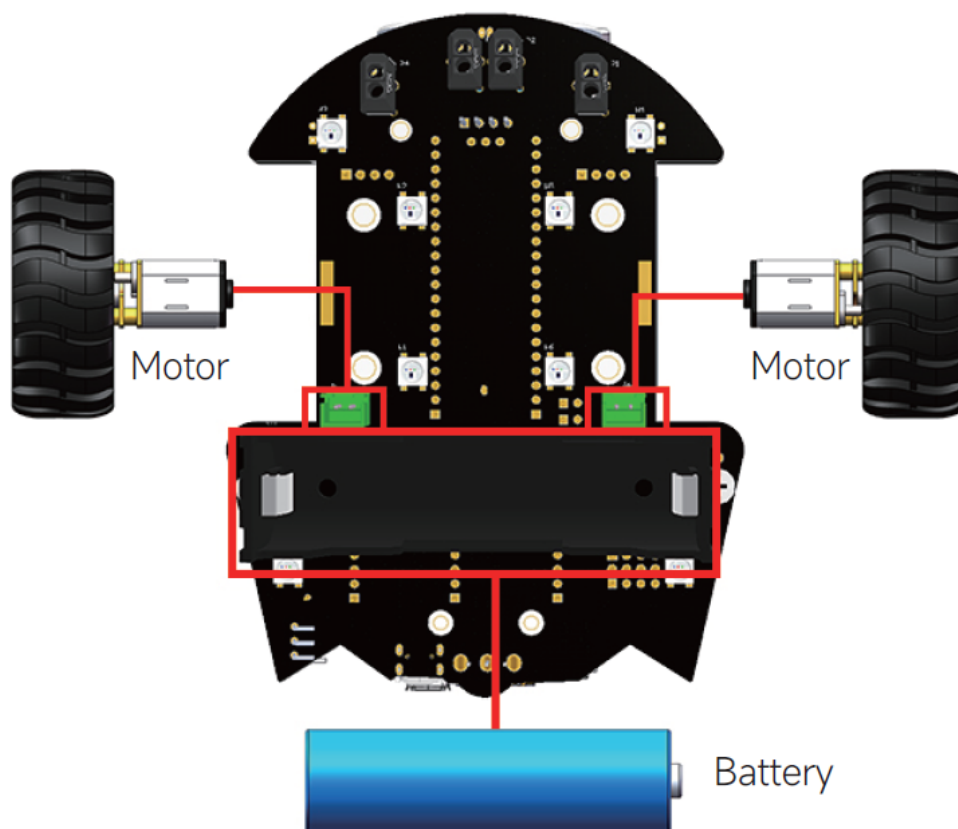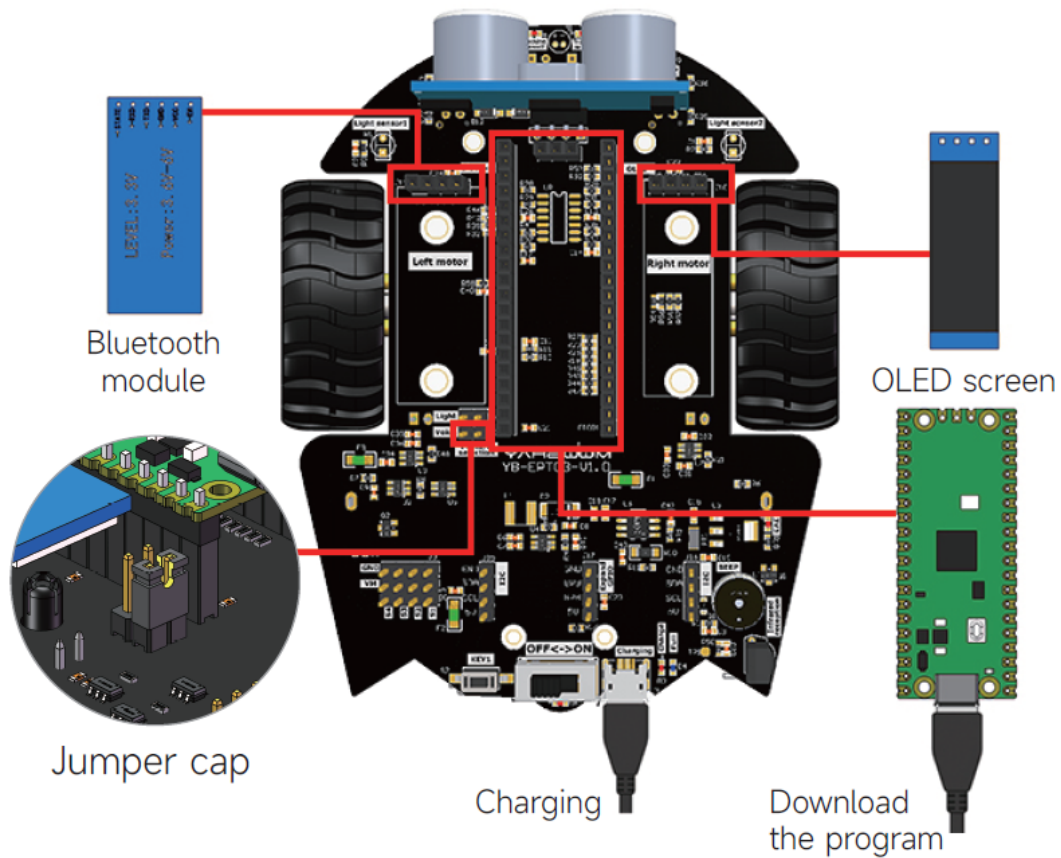

Note: Please connect each component correctly according to the wiring diagram.

