



KITCHEN MAMA AUB087NK4RMV Auto Electric Can Opener User Manual

[Home](#) » [KITCHEN MAMA](#) » KITCHEN MAMA AUB087NK4RMV Auto Electric Can Opener User Manual 

Contents

- [1 KITCHEN MAMA AUB087NK4RMV Auto Electric Can Opener](#)
- [2 IMPORTANT SAFEGUARDS](#)
- [3 PARTS](#)
- [4 USING THE OPENER: 3 EASY STEPS](#)
- [5 USER MAINTENANCE](#)
- [6 TROUBLESHOOTING](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)



KITCHEN MAMA AUB087NK4RMV Auto Electric Can Opener



IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:


1. Read all instructions.
2. Portable- To protect against risk of electrical shock do not put in water or other liquid.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
4. Avoid contacting moving parts.
5. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
6. Do not use outdoors, household use.
7. Do not open pressurized (aerosol-type) cans.
8. Do not open cans of flammable liquids such as lighter fluids.
9. Do not incinerate this appliance even if it is severely damaged. The batteries can explode in a fire.

SAVE THESE INSTRUCTIONS

To watch a quick instructional video on how to use the can opener, scan this QR Code!




PARTS

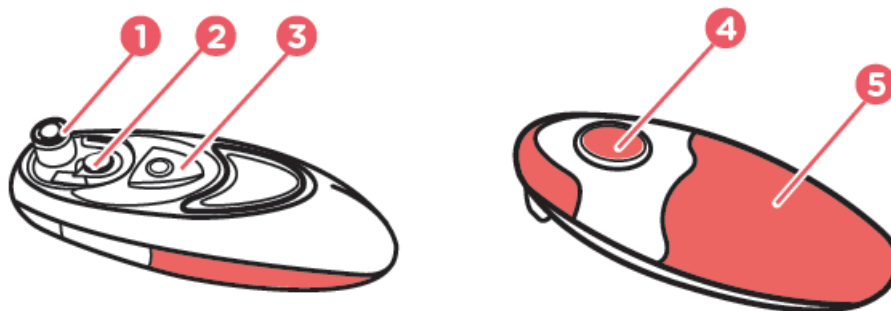



1. Blade
2. Metal Gear
3. Magnet
4. ON / OFF Button
5. Battery Compartment

USING THE OPENER: 3 EASY STEPS

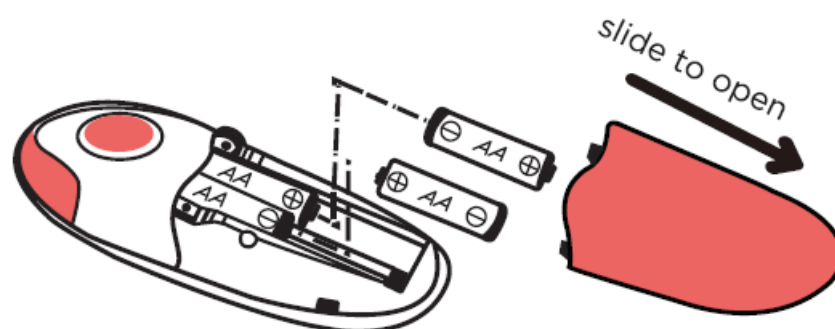

STEP 1

Slide the battery cover down and insert the batteries. Make sure that the batteries are facing with the right polarity and that the cover is properly locked back in place.

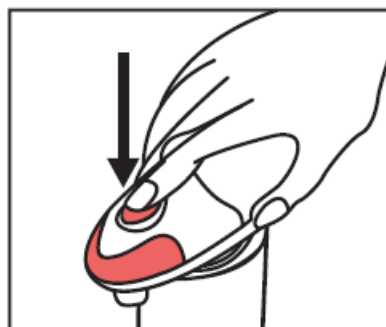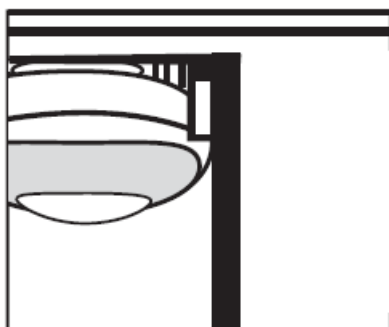

STEP 2

Place the can opener on top of the can, making sure that the can edge is between the blade and the metal gear. Push the button and let it rotate around the can on its own.

STEP 3

After one rotation around the can, press the button again to stop. The can opener automatically disengages from the edge of the can. Lift the lid and remove the can opener.



ATTENTION

After one rotation, press the button to stop immediately to prevent excessive cutting that may cause metal to shred.

FOLLOW US ON OUR SOCIALS

- kitchenmamaus
- kitchenmamaus
- KitchenMama
- support@shopkitchenmama.com

USER MAINTENANCE

- Use AA alkaline batteries only.
- Don't mix old and new batteries together. Do not mix alkaline, standard (carbon-zinc) and rechargeable (nickel-cadmium) batteries.
- Make sure the batteries are inserted in the correct polarity; if not, the opener won't operate or may cause battery leakage.
- Remove the batteries when not in use for extended periods of time. e Do not dispose of batteries in fire, they might explode. If disposing large quantities of batteries, contact your trash disposal company or municipal waste disposal department for instructions.
- Store in a dry place.
- Remove the batteries before wiping clean with a damp towel.
- Do NOT submerge in water, wash under running water, or wash in dishwasher.

TROUBLESHOOTING

The can opener is not working. What do I do?

Check the battery compartment. Make sure the batteries are in the right polarity and that the cover is securely in place.

Why is it rotating so slowly? It looks like it's struggling

The batteries might be drained already. Replace them and try again.

Why doesn't it detach from edge once it's done?

First, don't forcefully remove the can opener. Restart it by taking out the batteries. After reinserting the batteries

and closing the cover, push the button again.

Why can't it open the can?


Make sure that it is in the right position. Check the can for any dents or bends on the edges. If there are no problems with the can, restart the can opener.

Why can't the small magnet keep the lid in place?

Some canned food adheres to the lid due to moisture. You can manually lift the lid up to open.

- WWW.SHOPKITCHENMAMA.COM

Documents / Resources

	KITCHEN MAMA AUB087NK4RMV Auto Electric Can Opener [pdf] User Manual AUB087NK4RMV, AUB087NK4RMV Auto Electric Can Opener, Auto Electric Can Opener, Electric Can Opener, Can Opener, Opener
---	--