


How to re-assemble Ares.

In order to convenience the delivery of Ares, we disassembled Ares. So you should assemble it while you get it, and then you can go and rock.

1. You will get your Ares just like the picture shown below.

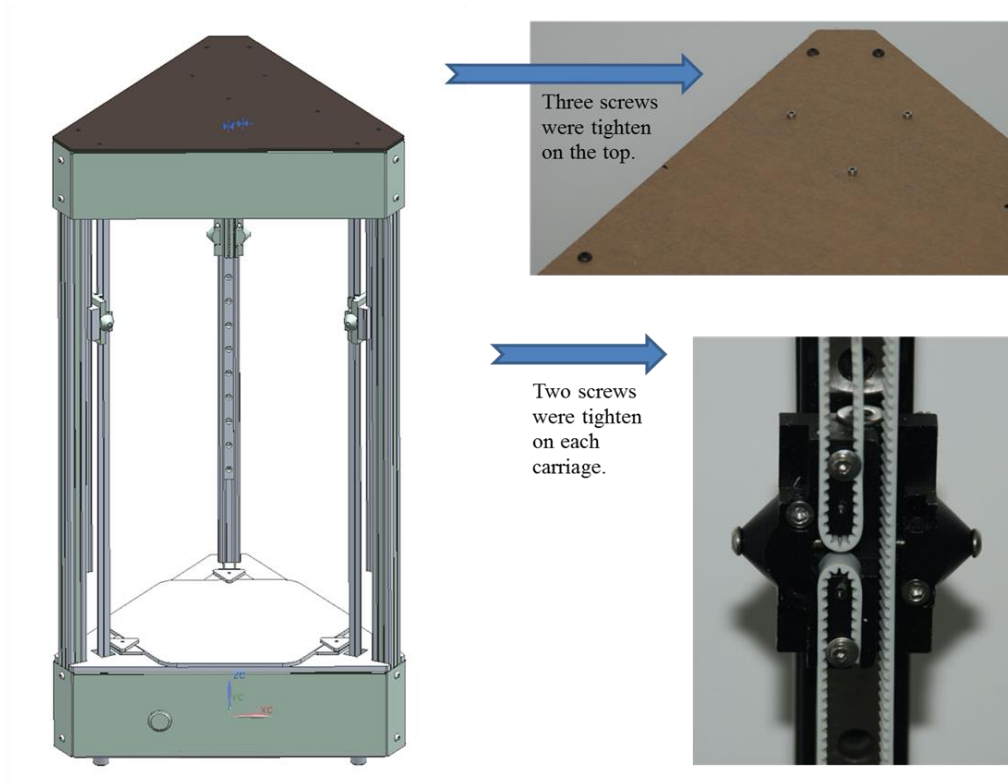


2. Put filament kits on.



1. Loosen the screws, put the filament stator on and tighten the screws.

2. Put the filament bearing inside the filament rotor and then put them on the filament stator.

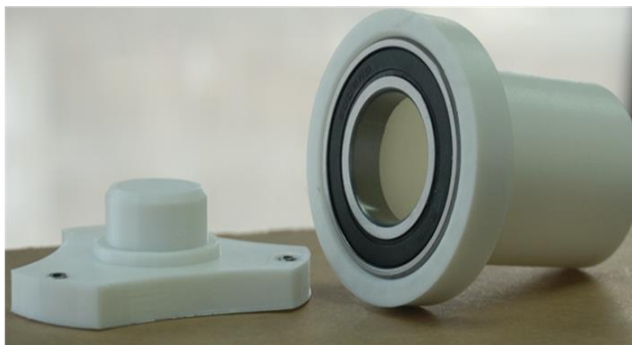

3. Final state.



3. Connect the carriages to the rods.

1. Take 6 rods out.




2. Loosen the screw.



3. Put the rod on and tighten the screw.




4. Final state.

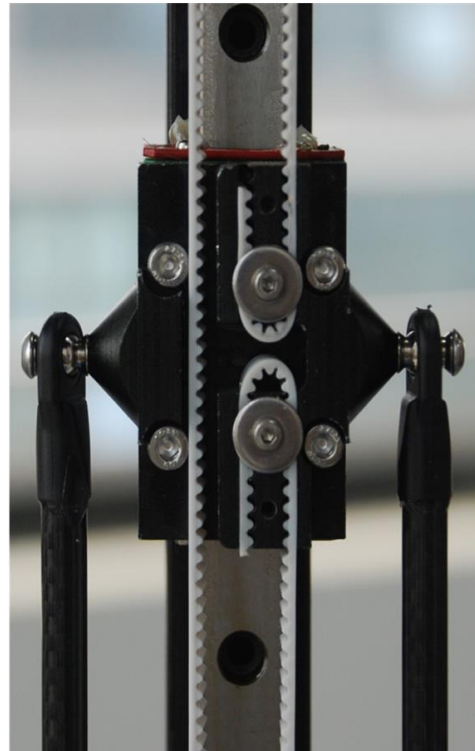


4. Other parts.

Take other parts out of packages. Shown as the picture below.

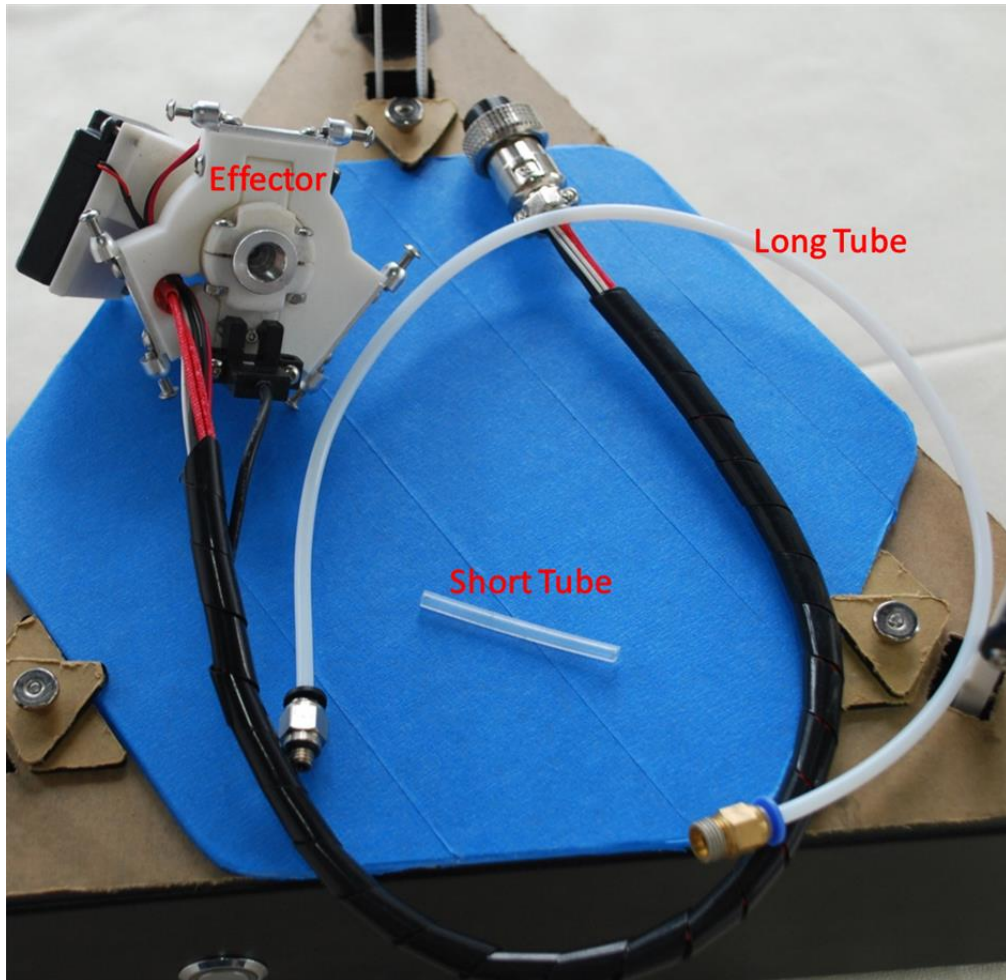

1. Insert the short tube into the hole on the top board.

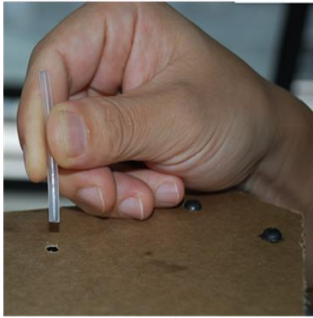

2. Connect M6 side of the long tube to the extruder.



3. Connect the aviation plug on the top board.

4. Loosen the screws and connect the effector to the other side of the rods.

