

Production Supporting Systems in Factories

ระบบสนับสนุนการผลิตในโรงงานอุตสาหกรรม



Context

Scope

The `scope` of a particular context value.

- `Node` - only visible to the node that set the value
- `Flow` - visible to all nodes on the same flow (or tab in the editor)
- `Global` - visible to all nodes

M7-1: Working on flow context

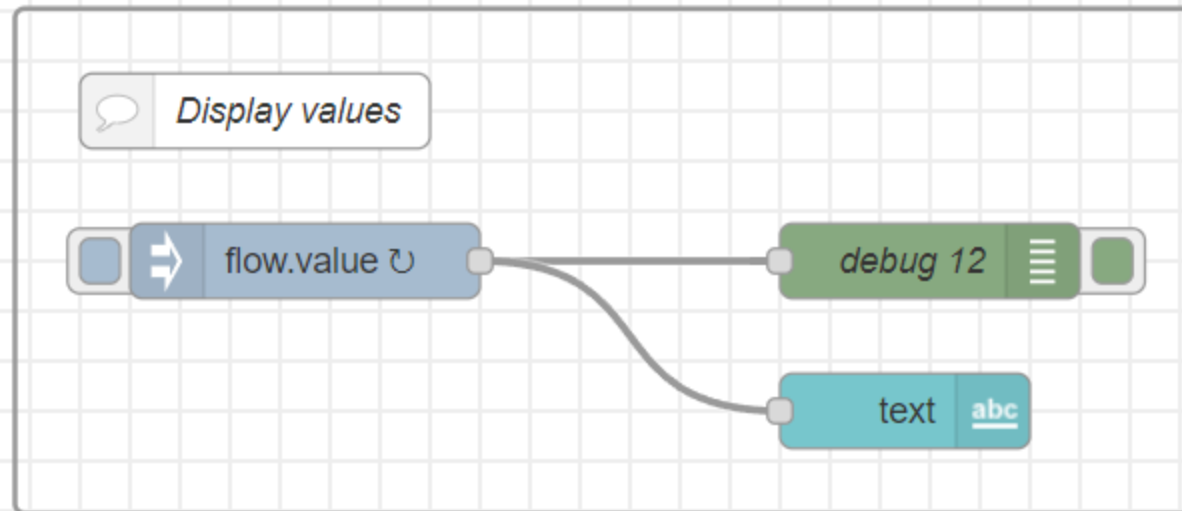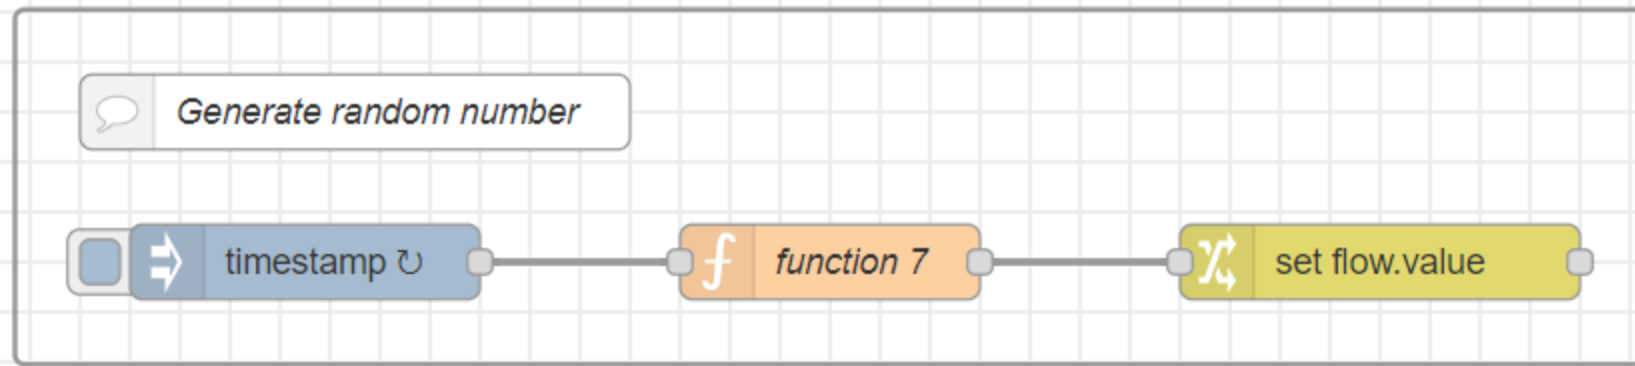

function node

```
msg.payload = Math.random();  
return msg;
```

change node

Edit change node

DeleteCancelDone

Properties

Name

Rules

Set

▼

▼ flow. value

to the value

▼ msg. payload

✕

☐ Deep copy value

inject node

Edit inject node

Delete Cancel Done

⚙️ **Properties** ⚙️ 📄 🖼️

🏷️ Name

≡ msg. payload = ▼ flow. value ✕


≡ msg. topic = ▼ a_z ✕

Sample flow


- Show random value (real time).
- Store the maximum value.

Home

Default

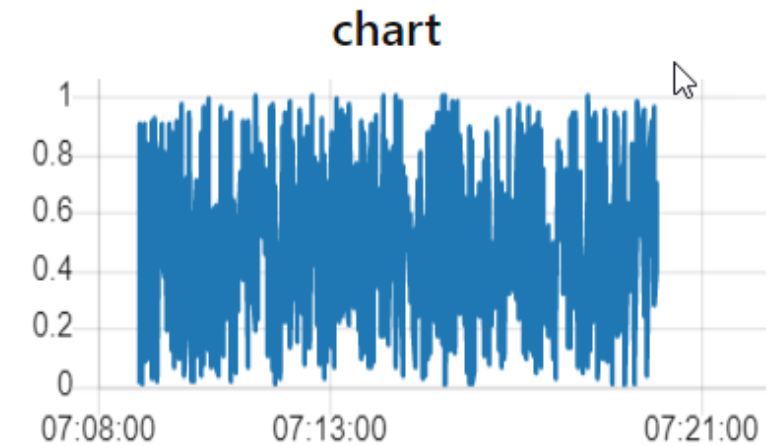

Max value **0.9996943595720056**

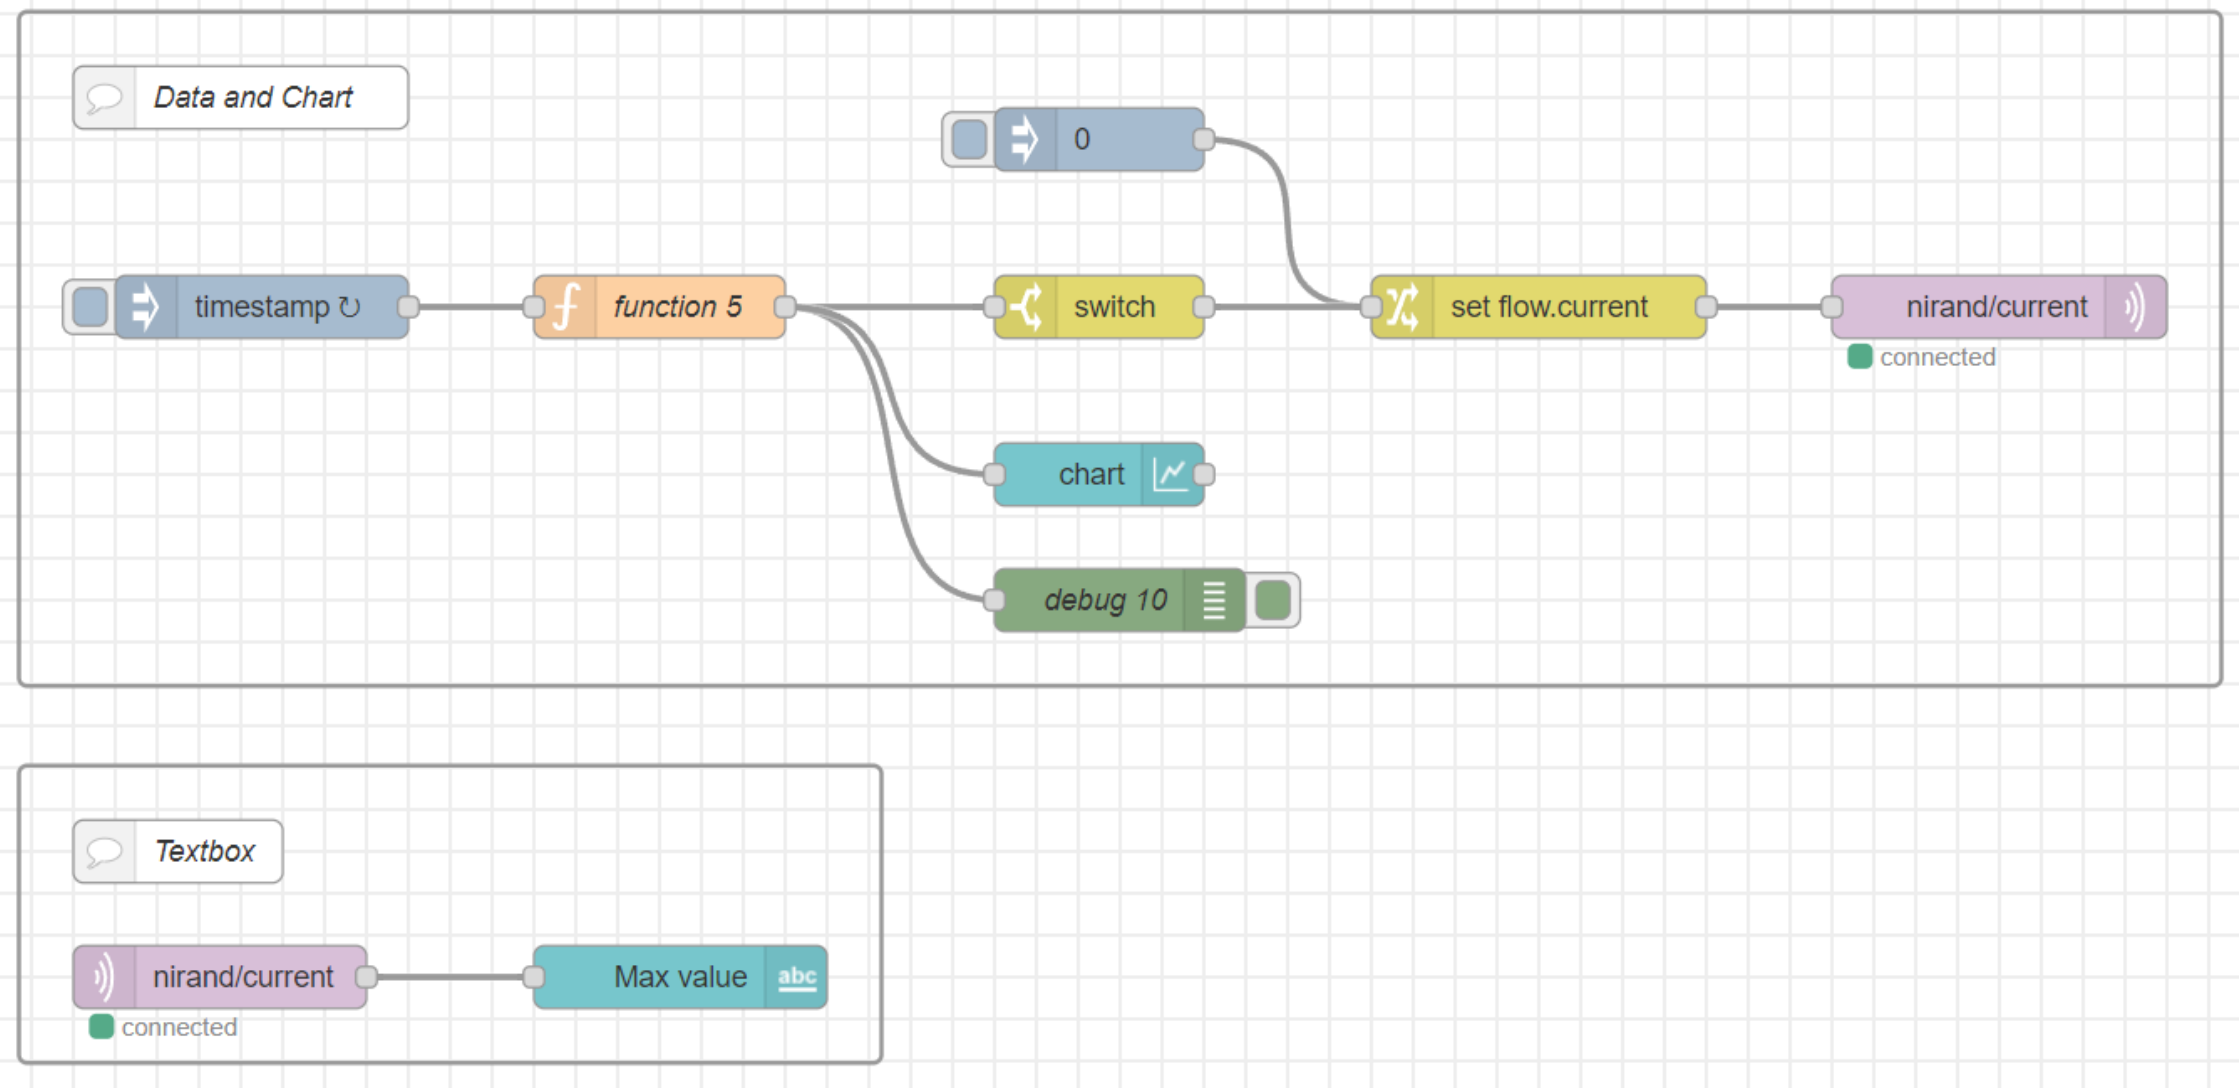

function node

```
msg.payload = Math.random();  
return msg;
```