




N LIFE SLIM A/S MANUAL





1.증상에 따른 ERROR CODE


ERROR CODE Depending on Symptoms

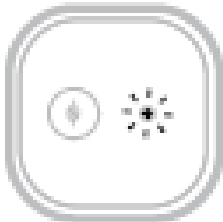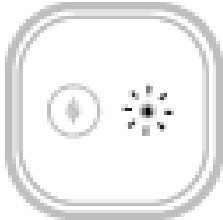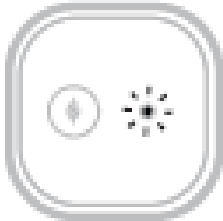Display	Descriptions	Display location
 LED (green)	Temperature Sensor Disconnection (Severed)	LED Buzzer sounds twice per second, and the green LED blinks repeatedly.
 LED (orange)	Temperature Sensor Short Circuit and Overheating	LED Buzzer sounds twice per second, and the yellow LED blinks repeatedly.
 LED (red)	Abnormal Power Input	LED If the connected USB-C power is not 12V, the buzzer sounds twice per second, and the red LED blinks repeatedly.



2. 부품 분해도 Part disassembly drawings

[N life slim 부품 분해도]

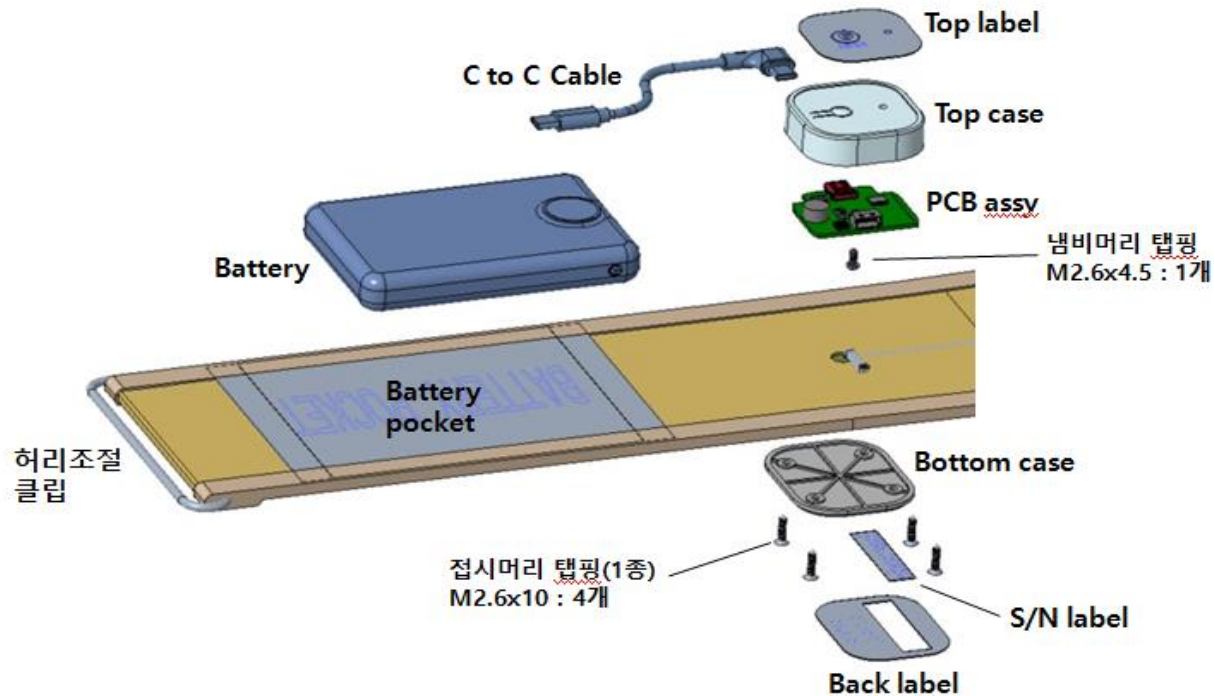



3. 제품 분해방법

Product Decomposition Method



① 백라벨을 제거 후
4개의 볼트를 제거해
TOP 과 BOTTOM
사출을 분리 한다.

After removing the
back label
Remove the four
bolts
TOP and BOTTOM
Remove .





② TOP 사출중앙에 고정 되어
있는 PCB 고정 볼트를 풀러낸
후 PCB 를 분리 한다.

Remove the PCB
fixing bolt fixed to
the center of the TOP
injection and remove
the PCB.




3. 제품 분해방법

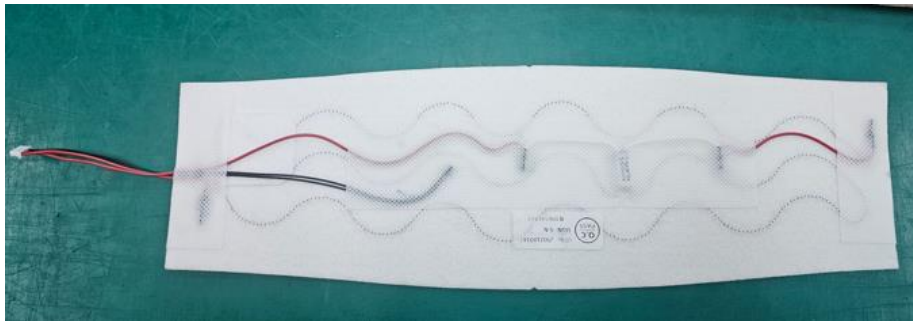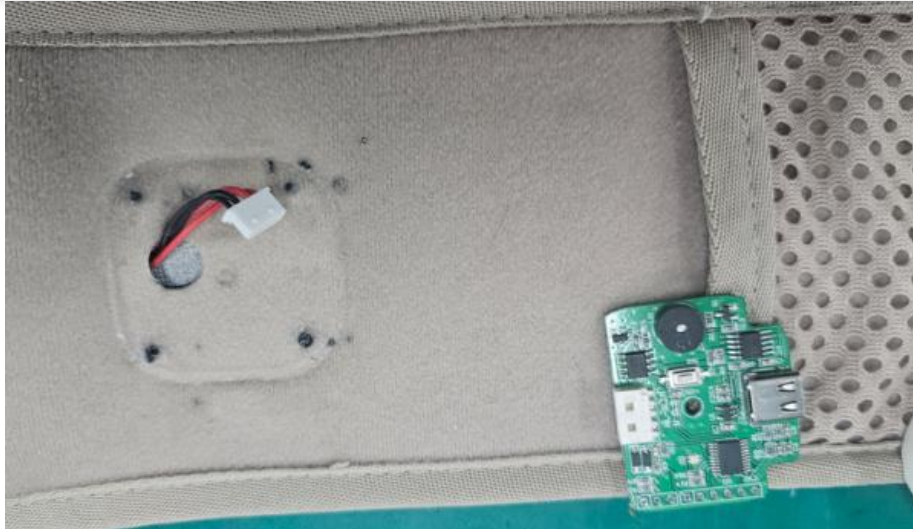

③ 고장난 PCB를 교체한후 분해의 역순으로 조립한다.
After replacing the broken PCB,
assemble it in reverse order of
disassembly.



4.회로 PCB

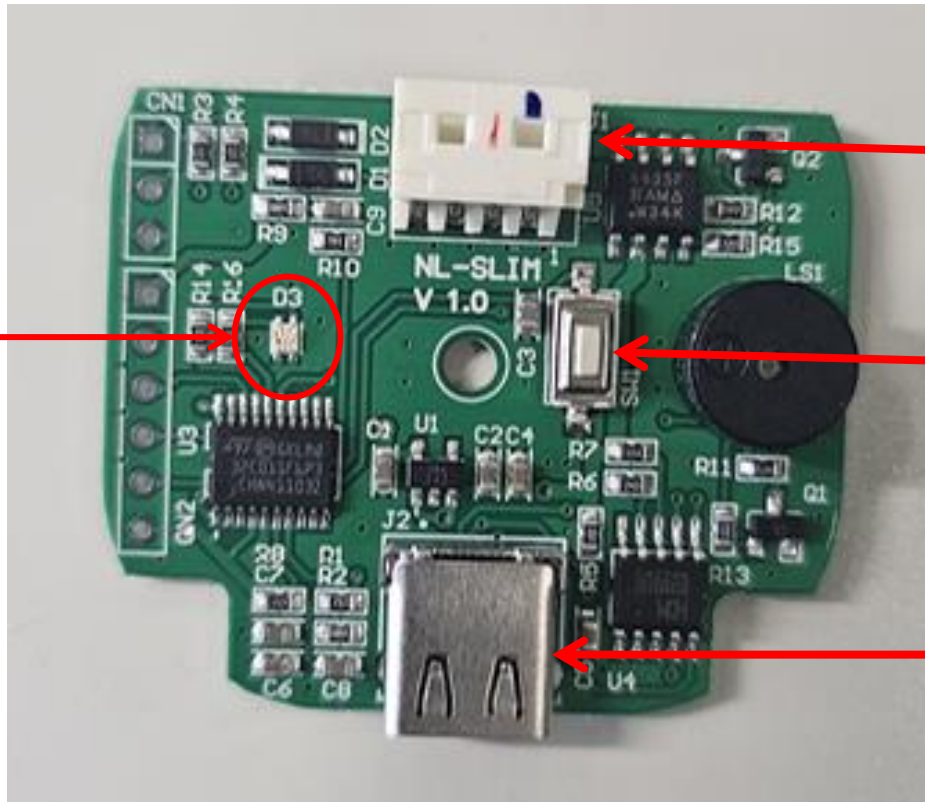

LED


발열체 연결부
Heating element connection

조작버튼
operating button

배터리 연결부
Battery connection



5. 열선, 온도센서 바이메탈 배치

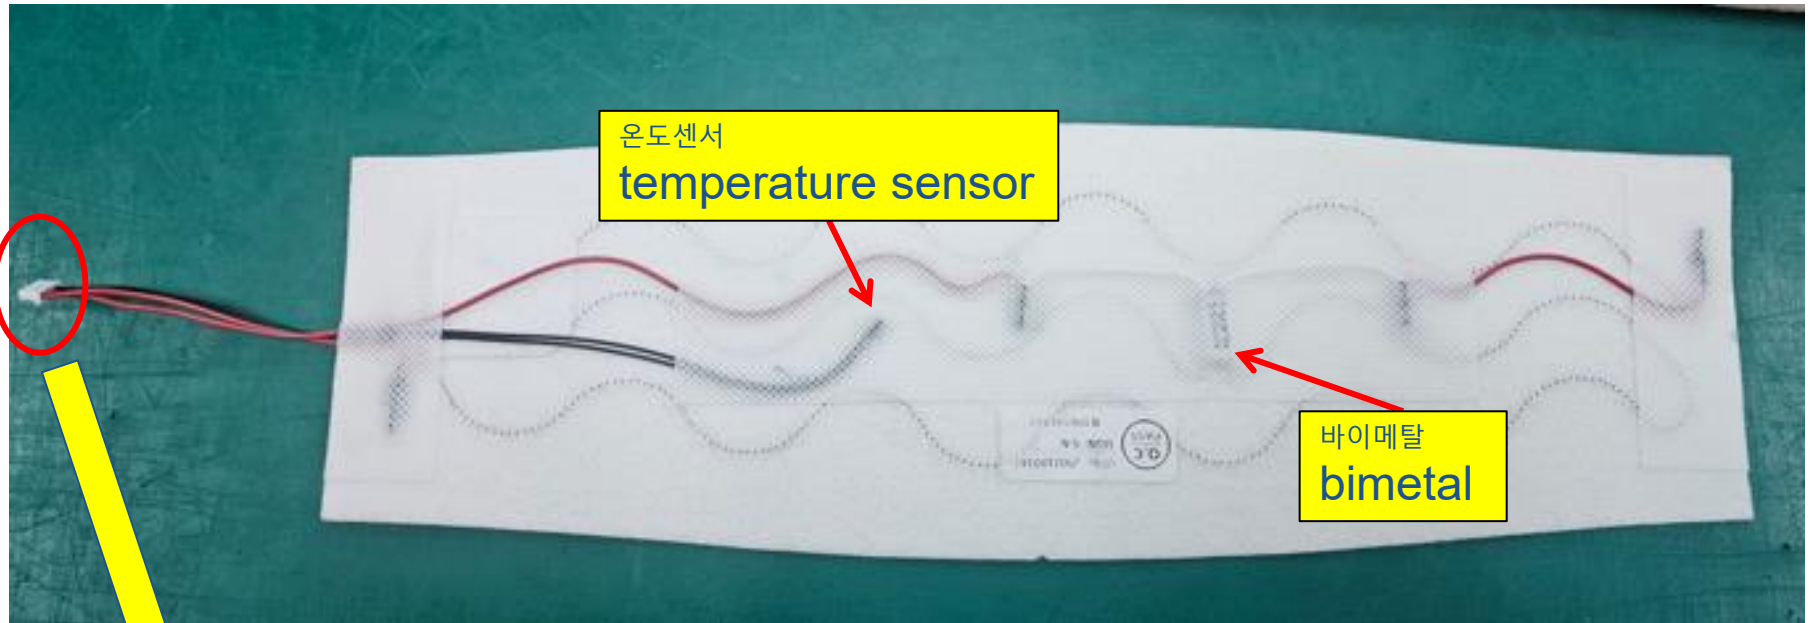

빨간색 2가닥 – 열선 : 10Ω 내외
검정색 2가닥 – sensor. $10K\Omega$ 내외
Red 2 strands – Heat wire: Around 10Ω
Black 2-stranded – sensor. Around $10k\Omega$



6. 열선 배치 도면

