













DRIVE SHAFT / PROPELLER SHAFT







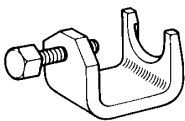






PREPARATION






SST

0230I-02






	09023-00101 Union Nut Wrench 10 mm	CARRIER SUB-ASSY, RR AXLE, LH
	09240-00020 Wire Gauge Set	FRONT DRIVE SHAFT(From July, 2003)
	09316-60011 Transmission & Transfer Bearing Replacer	FRONT AXLE HUB SUB-ASSY LH(From July, 2003)
	(09316-00011) Replacer Pipe	FRONT AXLE HUB SUB-ASSY LH(From July, 2003)
	(09316-00031) Replacer "B"	FRONT AXLE HUB SUB-ASSY LH(From July, 2003)
	09387-00020 Direct Clutch Wrench	FRONT DRIVE SHAFT(From July, 2003)
	09520-00031 Rear Axle Shaft Puller	FRONT AXLE HUB SUB-ASSY LH(From July, 2003)
	09520-01010 Drive Shaft Remover Attachment	FRONT DRIVE SHAFT(From July, 2003)
	09520-24010 Differential Side Gear Shaft Puller	FRONT DRIVE SHAFT(From July, 2003)
	(09520-32040) Shocker Set	FRONT DRIVE SHAFT(From July, 2003)
	09521-24010 Rear Axle Shaft Puller	FRONT DRIVE SHAFT(From July, 2003)
	09527-10011 Rear Axle Shaft Bearing Remover	FRONT DRIVE SHAFT(From July, 2003)

PREPARATION – DRIVE SHAFT / PROPELLER SHAFT

	09527-17011 Rear Axle Shaft Bearing Remover	FRONT AXLE HUB SUB-ASSY LH(From July, 2003)
	09527-30010 Rear Axle Shaft Bearing Remover	FRONT DRIVE SHAFT(From July, 2003)
	09608-16042 Front Hub Bearing Adjusting Tool	FRONT DRIVE SHAFT(From July, 2003)
	(09608-02021) Bolt & Nut	FRONT DRIVE SHAFT(From July, 2003)
	(09608-02041) Retainer	FRONT DRIVE SHAFT(From July, 2003)
	09608-32010 Steering Knuckle Oil Seal Replacer	FRONT AXLE HUB SUB-ASSY LH(From July, 2003)
	09628-10011 Ball Joint Puller	FRONT AXLE LH HUB BOLT REAR AXLE LH HUB BOLT
	09628-62011 Ball Joint Puller	FRONT DRIVE SHAFT(From July, 2003) FRONT AXLE HUB SUB-ASSY LH(From July, 2003)
	09726-40010 Lower Control Shaft Bearing Replacer	FRONT DRIVE SHAFT(From July, 2003)
	09930-00010 Drive Shaft Nut Chisel	FRONT DRIVE SHAFT(From July, 2003) FRONT AXLE HUB SUB-ASSY LH(From July, 2003)
	09950-00020 Bearing Remover	FRONT DRIVE SHAFT(From July, 2003) FRONT AXLE HUB SUB-ASSY LH(From July, 2003)
	09950-60010 Replacer Set	FRONT AXLE HUB SUB-ASSY LH(From July, 2003)
	(09951-00410) Replacer 41	FRONT AXLE HUB SUB-ASSY LH(From July, 2003)

	(09951-00600) Replacer 60	FRONT AXLE HUB SUB-ASSY LH(From July, 2003)
	09950-60020 Replacer Set No.2	FRONT AXLE HUB SUB-ASSY LH(From July, 2003)
	(09951-00790) Replacer 79	FRONT AXLE HUB SUB-ASSY LH(From July, 2003)
	09950-70010 Handle Set	FRONT AXLE HUB SUB-ASSY LH(From July, 2003)
	(09951-07100) Handle 100	FRONT AXLE HUB SUB-ASSY LH(From July, 2003)

Recommended Tools

	09011-12301 Socket Wrench 30 mm	FRONT AXLE HUB SUB-ASSY LH FRONT DRIVE SHAFT
	09040-00011 Hexagon Wrench Set	FRONT DRIVE SHAFT
	(09043-20060) Socket Hexagon Wrench 6	FRONT DRIVE SHAFT
	09905-00012 Snap Ring No.1 Expander	FRONT DRIVE SHAFT
	09905-00013 Snap Ring Pliers	FRONT AXLE HUB SUB-ASSY LH

Equipment

Torque wrench	
Dial indicator with magnetic base	
Alignment tester	
Toe-in gauge	
Angle gauge	

Lubricant

Item		Capacity
Front drive shaft		
2AZ-FE (MT)	Outboard joint grease	105 to 125 g (3.7 to 4.4 oz.)
2AZ-FE (AT)	Outboard joint grease	100 to 120 g (3.5 to 4.2 oz.)
1MZ-FE 3MZ-FE	Outboard joint grease	195 to 225 g (6.9 to 7.9 oz.)
2AZ-FE	Inboard joint grease	170 to 190 g (6.0 to 6.7 oz.)
1MZ-FE 3MZ-FE	Inboard joint grease	155 to 175 g (5.5 to 6.2 oz.)