



COWL TOP SIDE REINFORCEMENT (ASSY) REPLACEMENT

1. REMOVE COWL TOP SIDE REINFORCEMENT

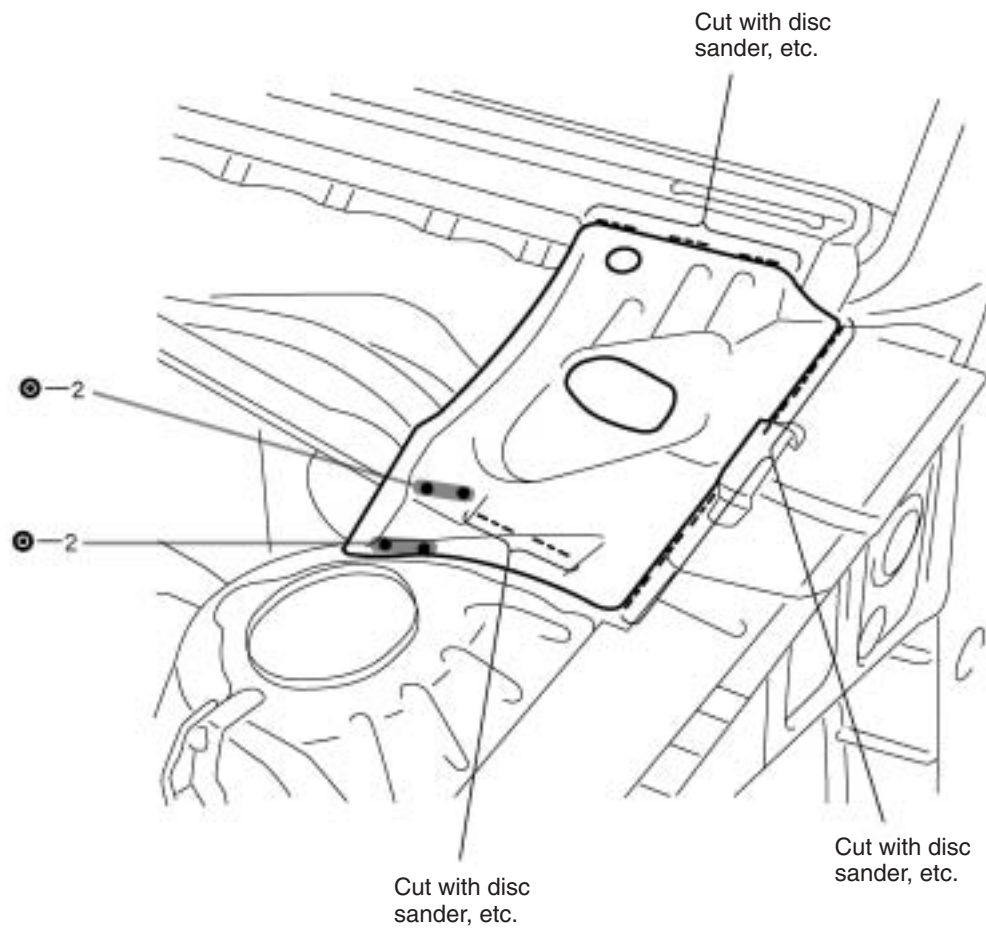

2. INSTALL COWL TOP SIDE REINFORCEMENT

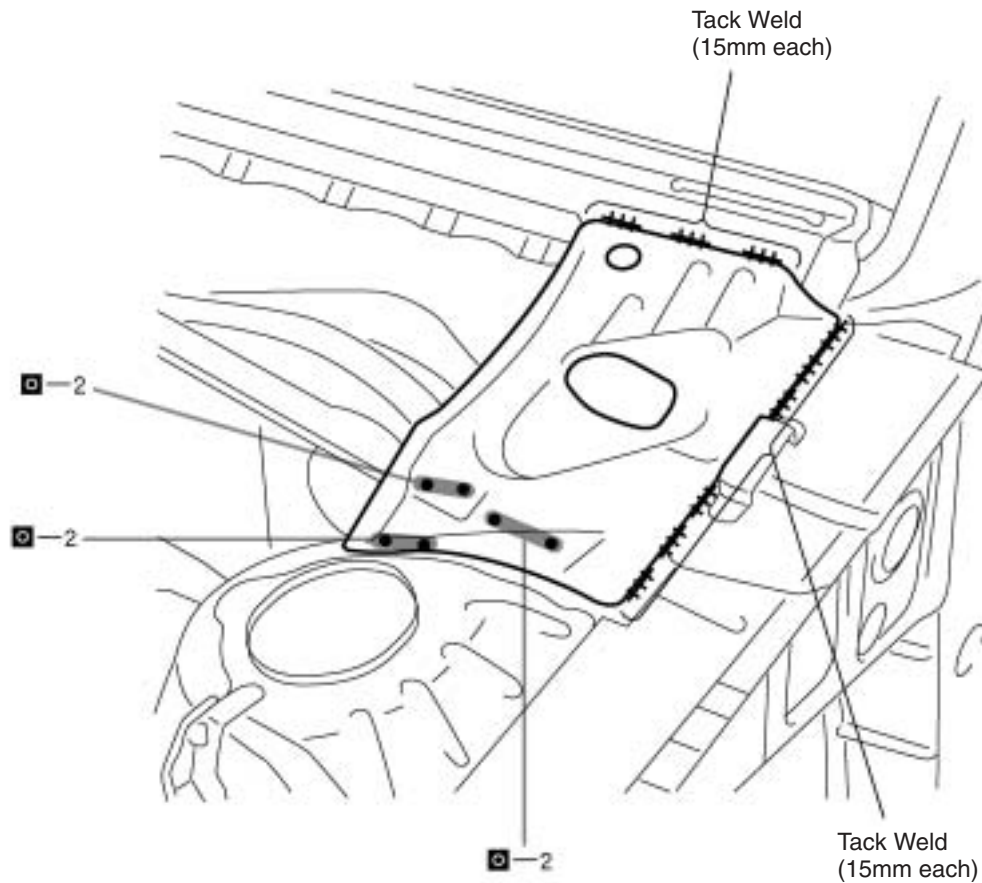

mm	in.
15	0.59

F12918A

3. APPLYING SEALER TO THE ENGINE COMPARTMENT ([See page PC-1](#))

4. APPLYING ANTI-RUST AGENT

- (a) After applying the top coat layer, apply the anit-rust agent to the inside of the necked section structural weld spots.